

Installation Manual 安装手册

CARBON FIBER AIR INTAKE TRIM




Front 前部

Carbon Fiber Air Intake Trim 碳纤维进气格栅

- ① After applying primer on the car body, remove the film of the double-sided tape slightly outwar(Or apply Adhesive sealant) .Once fitting is adjusted perfectly completely remove double-sided tape.
- ① 在车身上涂完底漆后,将双面胶带的薄膜稍微向外撕去(或涂上玻璃胶)。完美调整贴合后,完全撕掉双面胶带。

All Components 所有组件

Carbon Fiber Air Intake Trim
碳纤维进气格栅

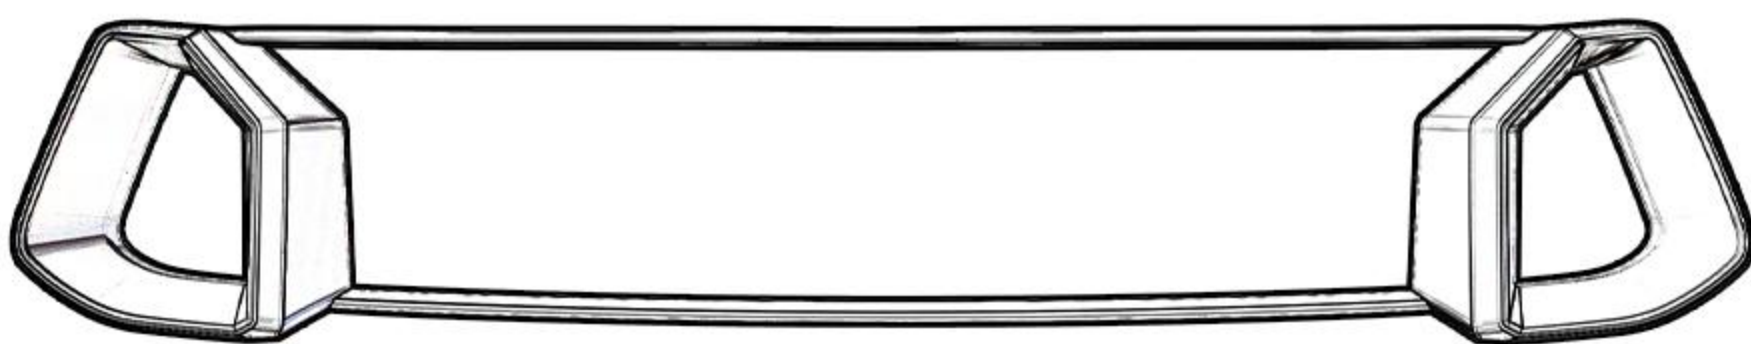

D-S tape/A-sealant
双面胶带/玻璃胶
3M™ VHB 4910 (10mm)


Install Points 安装点

*3M Double-Sided tape installation method

- ① Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact.② Use the included primer to paint the body (surface primer will scratch the paint).③ Tear off the 3M Double-Sided tape protective film and stick it on the car. ④ Install the fixing screws at the bottom.

*3M双面胶安装方式

- ① 使用酒精/丙酮清洁3M双面胶接触的车身面。② 使用随附的底漆对车身进行涂漆（表面底漆会刮伤车漆）。③ 撕开3M双面胶保护膜粘贴在车上。④ 底部安装固定螺丝。

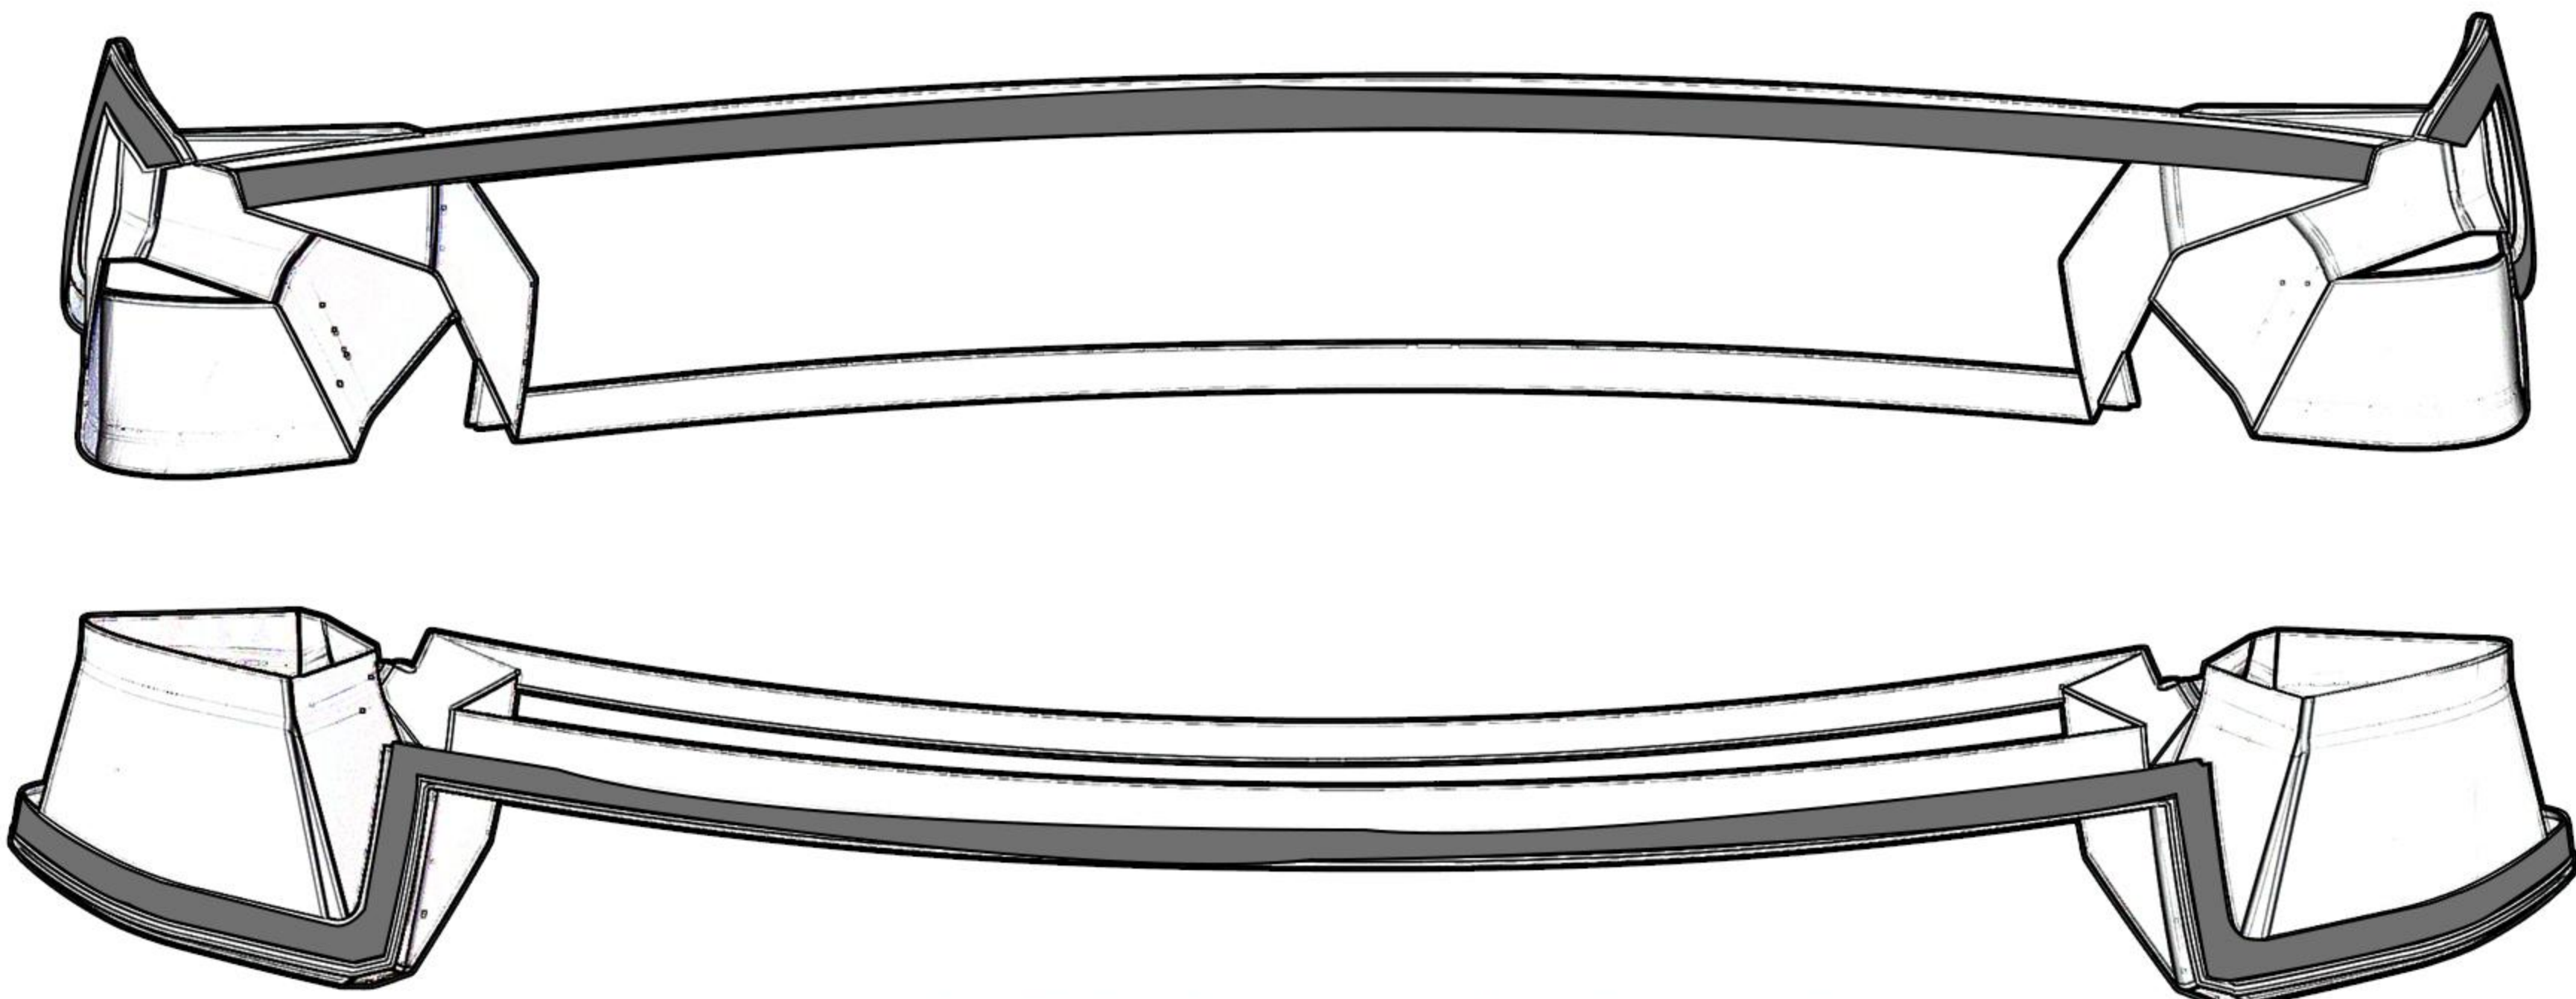

Double-Sided tape /Adhesive sealant

双面胶带/玻璃胶