


Audi Rs6 Avant(20-24)



Installation Manual

CARBON FIBER WIND KNIFE

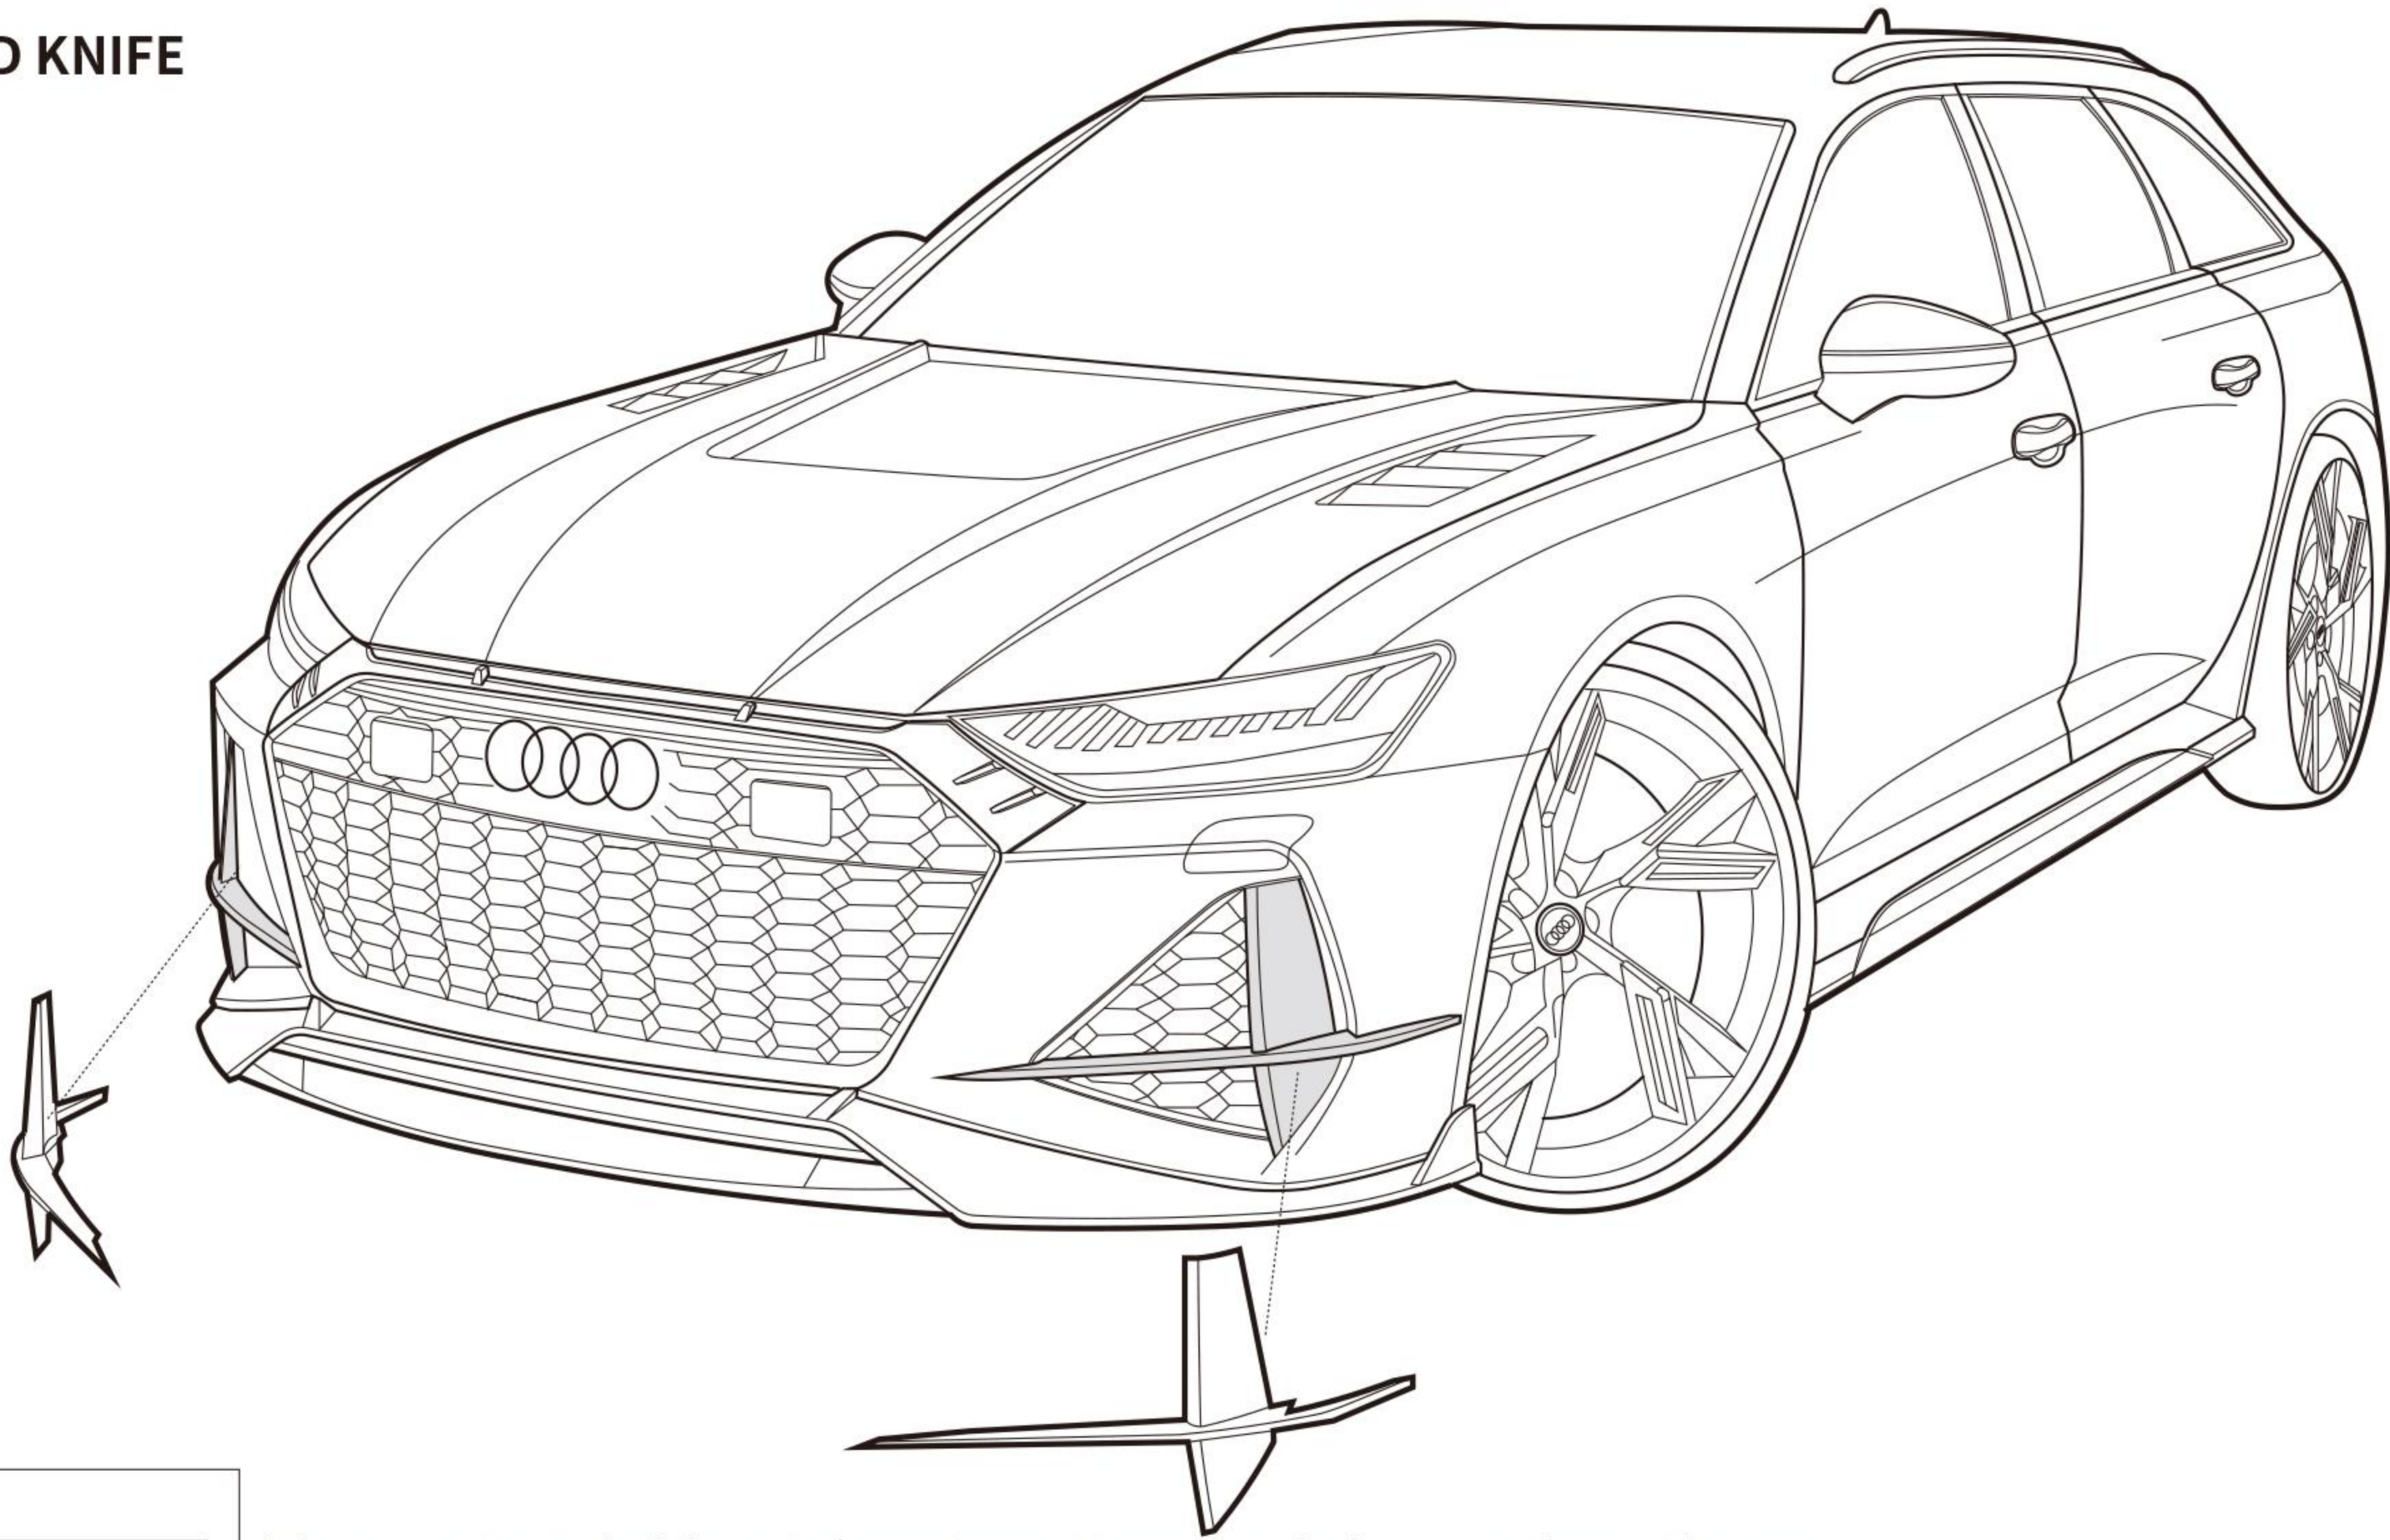

Paste method

Double-Sided tape Adhesive sealant

- *The two pasting methods have similar pasting positions and methods. You can choose either one.
1. Use a clean cloth, alcohol, etc. to clean the bottom to be pasted before pasting.
 2. Use the included primer to paint the body (the surface primer will scratch the paint) and the other one can be used to paste the parts.


Front

Carbon Fiber Front Wind Knife

① After applying primer on the car body, remove the film of the double-sided tape slightly outwar (Or apply Adhesive sealant) . Once fitting is adjusted perfectly completely remove double-sid-ed tape.

All Components


x2 Carbon Fiber Front wind knife(LH,RH)

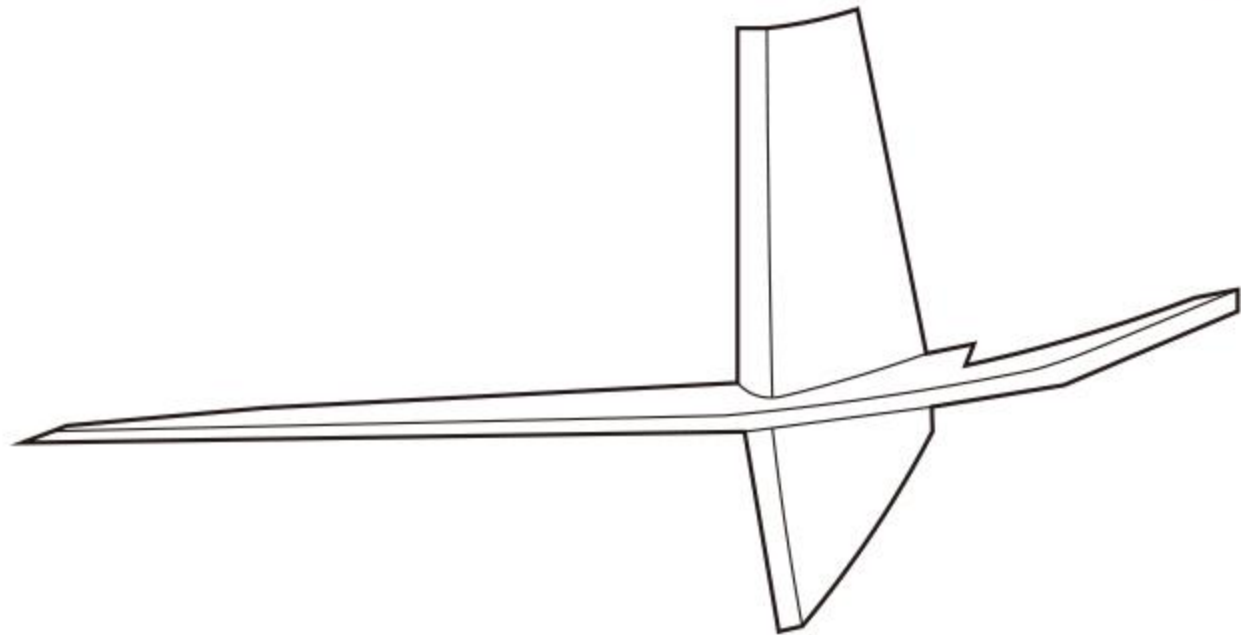

Double-Sided tape/Adhesive sealant

3M™ VHB 4910 (10mm)

Install Points

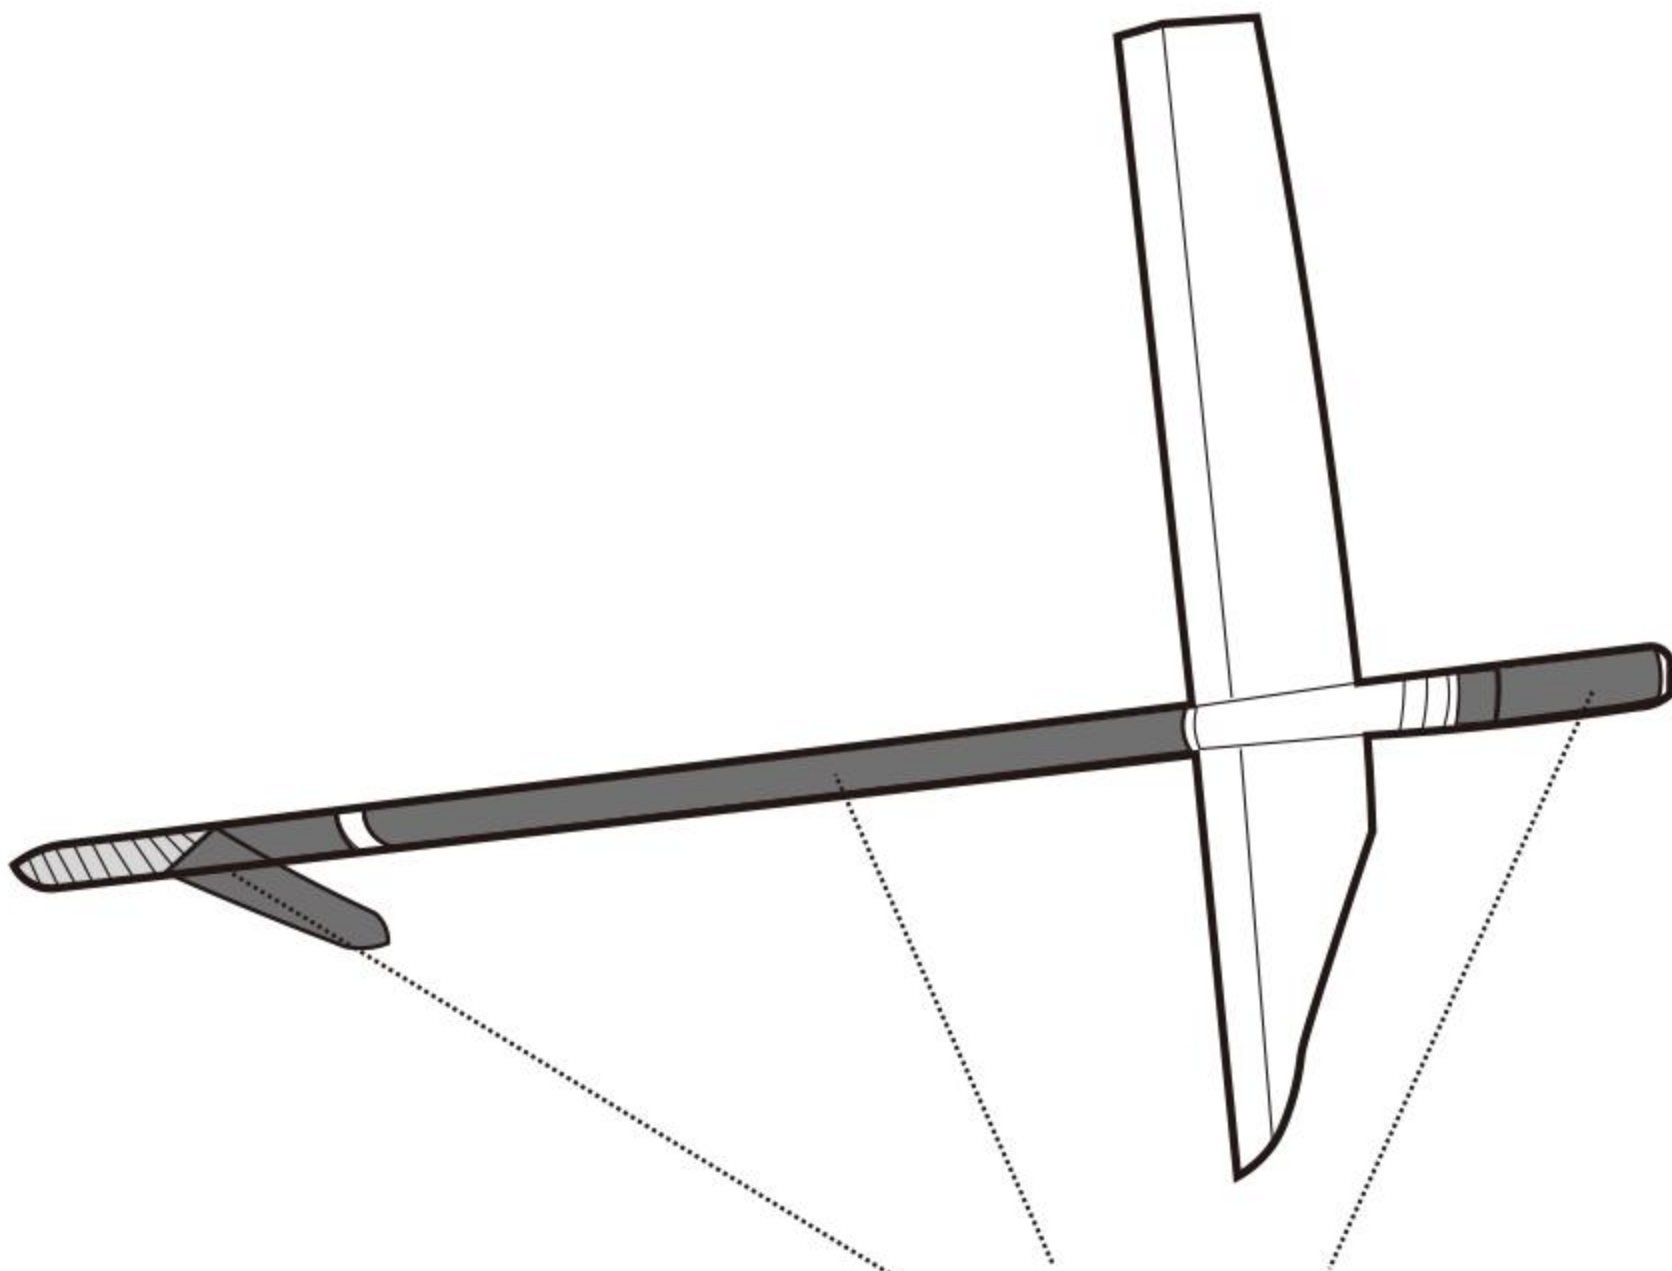

Double-Sided tape /Adhesive sealant

