


Installation Manual 安装手册

CARBON FIBER CANARDS

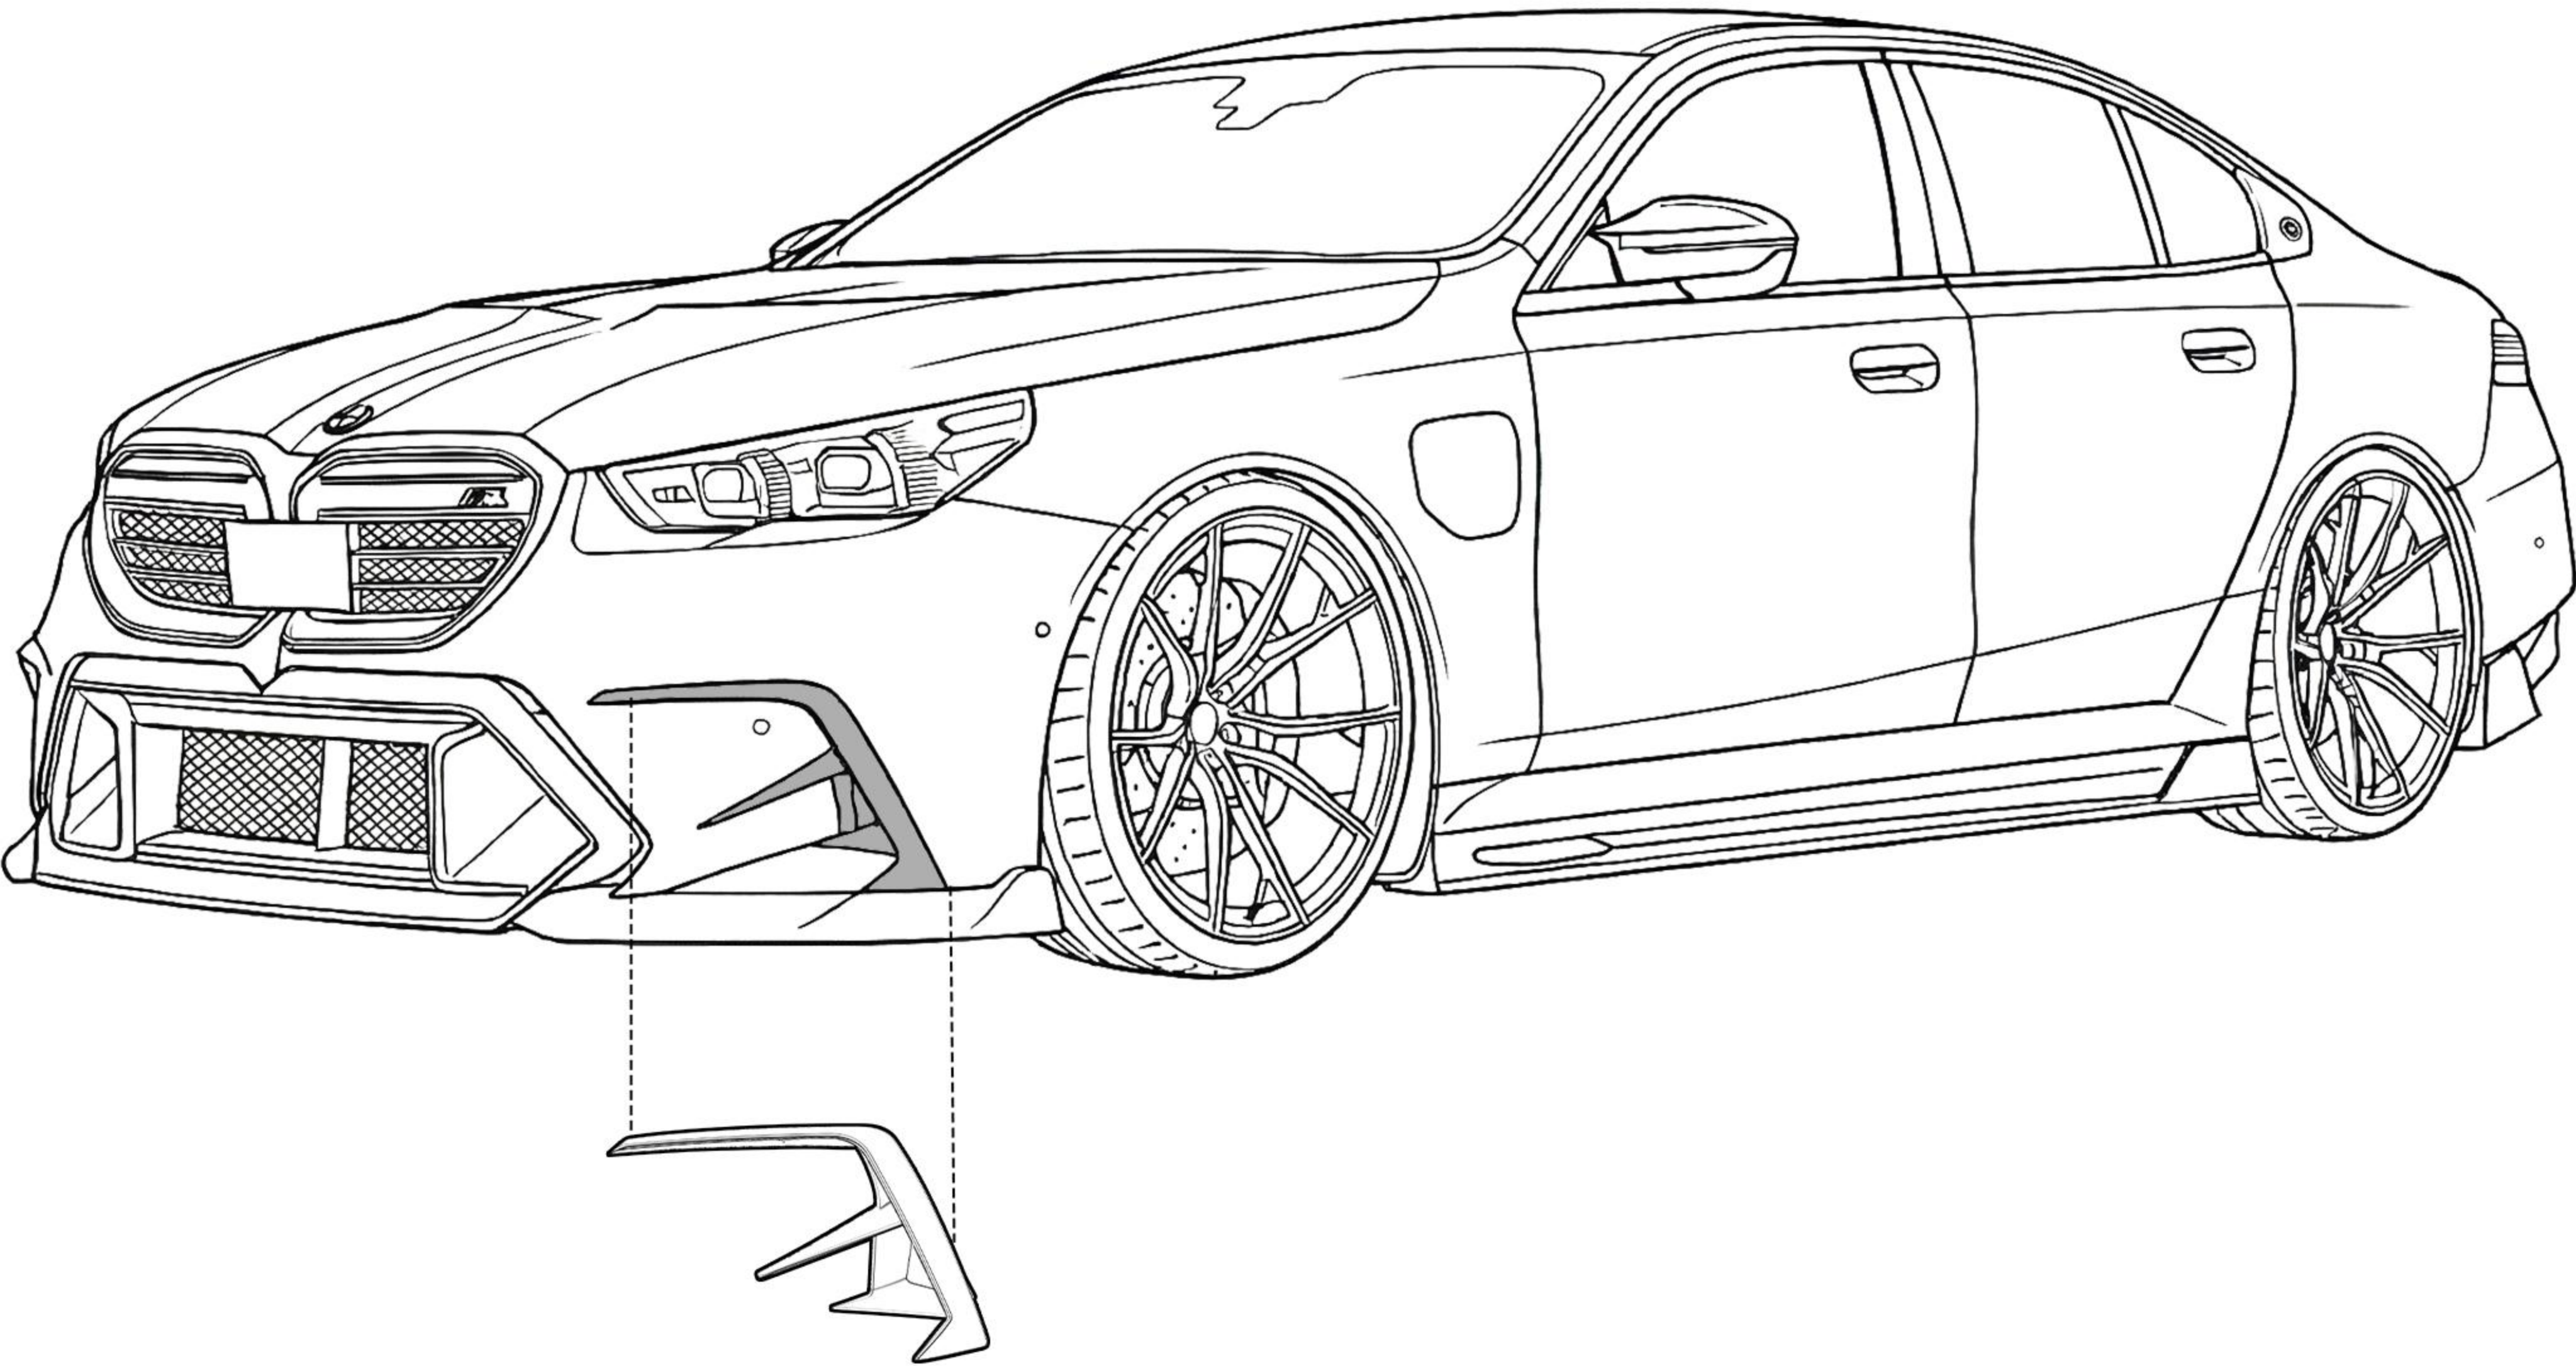


Front 前部

Carbon Fiber Canards 碳纤维侧风口

- ① After applying primer on the car body, remove the film of the double-sided tape slightly outwar(Or apply Adhesive sealant) .Once fitting is adjusted perfectly completely remove double-sided tape.
- ① 在车身上涂完底漆后,将双面胶带的薄膜稍微向外撕去(或涂上玻璃胶)。完美调整贴合后,完全撕掉双面胶带。

All Components 所有组件

Carbon Fiber Canards x2
碳纤维侧风口

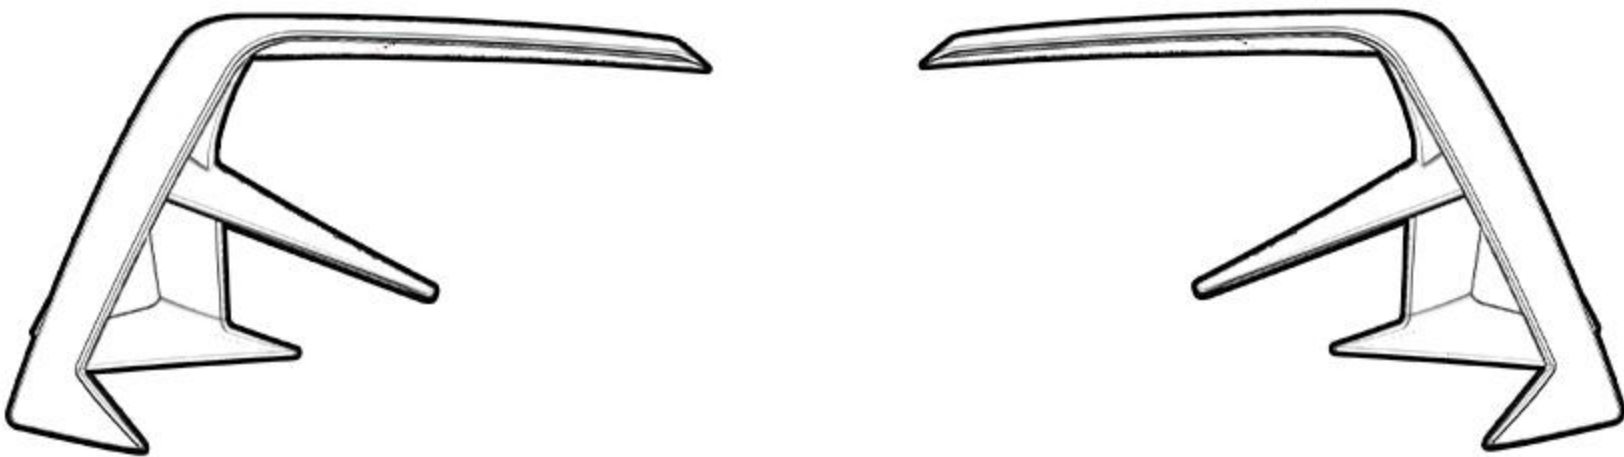

Install Points 安装点

