


Audi Rs6 Avant(20-24)



Installation Manual

CARBON FIBER HOOD DELFECTOR

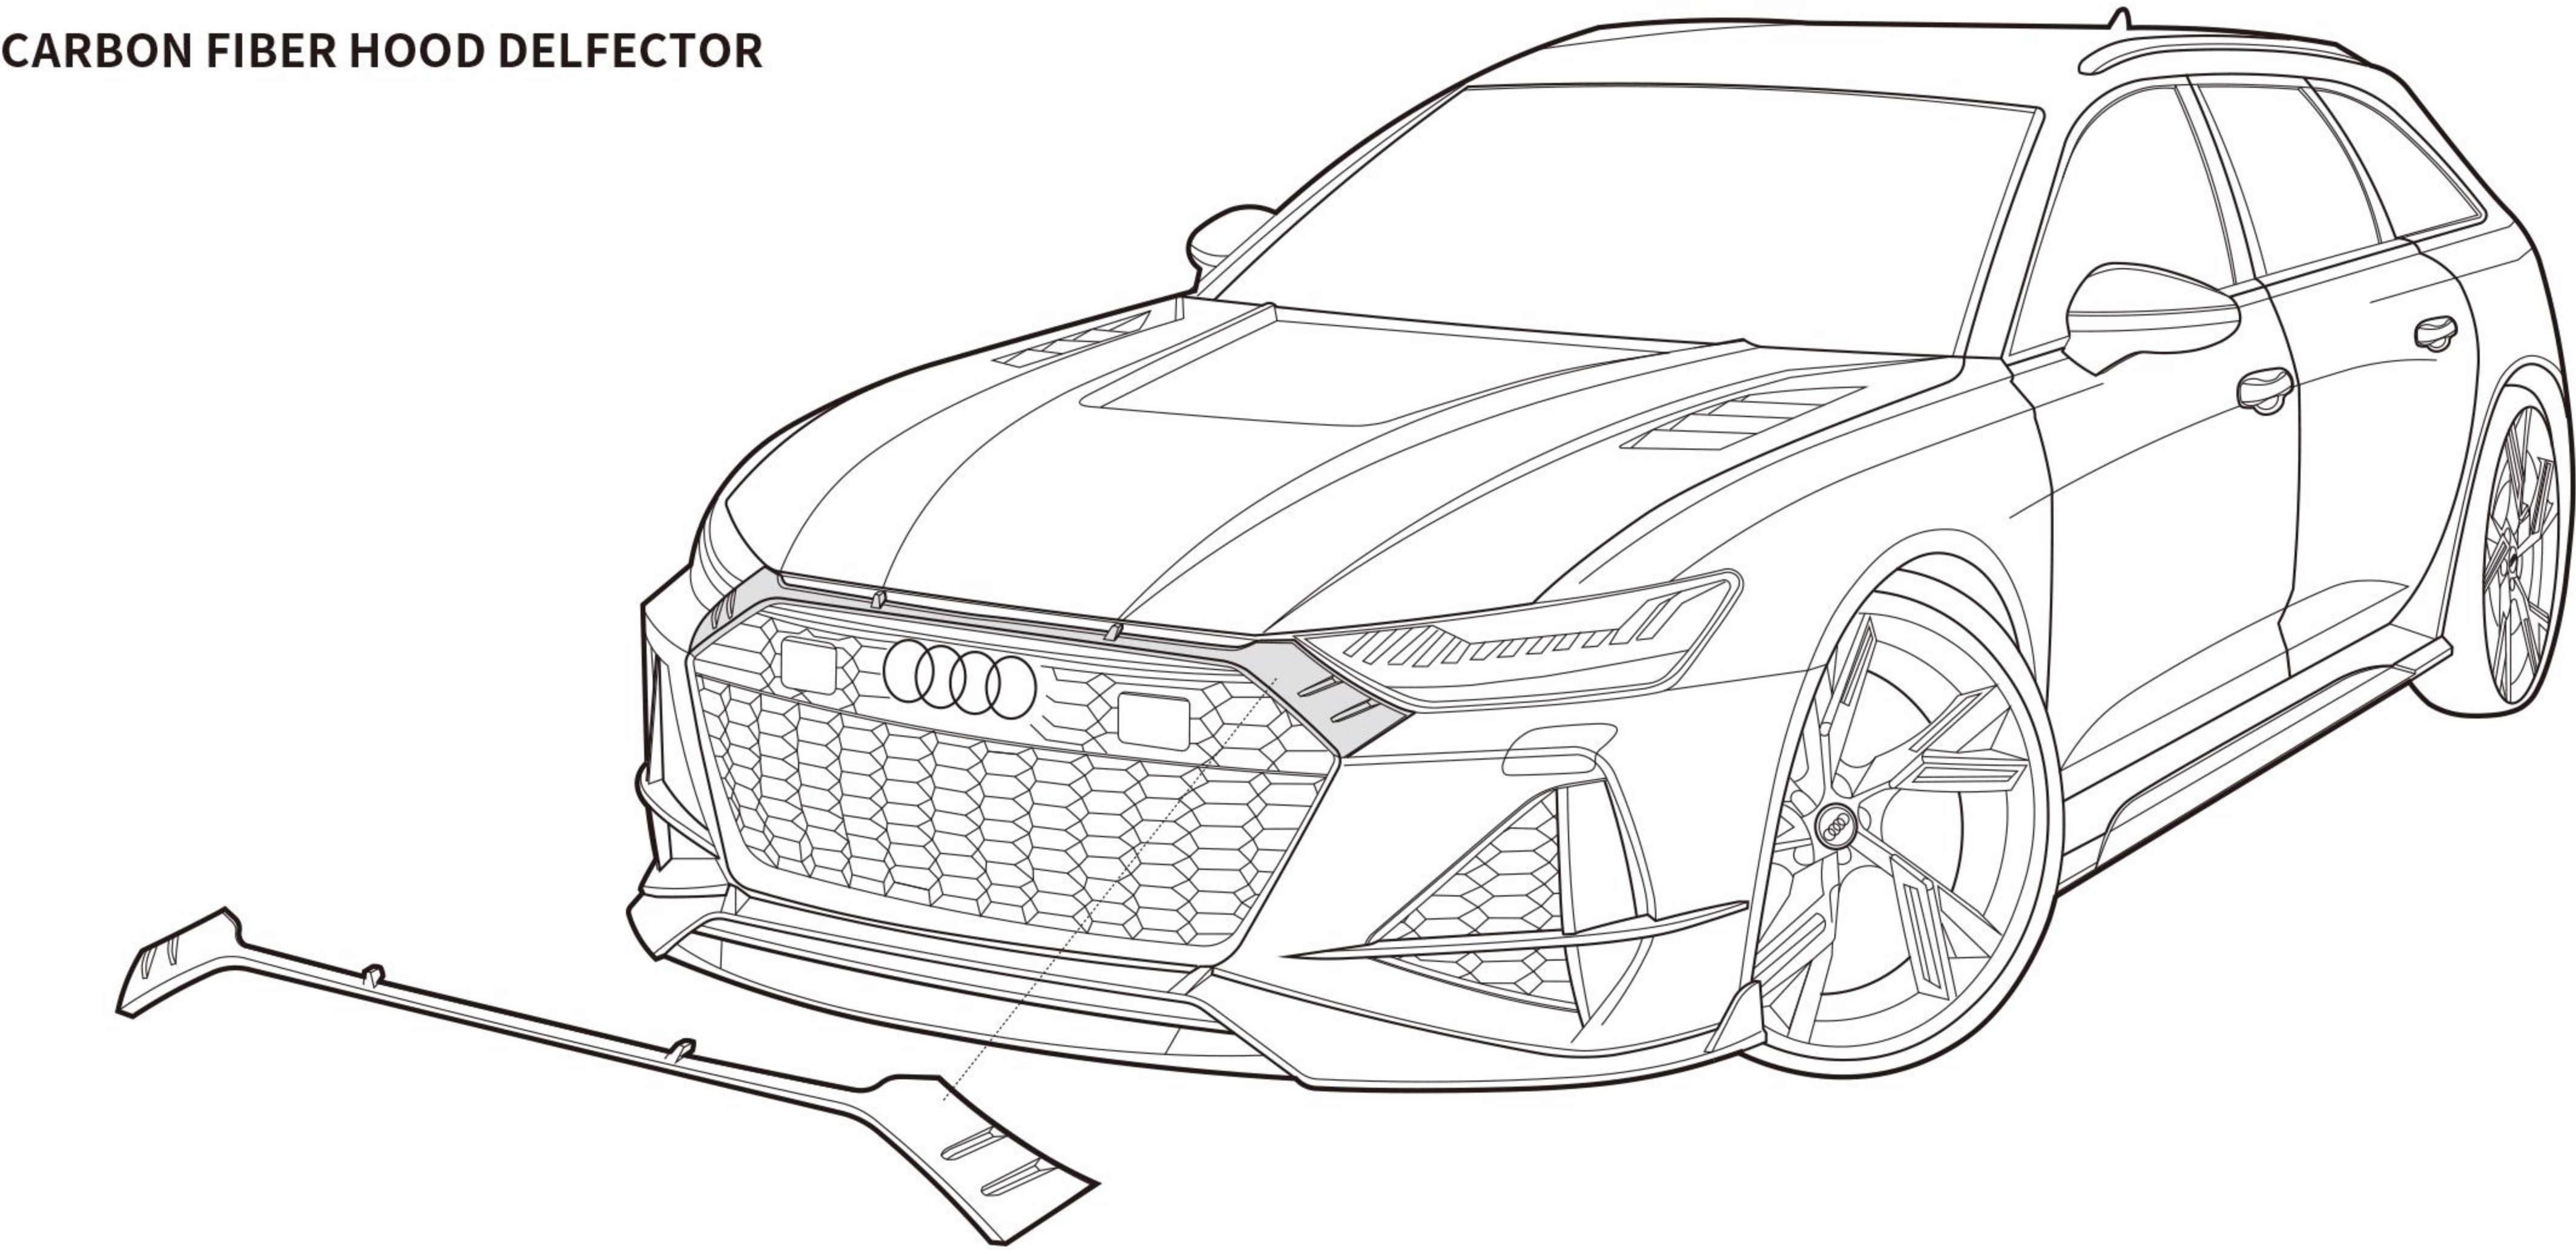

Paste method 粘贴方式

Double-Sided tape Adhesive sealant

*The two pasting methods have similar pasting positions and methods. You can choose either one.

1. Use a clean cloth, alcohol, etc. to clean the bottom to be pasted before pasting.

2. Use the included primer to paint the body (the surface primer will scratch the paint) and the other one can be used to paste the parts.


Front

Carbon Fiber Hood Delfector

① After applying primer on the car body, remove the film of the double-sided tape slightly outwar (Or apply Adhesive sealant) . Once fitting is adjusted perfectly completely remove double-sid-ed tape.

All Components

x1 Carbon Fiber Hood Delfector

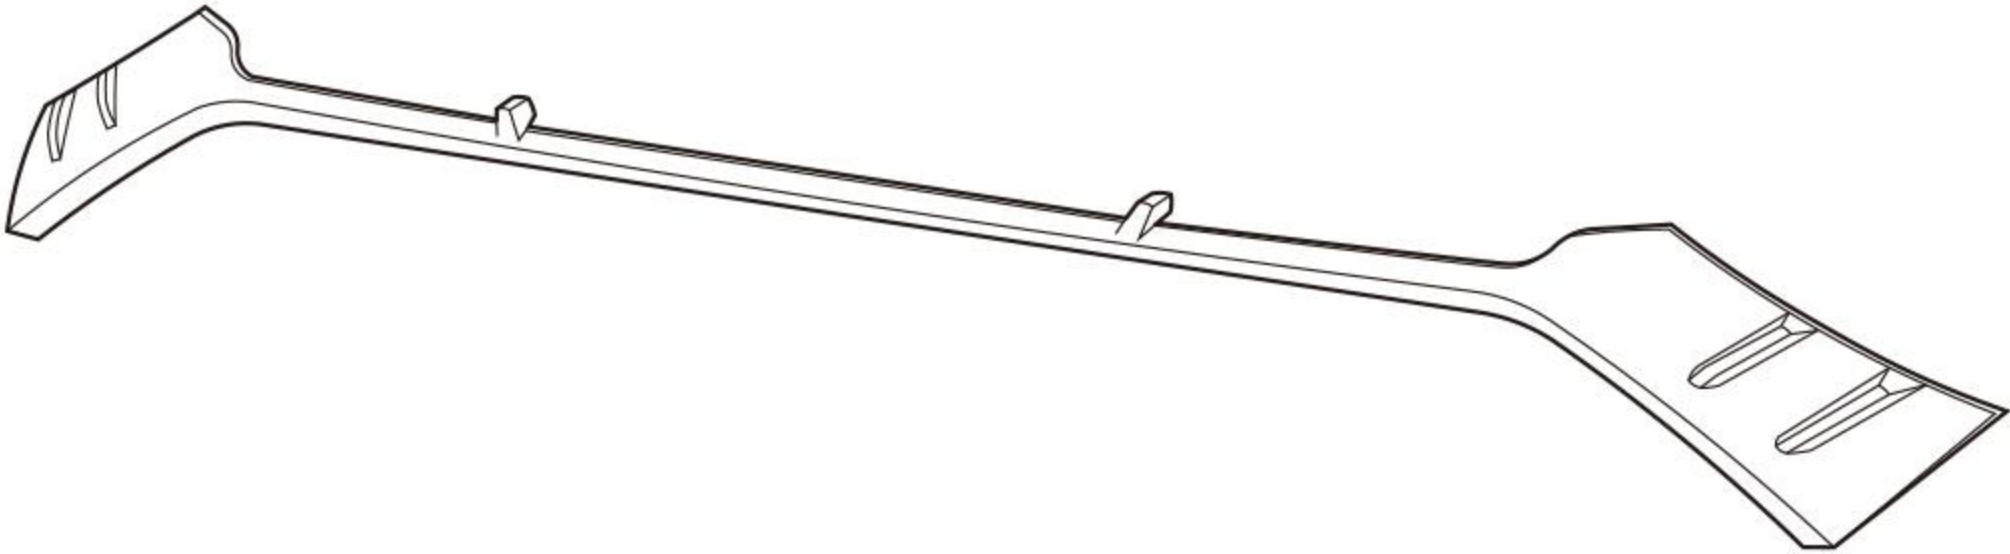

Double-Sided tape/Adhesive sealant

3M™ VHB 4910 (10mm)

Install Points

