



Installation Manual

CARBON FIBER FRONT LIP

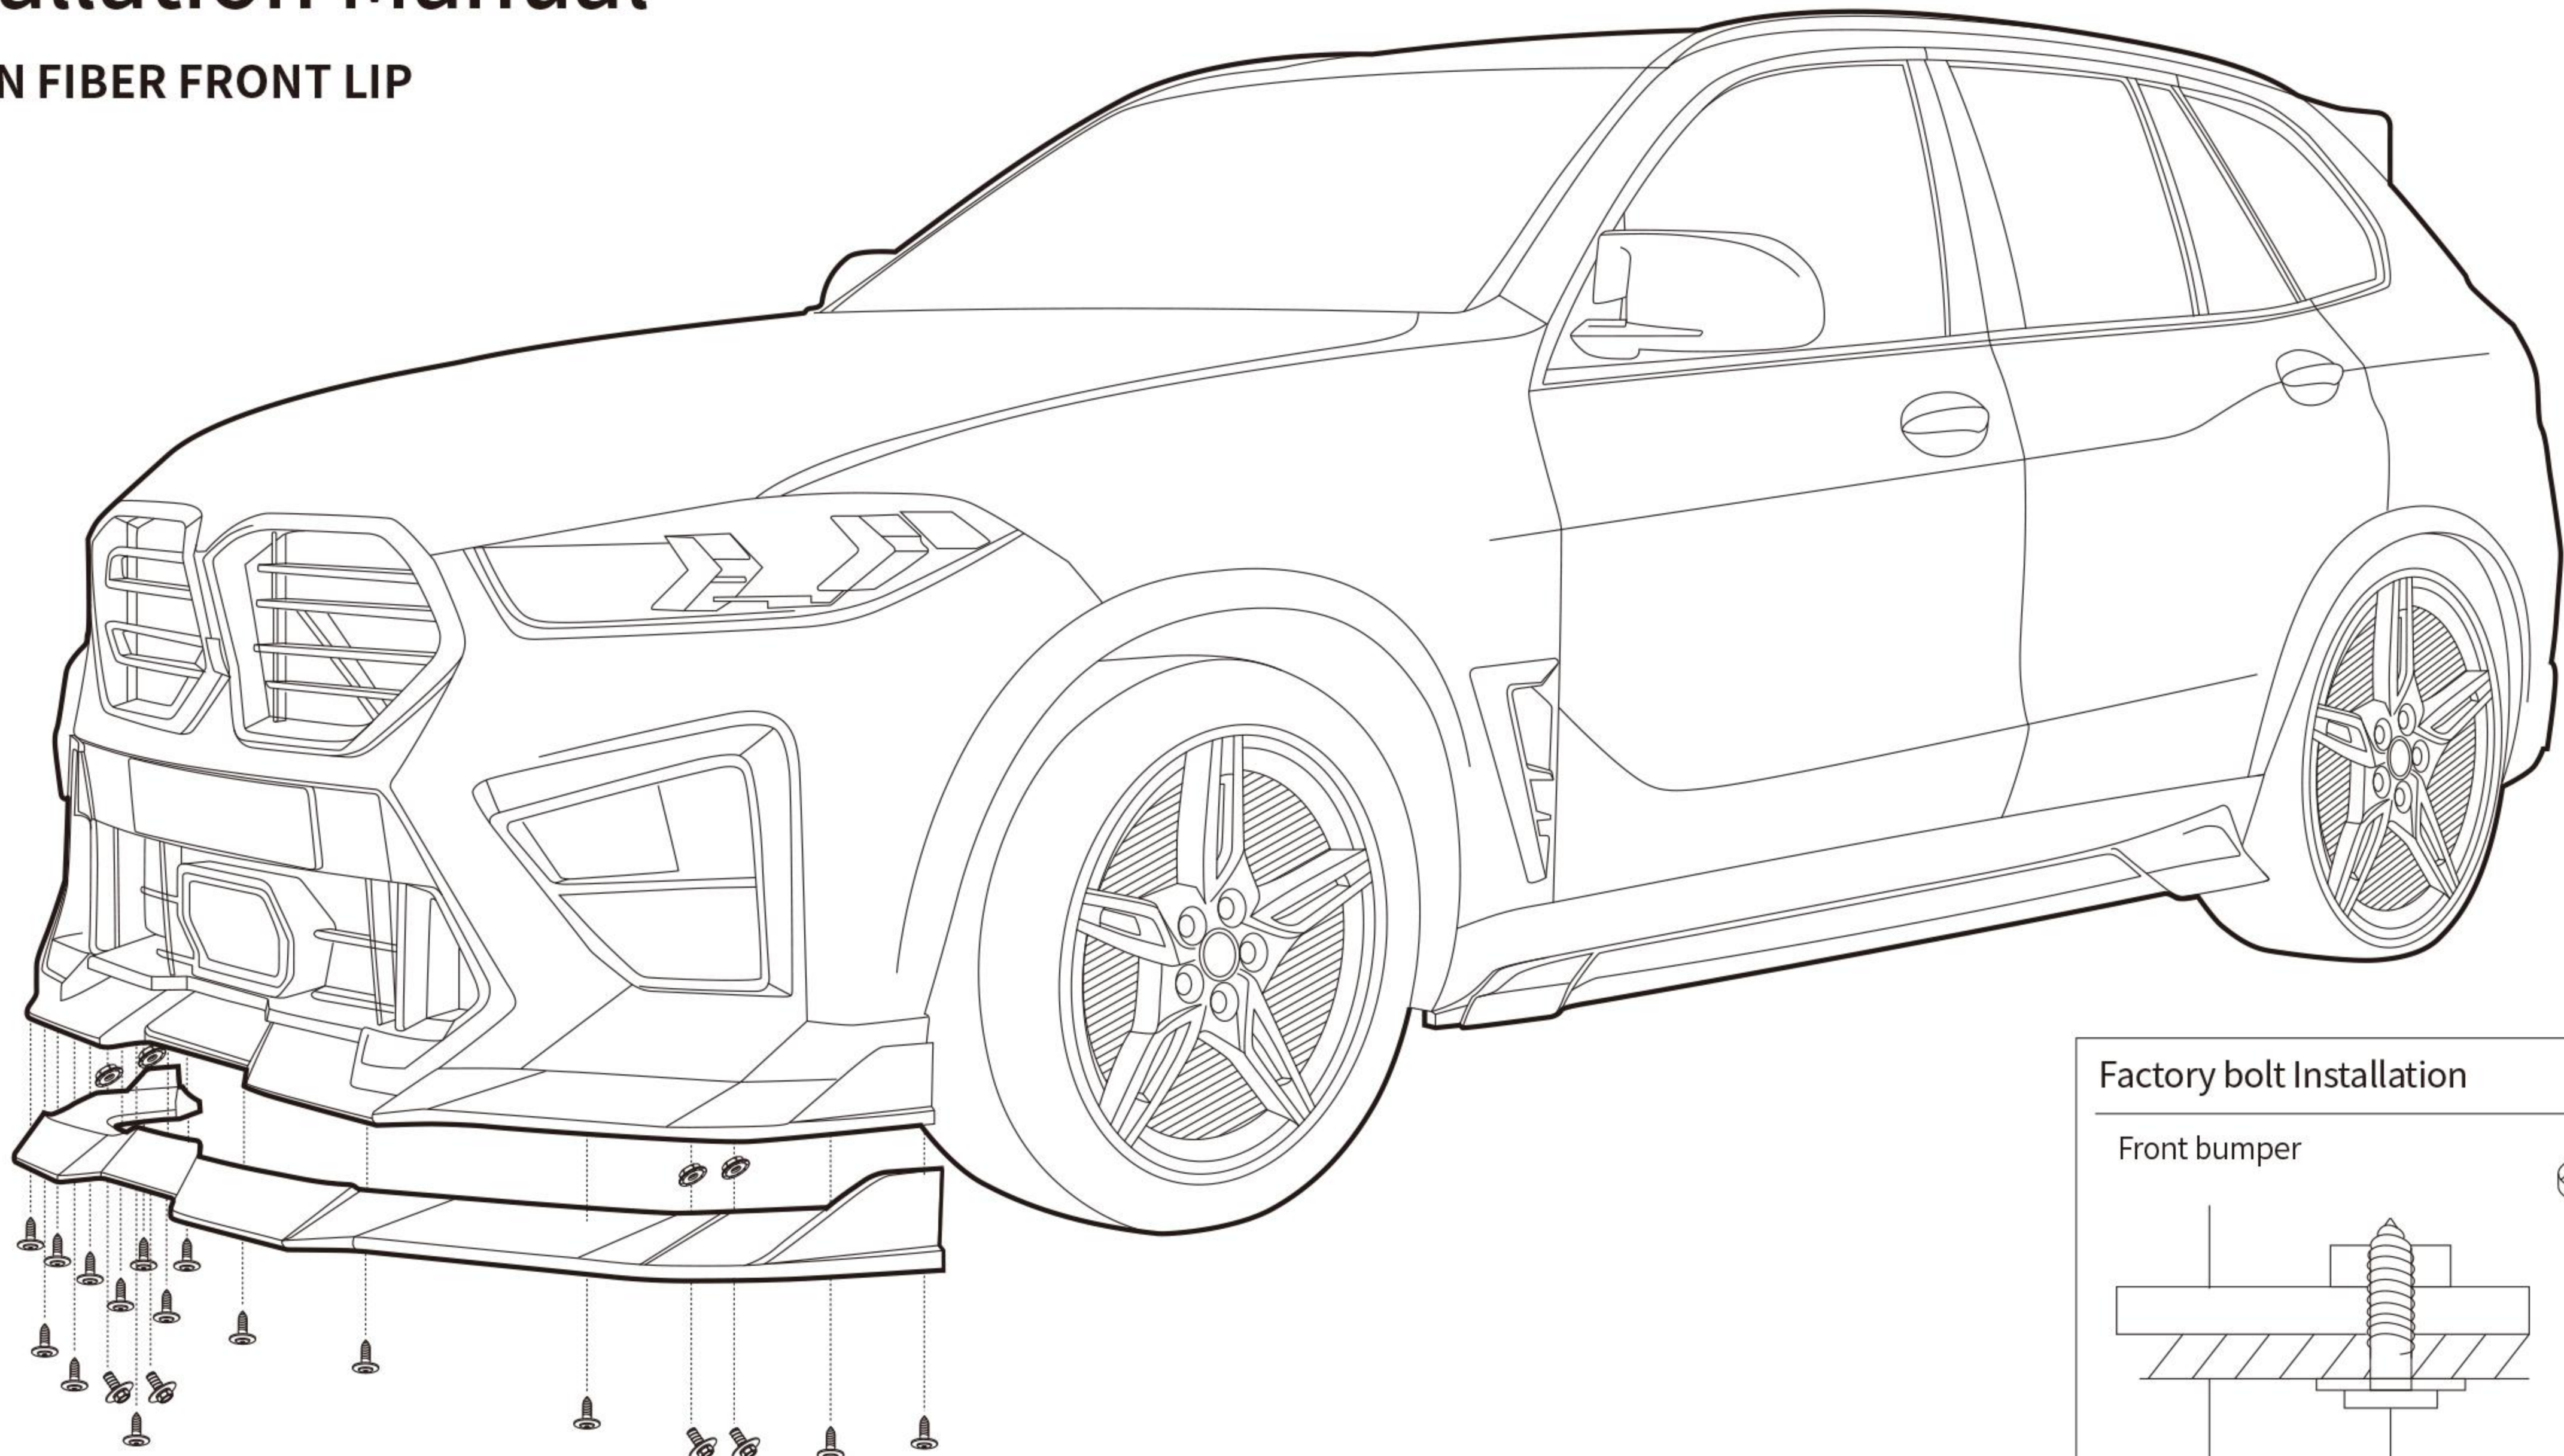

Factory bolt Installation

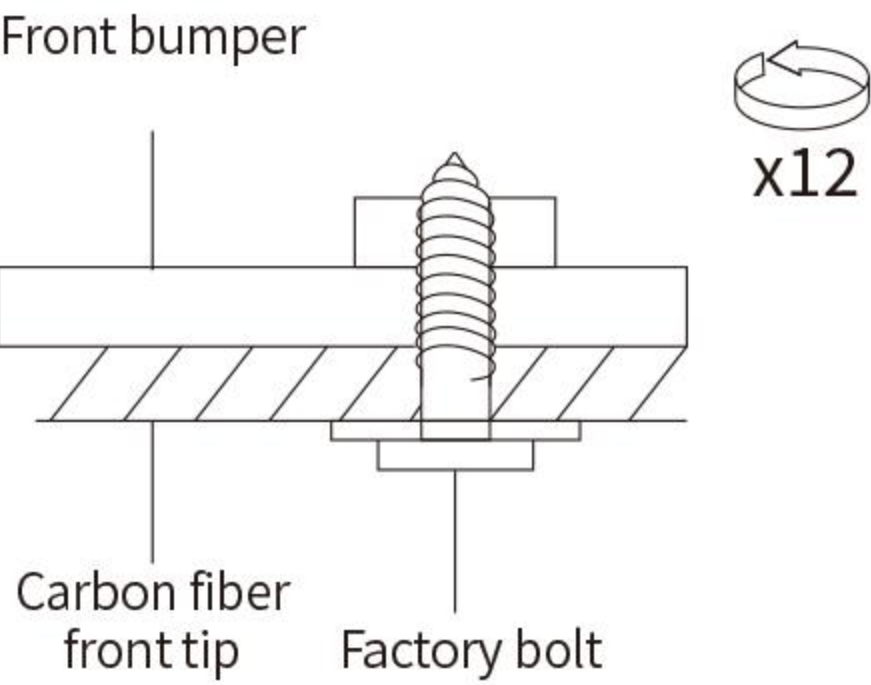


Front

Carbon Fiber Front Lip

- ① Remove Genuine Bolts left and right symmetry.
- ② After determining the most suitable fitting position for left and right symmetry, use a Genuine bolts to temporarily fasten it in place.
- ③ Set all components with the power tool according to the designated Install points.

All Components

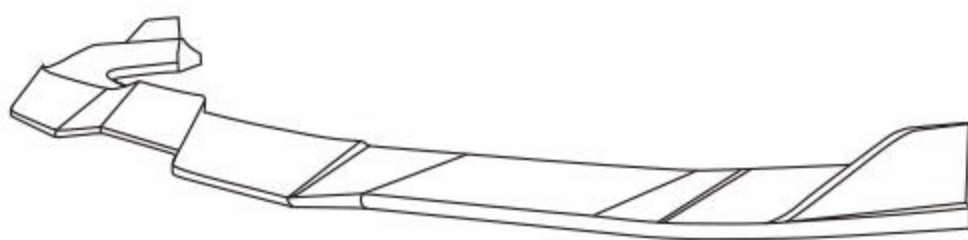

Carbon Fiber Front Lip

x1

				
x12	x4	x4	x4	x2
Original carscrews	Self-Tappingscrew M5X12	Bolt M6	Nut M6	D-S tape 3M™ VHB 4910 (10mm)

Install Points

- *3M Double-Sided tape installation method**
- ① Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact.
 - ② Use the included primer to paint the body (surface primer will scratch the paint).
 - ③ Tear off the 3M Double-Sided tape protective film and stick it on the car.
 - ④ Install the fixing screws at the bottom.

