
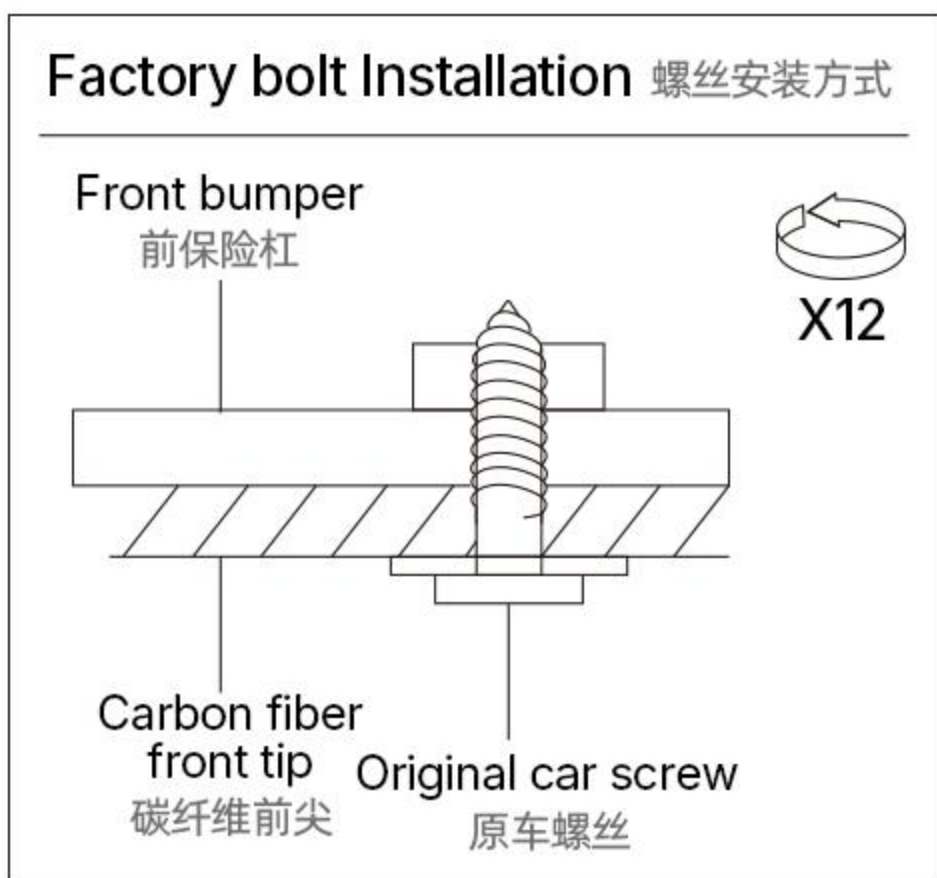


Installation Manual 安装手册

CARBON FIBER FRONT LIP

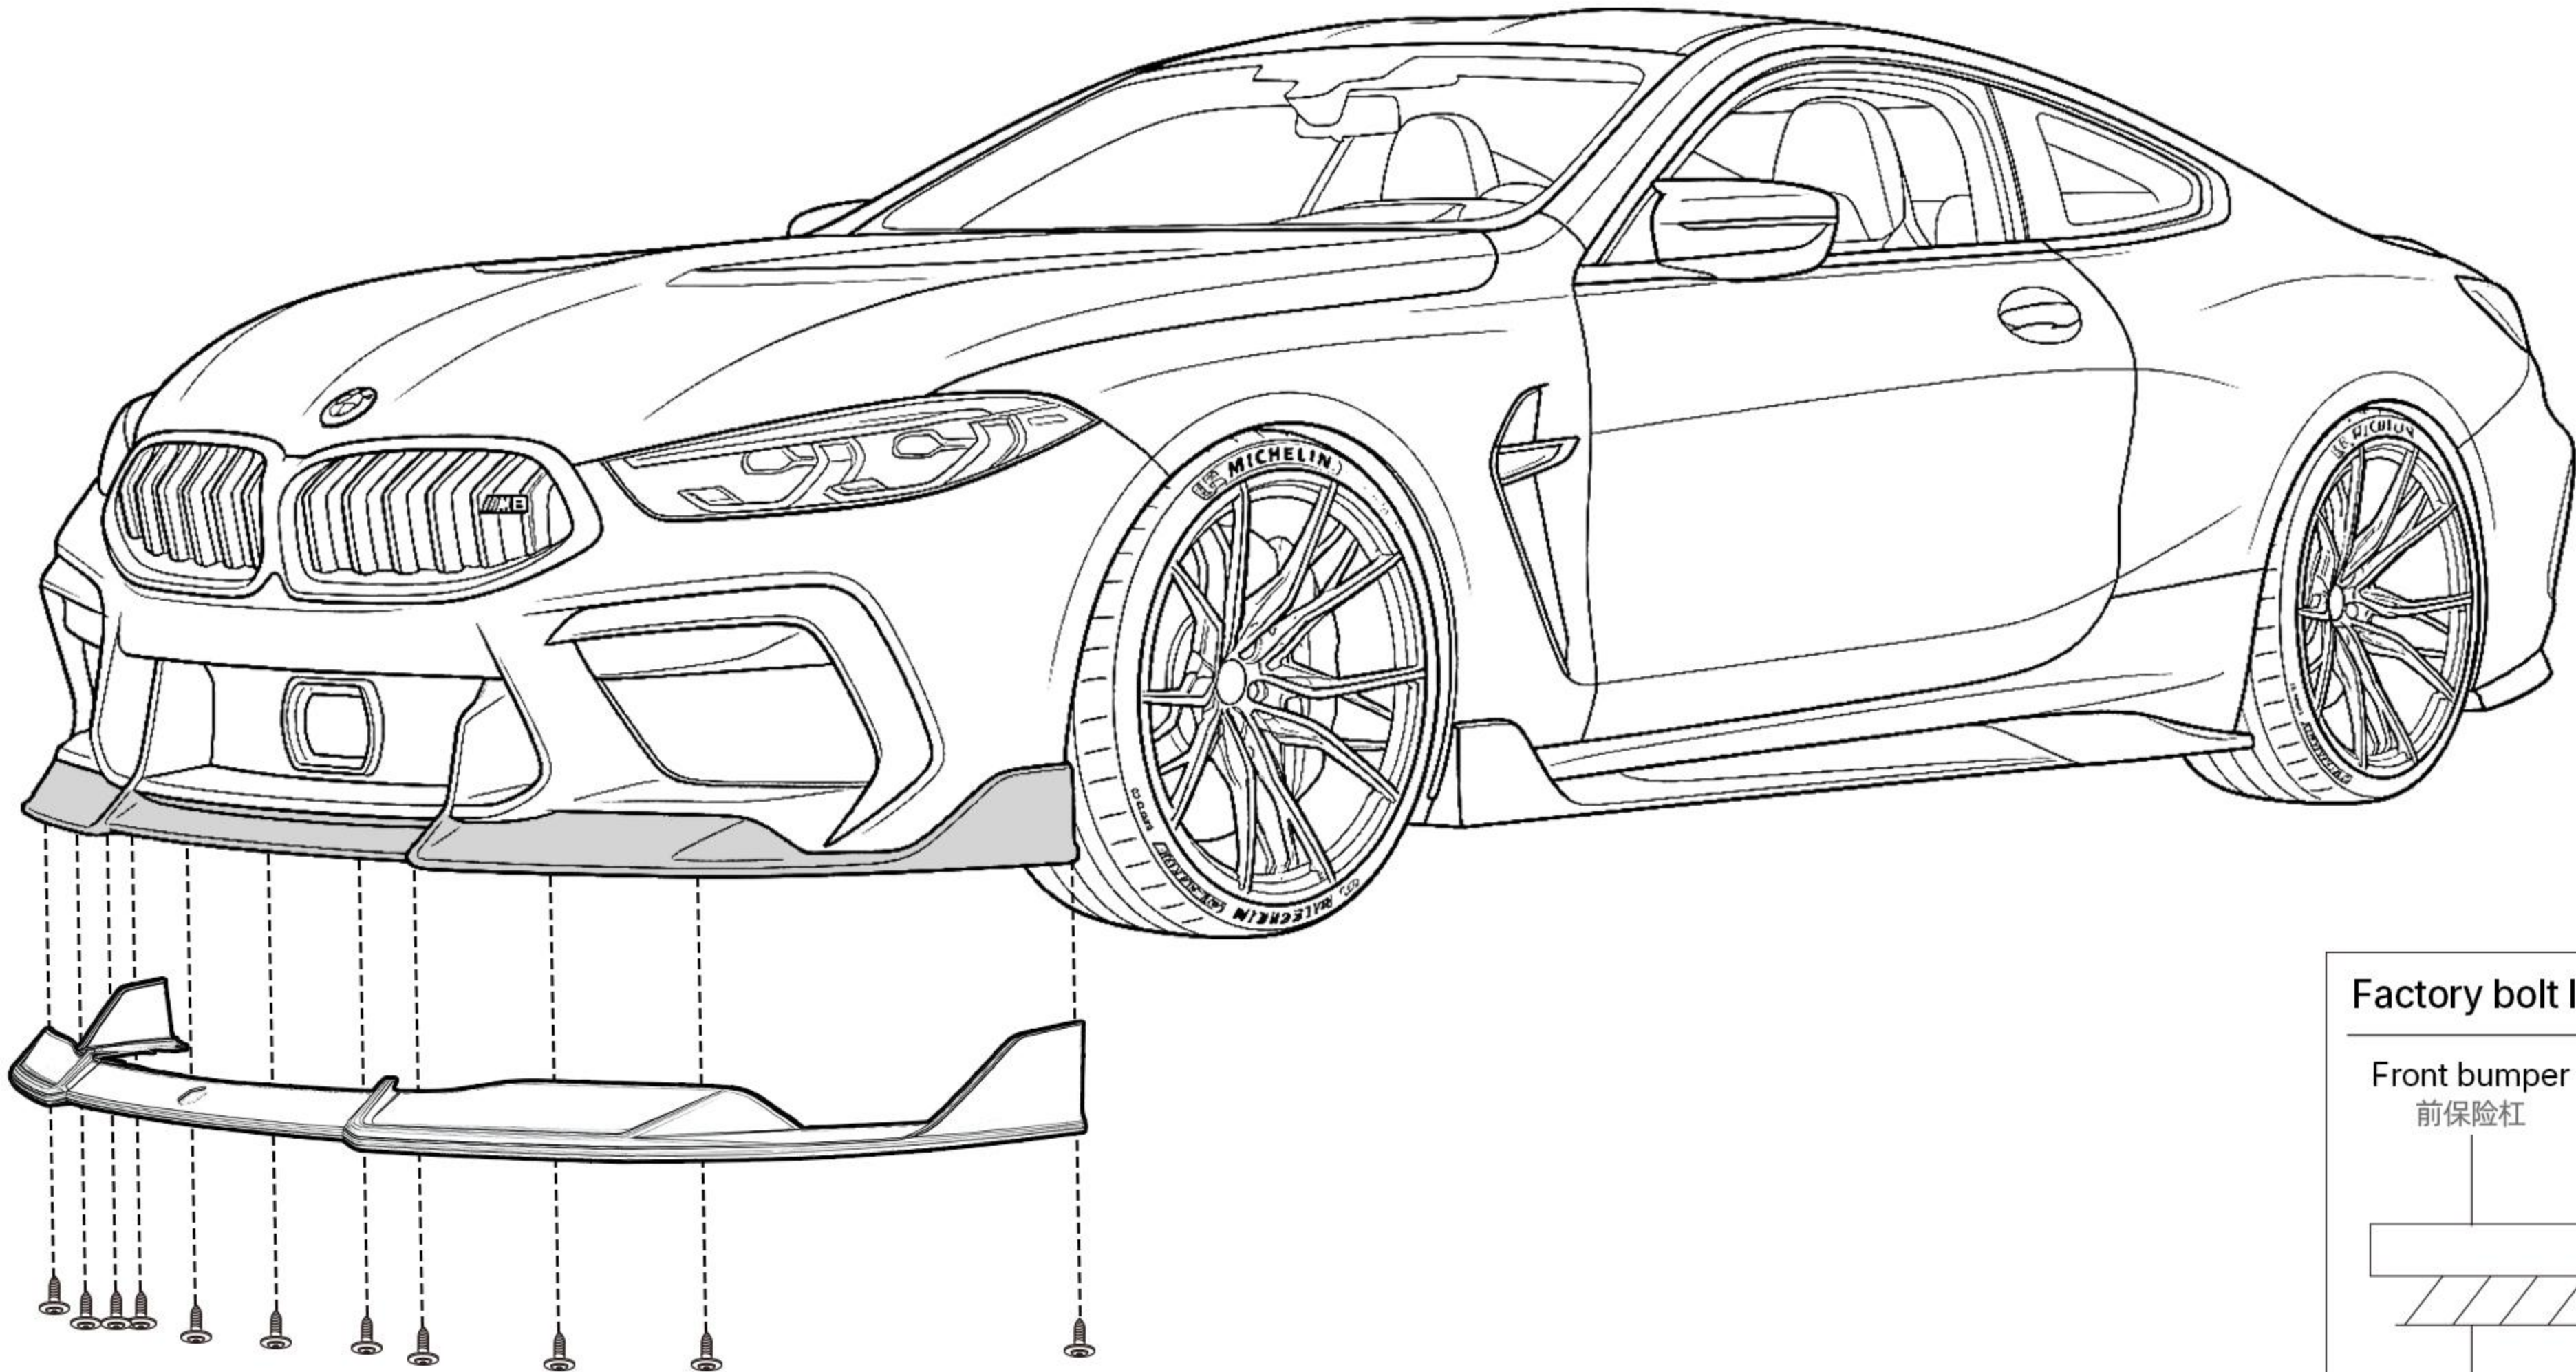


Front 前部

Carbon Fiber Front Lip 碳纤维前唇

- ① Remove Genuine Bolts left and right symmetry.
 - ② After determining the most suitable fitting position for left and rightsymmetry, use a Genuine bolts to temporarily fasten it in place.
 - ③ Set all components with the power tool according to thedesigned Install points.
- ① 拆下位于左右安装点的原始螺栓。
 - ② 设置左右对称的最合适的安装位置后,使用螺栓进行点焊。
 - ③ 根据指定的安装点,使用电动工具紧固螺栓、螺母和专用件。

All Components 所有组件

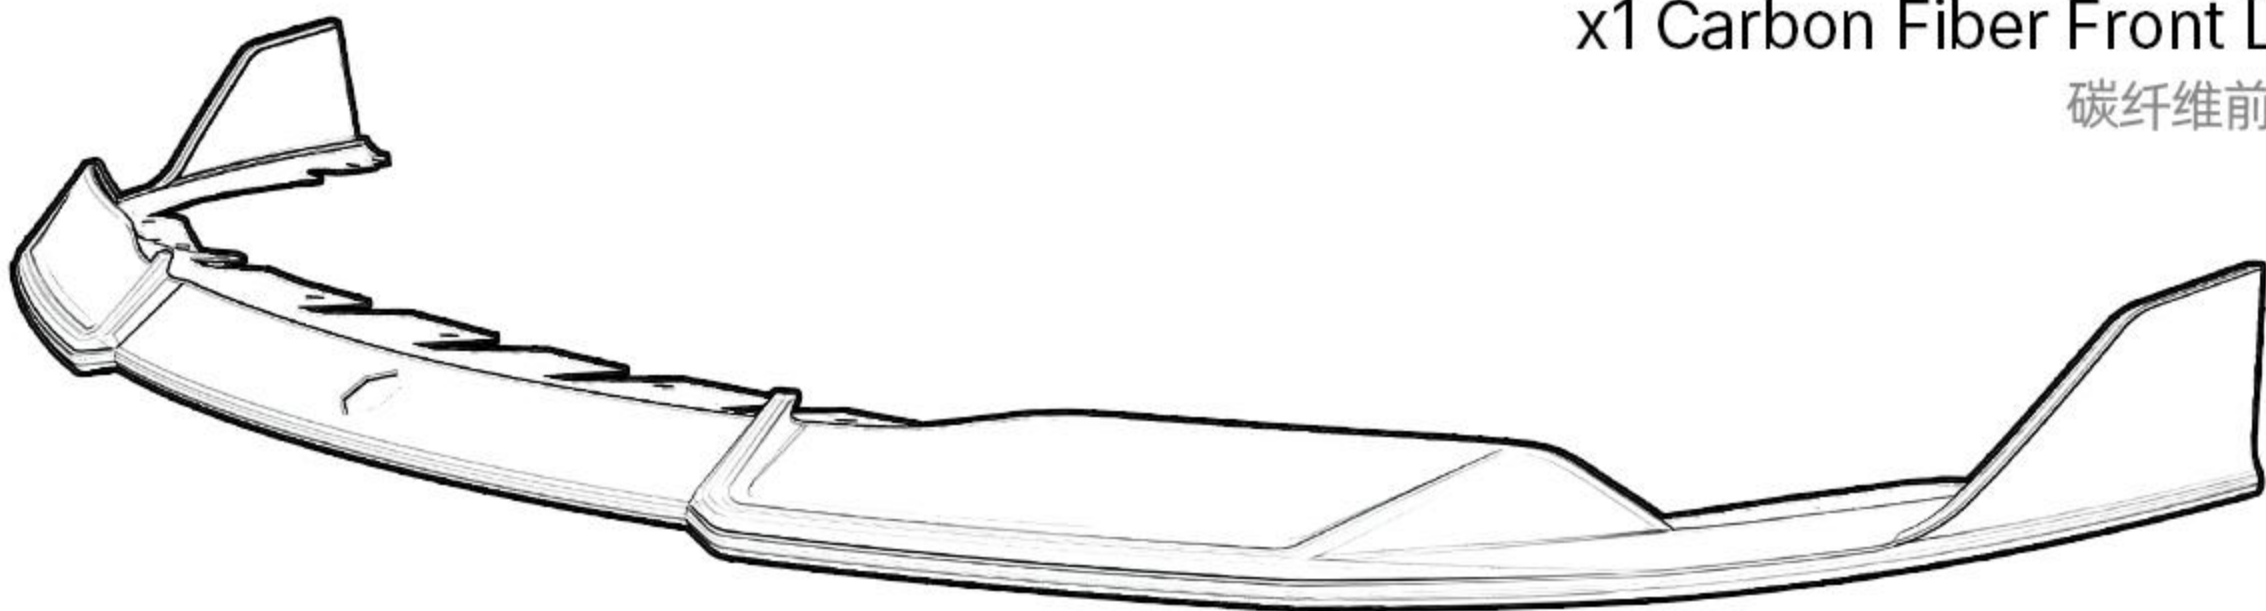

x1 Carbon Fiber Front Lip
碳纤维前唇



Install Points 安装点

*3M Double-Sided tape installation method


① Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact.② Use the included primer to paint the body (surface primer will scratch the paint).③ Tear off the 3M Double-Sided tape protective film and stick it on the car. ④ Install the fixing screws at the bottom.

*3M双面胶安装方式

① 使用酒精/丙酮清洁3M双面胶接触的车身面。② 使用随附的底漆对车身进行涂漆（表面底漆会刮伤车漆）。③ 撕开3M双面胶保护膜粘贴在车上。④ 底部安装固定螺丝。

Double-Sided tape /Adhesive sealant
双面胶带/玻璃胶

Double-Sided tape /Adhesive sealant
双面胶带/玻璃胶

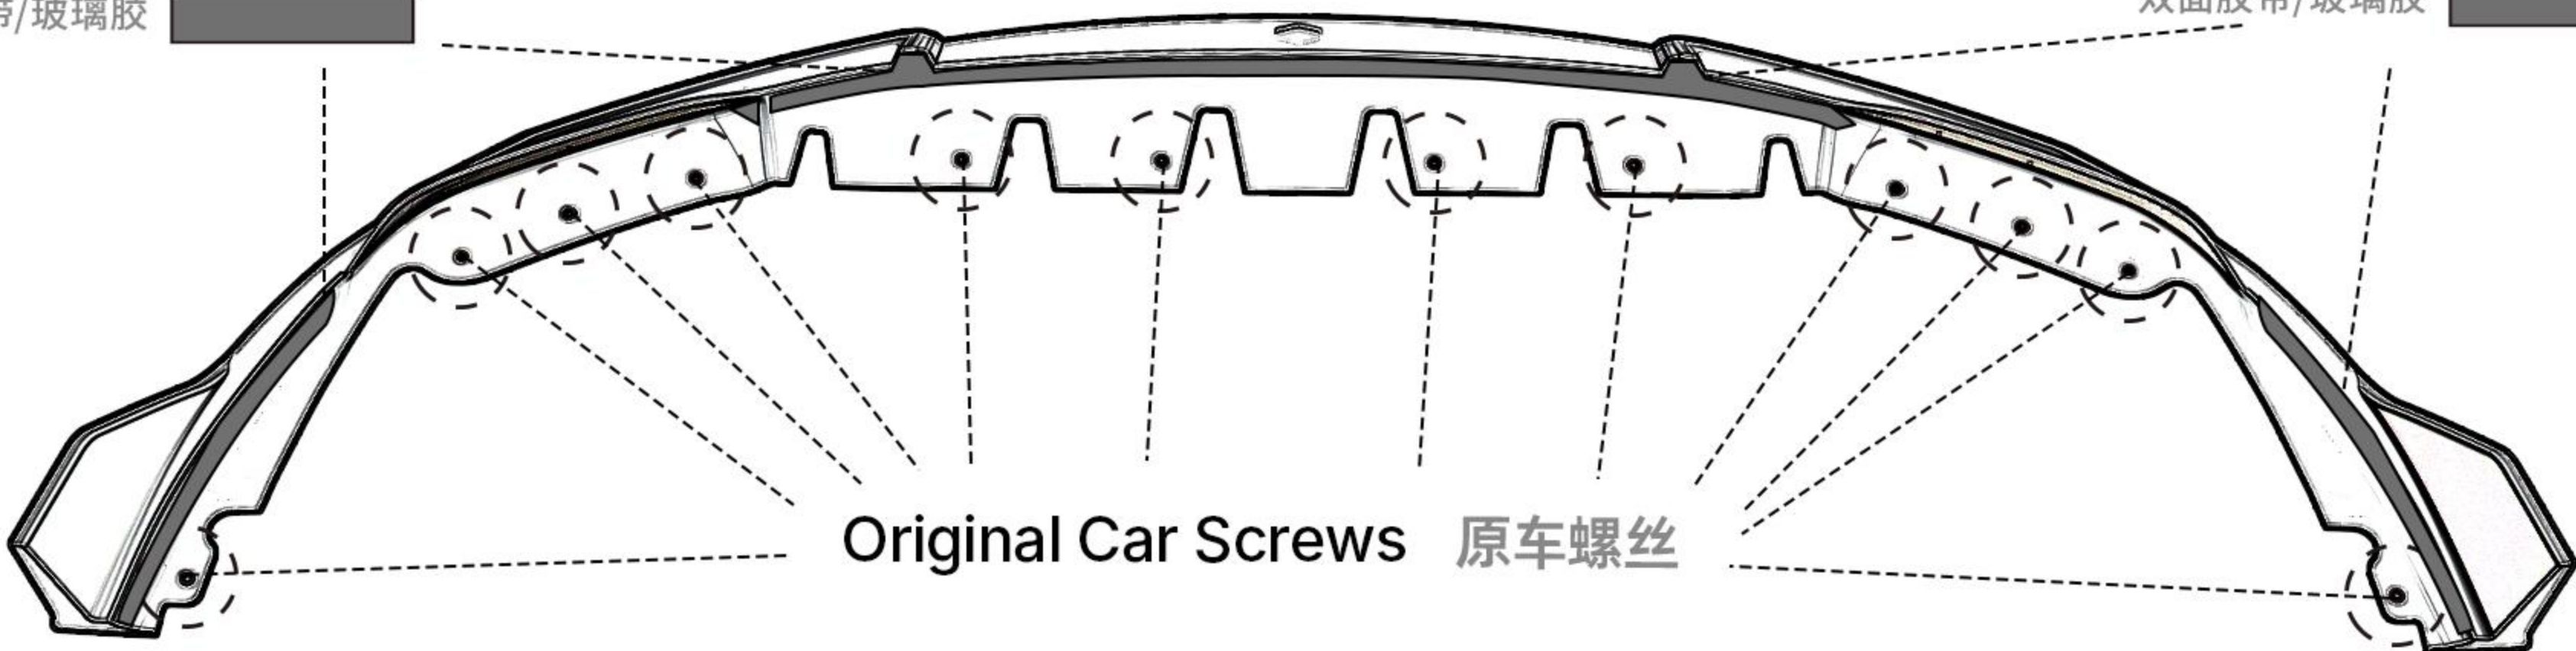

Original Car Screws 原车螺丝