


Installation Manual 安装手册

CARBON FIBER REAR CANARDS

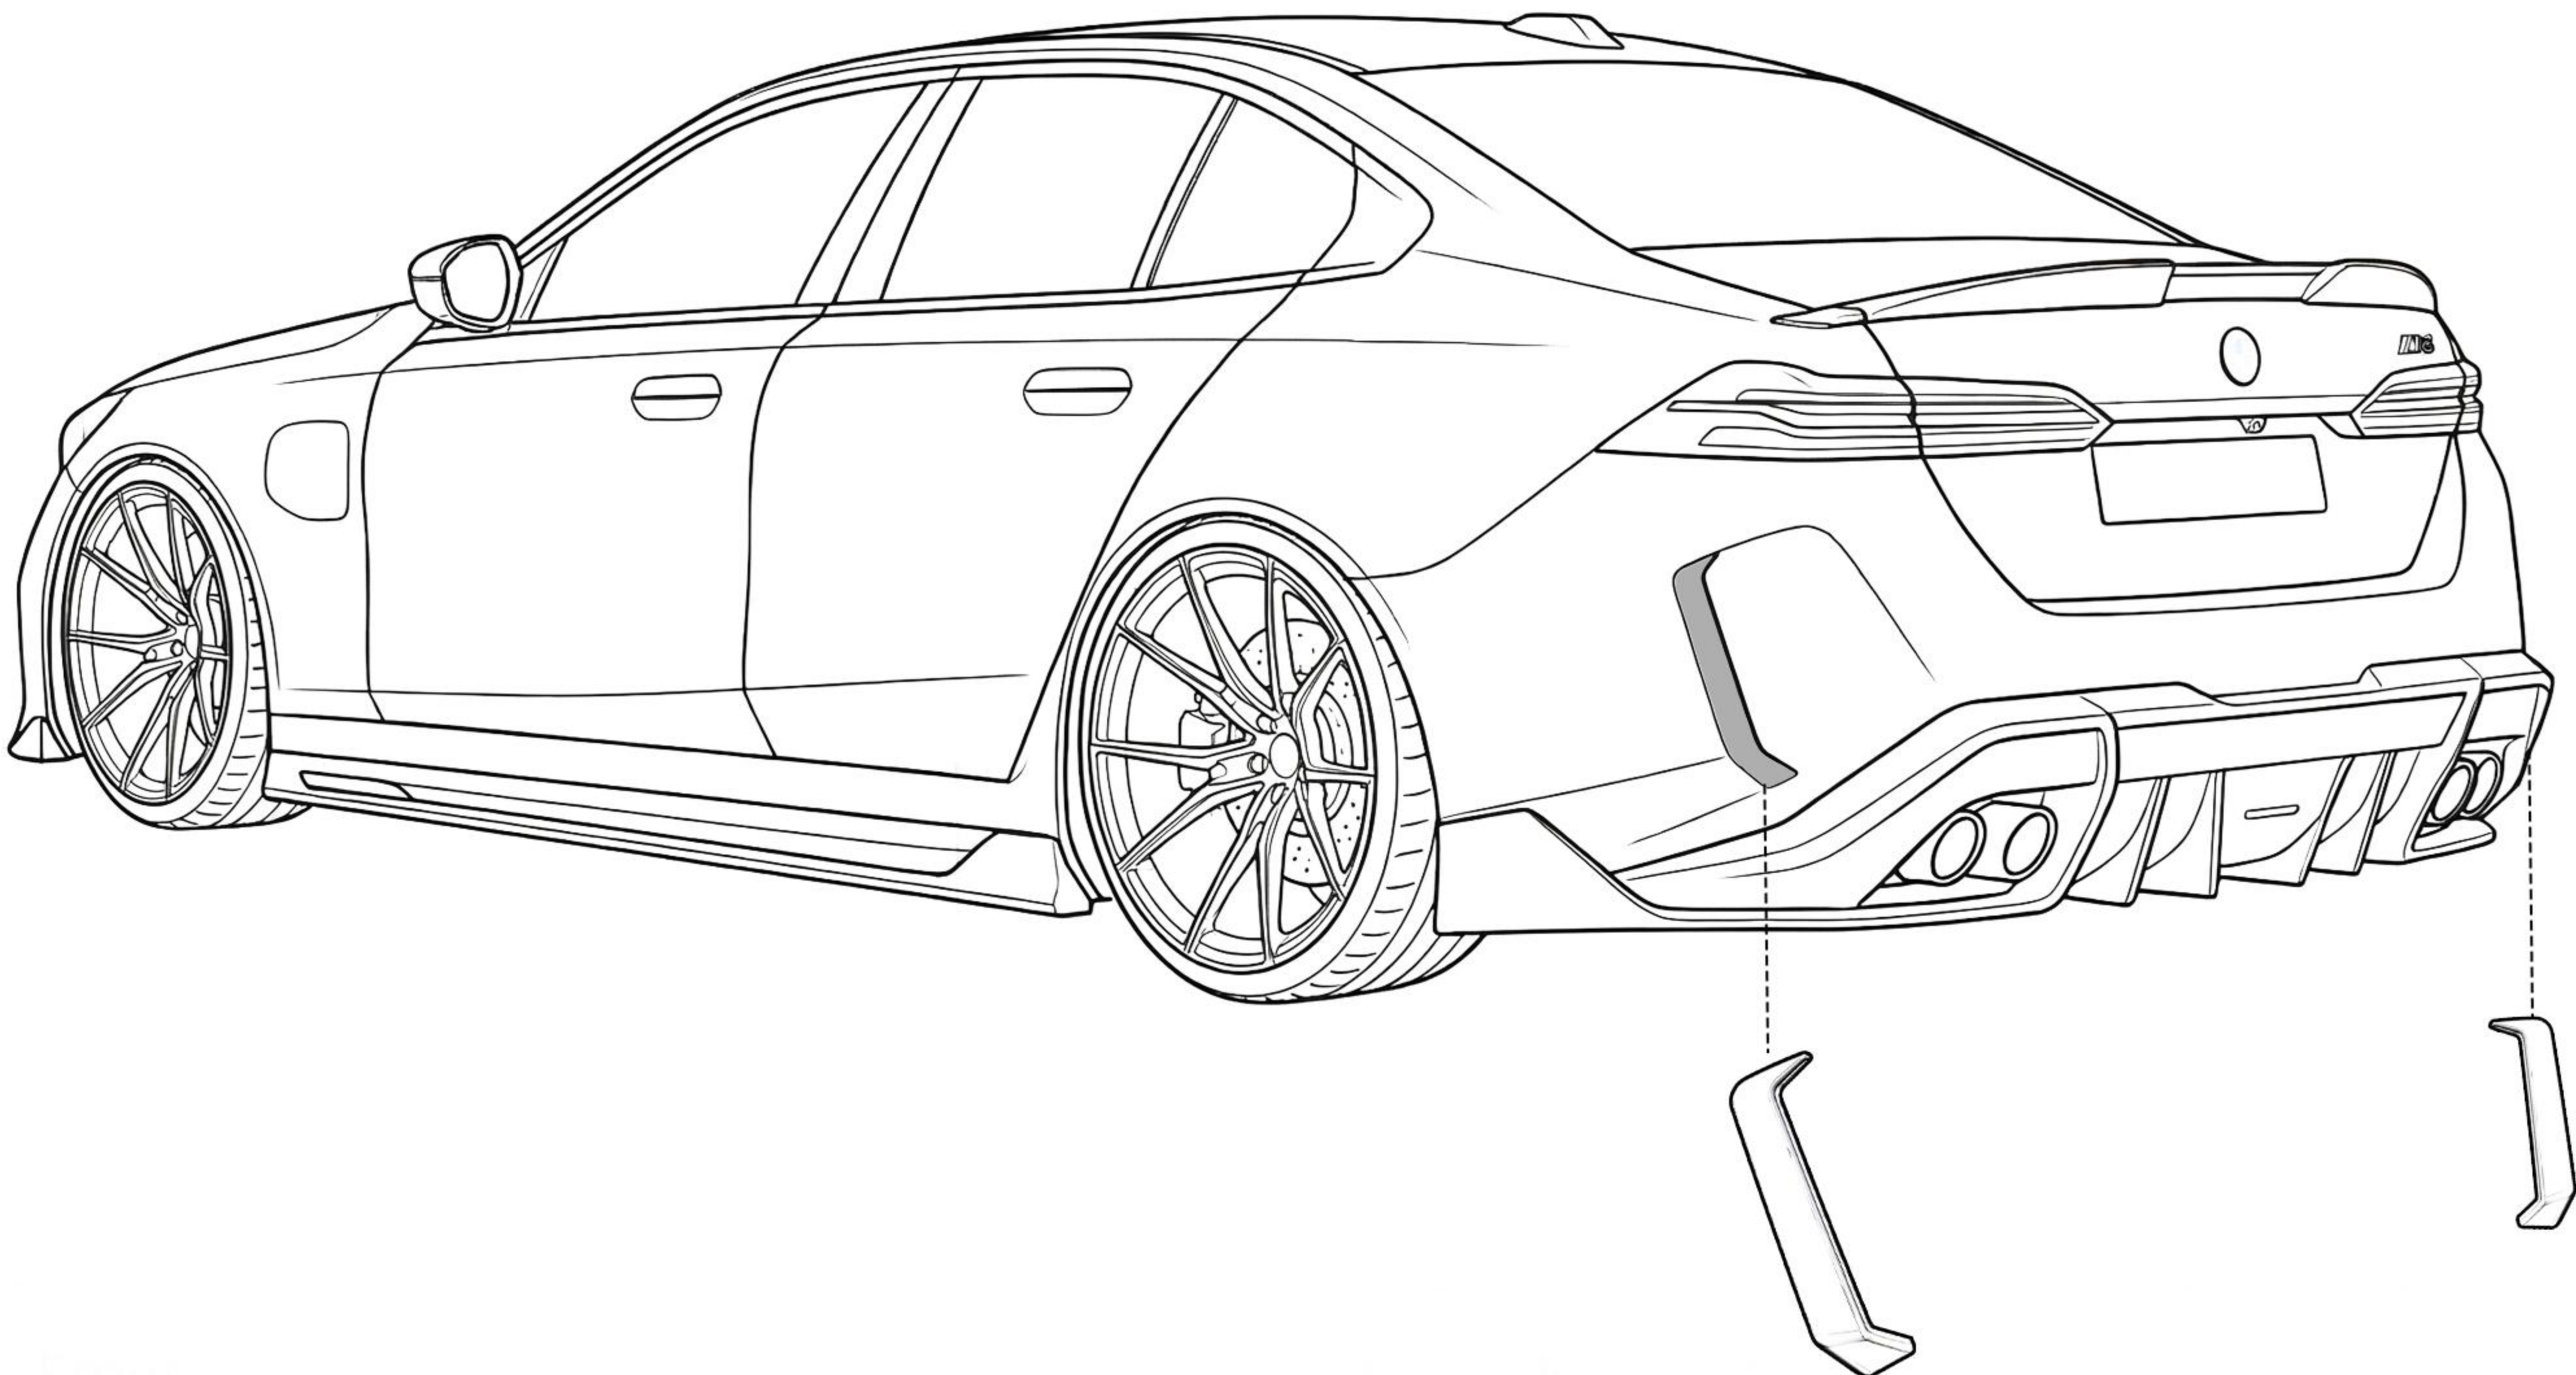


Rear 后部

Carbon Fiber Rear Canards 碳纤维后杠风刀

- ① After applying primer on the car body, remove the film of the double-sided tape slightly outwar(Or apply Adhesive sealant) .Once fitting is adjusted perfectly completely remove double-sided tape.
- ① 在车身上涂完底漆后,将双面胶带的薄膜稍微向外撕去(或涂上玻璃胶)。完美调整贴合后,完全撕掉双面胶带。

All Components 所有组件

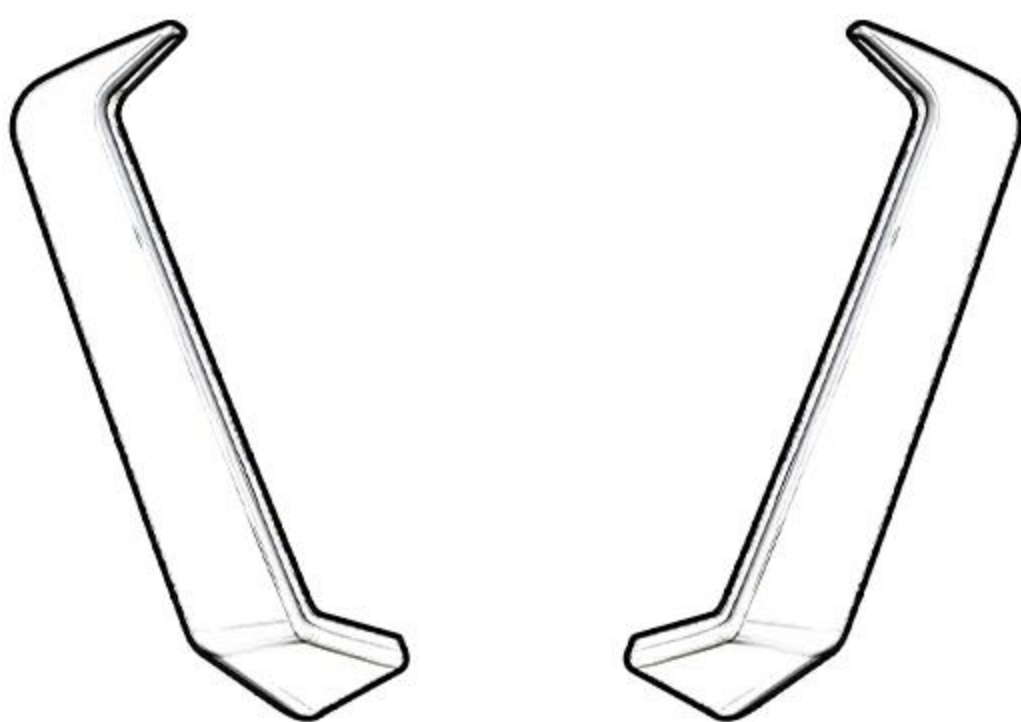


Carbon Fiber Rear Canards
碳纤维后杠风刀



D-S tape/A-sealant
双面胶带/玻璃胶
3M™ VHB 4910 (10mm)

Install Points 安装点

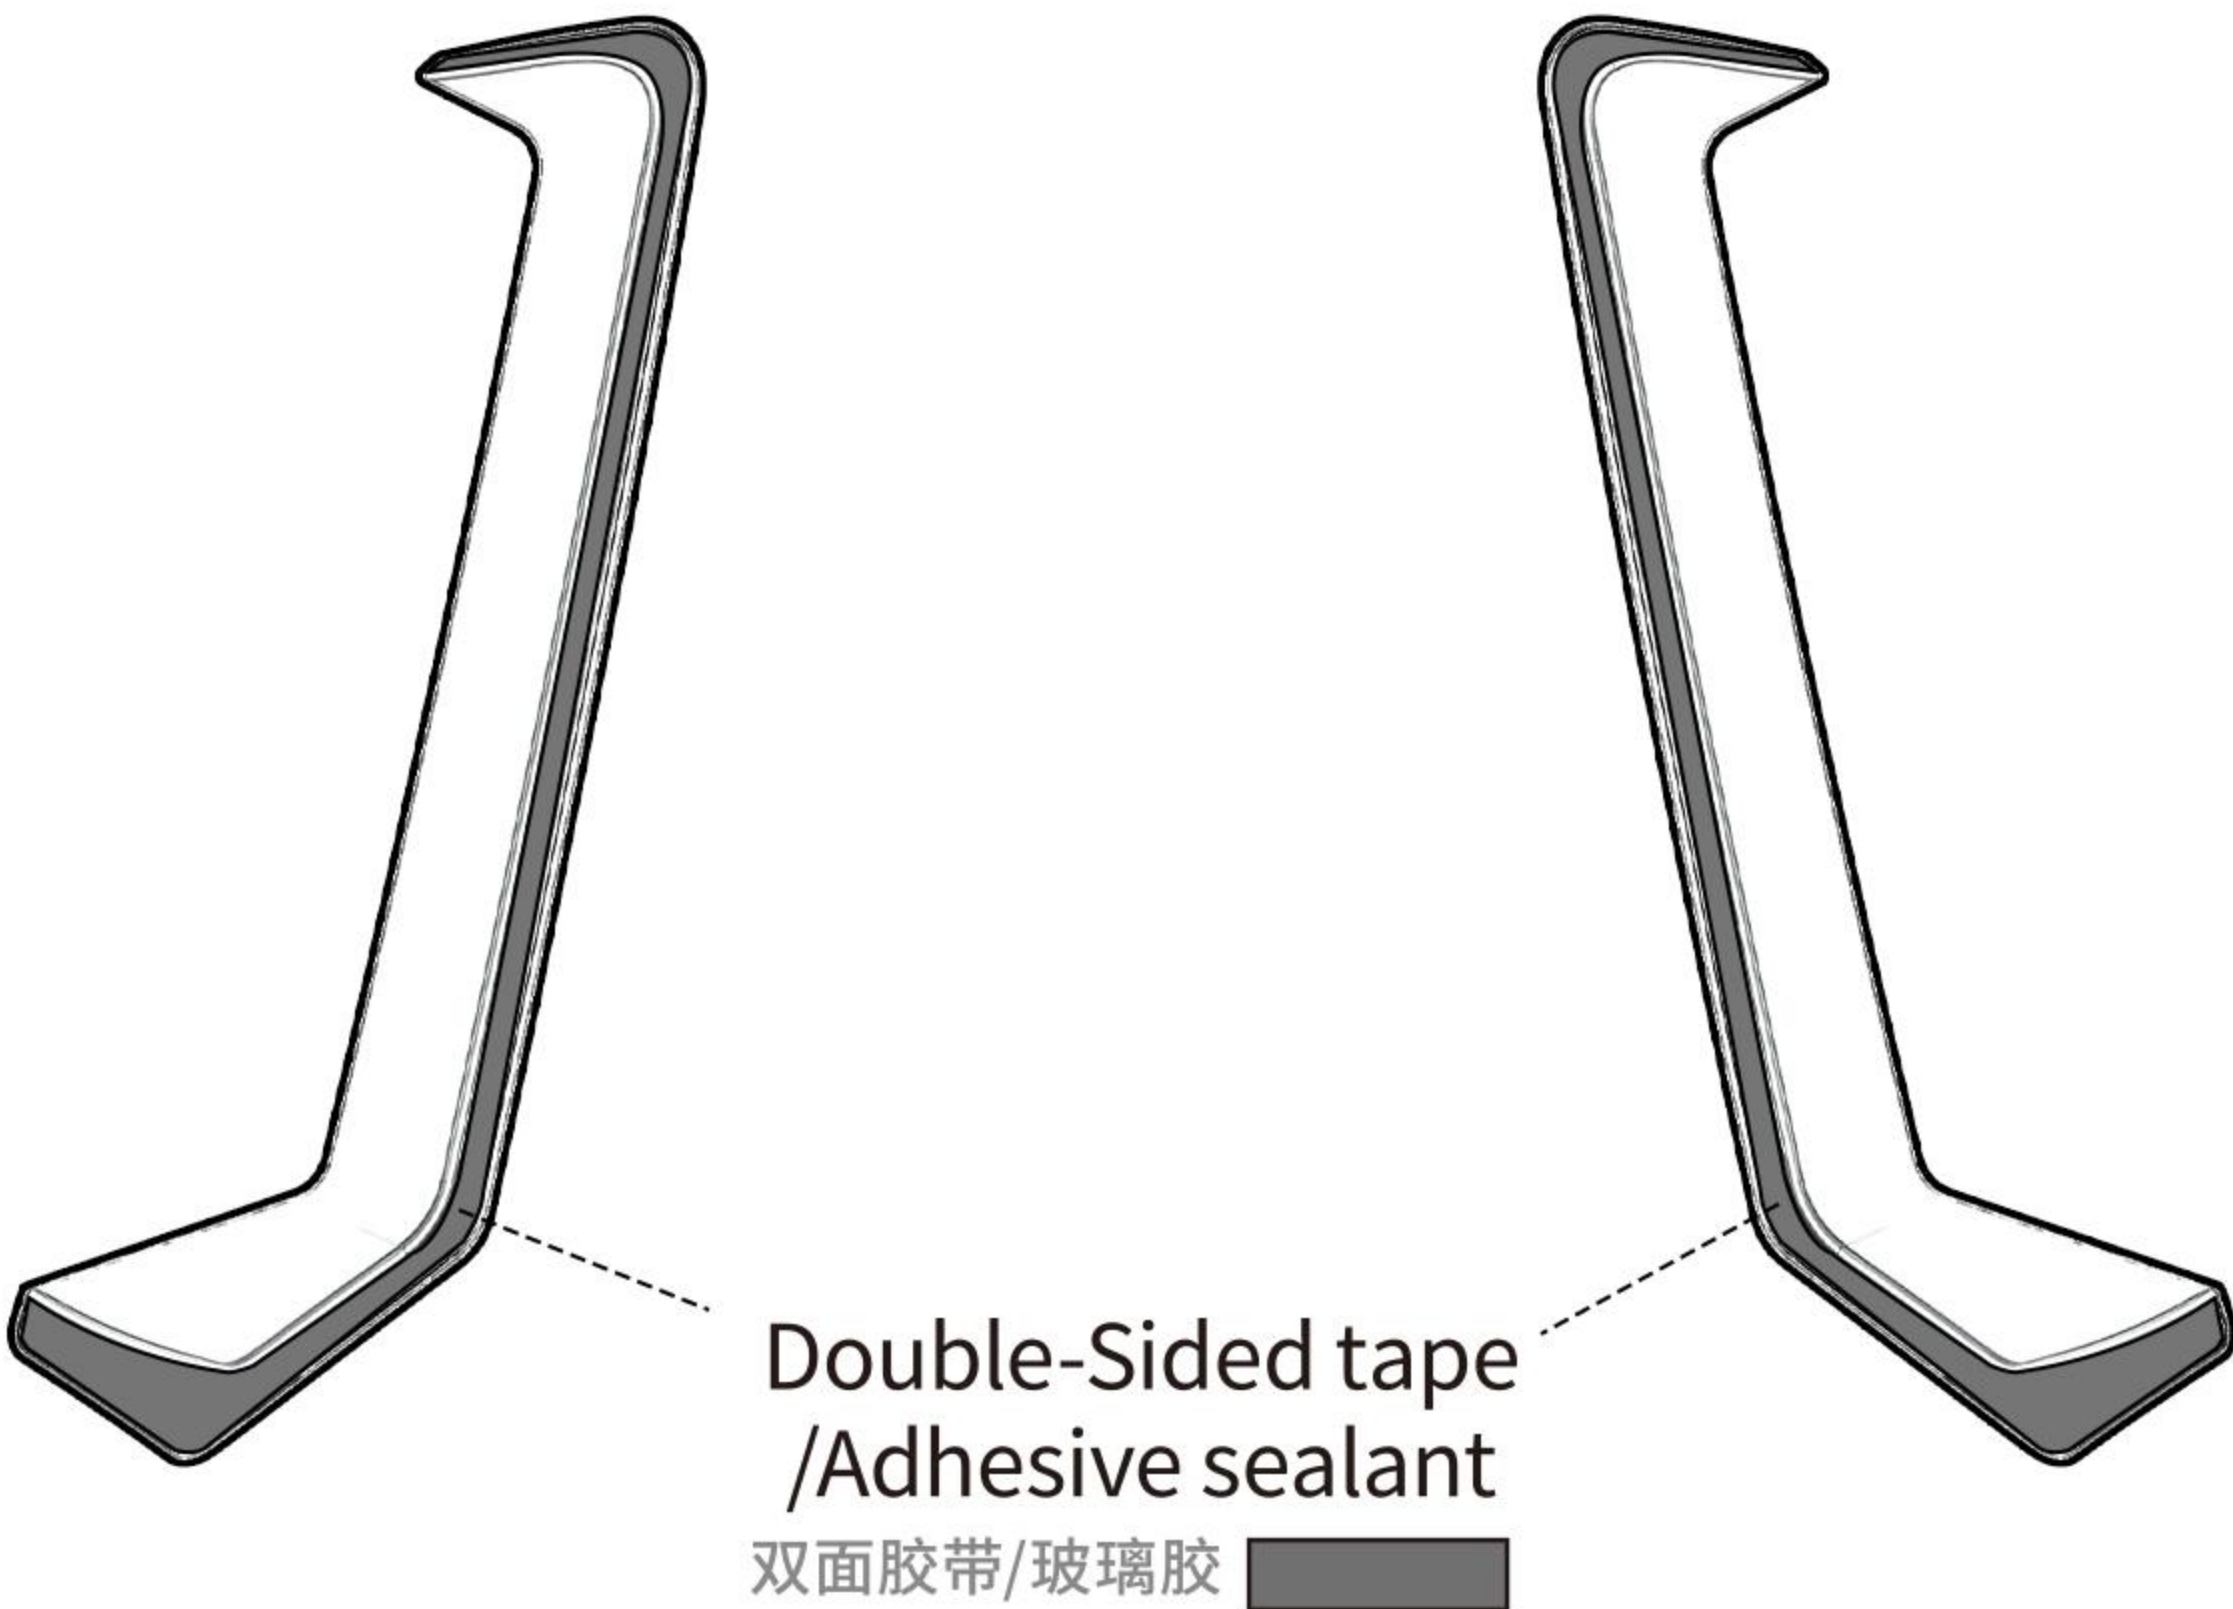

Double-Sided tape
/Adhesive sealant
双面胶带/玻璃胶