


Installation Manual 安装手册

CARBON FIBER REAR BUMPER CANARDS

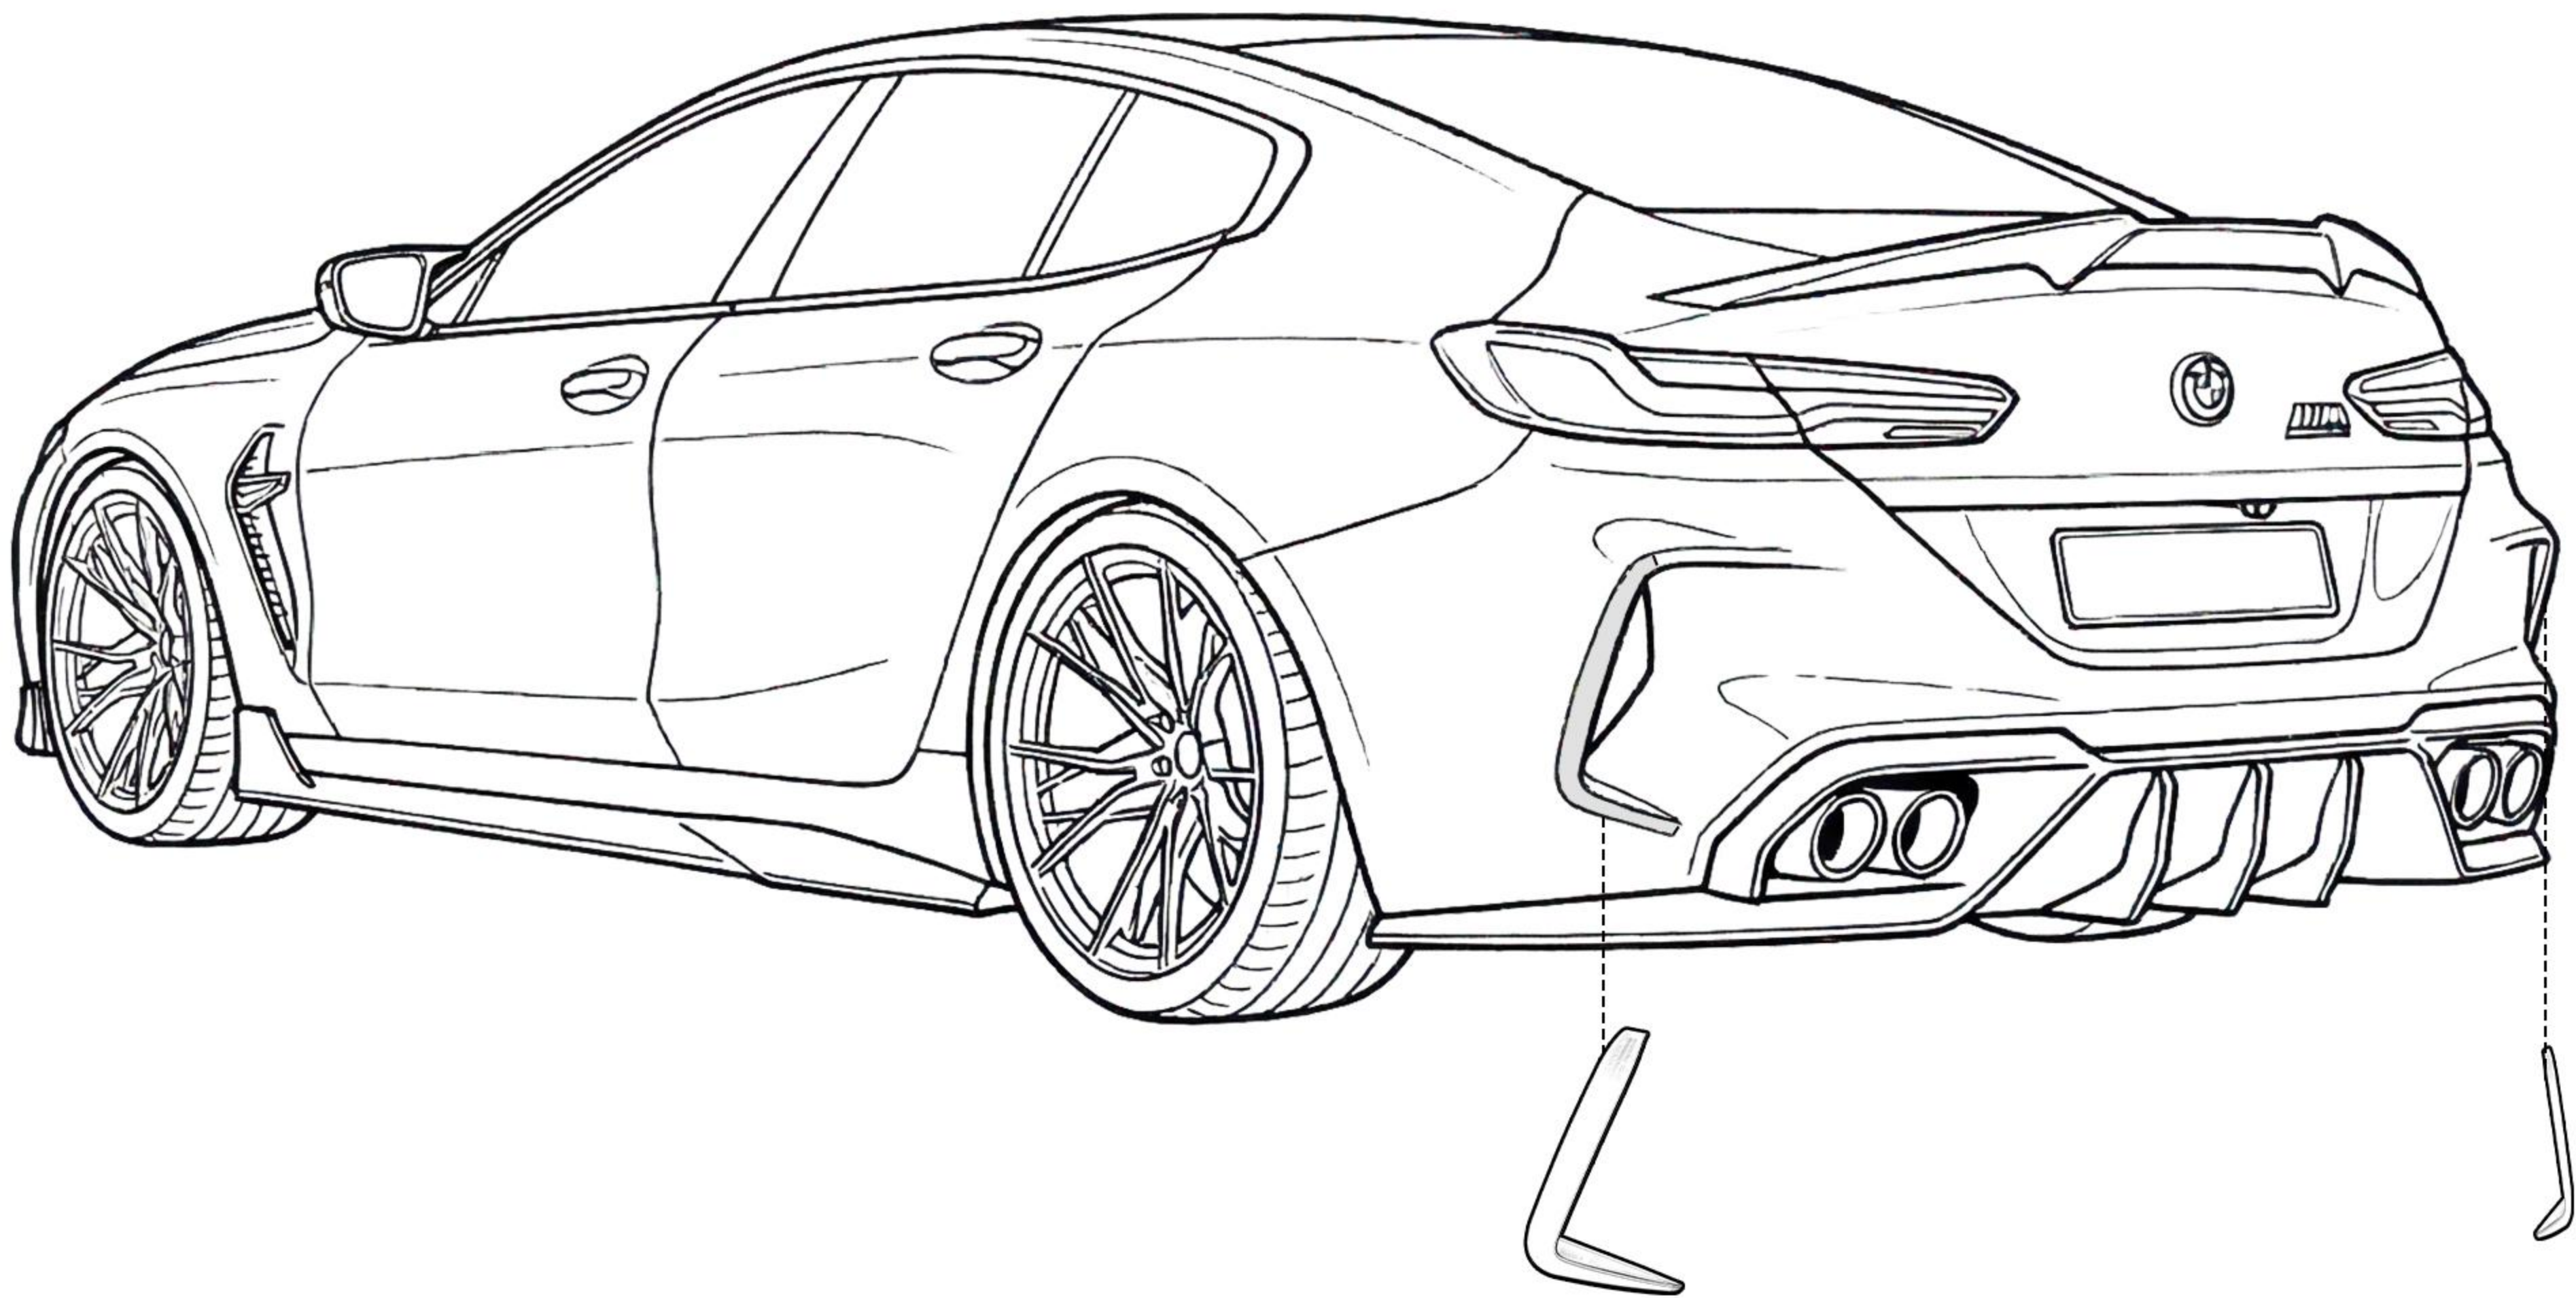

Paste method 粘贴方式



- *The two pasting methods have similar pasting positions and methods. You can choose either one.
1. Use a clean cloth, alcohol, etc. to clean the bottom to be pasted before pasting.
 2. Use the included primer to paint the body (the surface primer will scratch the paint) and the other one can be used to paste the parts.
- *两种粘贴方式的粘贴位和方式相似，可任选其一
- 1.在粘贴之前使用干净的布、酒精等将被粘贴车身进行清洁。
 - 2.使用随附的底漆对车身进行涂漆（表面底漆会划伤车漆）后方可进行部件的粘贴。


Rear 后部

Carbon Fiber Rear Bumper Canards 碳纤维后杠风刀


- ① After applying primer on the car body, remove the film of the double-sided tape slightly outwar(Or apply Adhesive sealant) .Once fitting is adjusted perfectly completely remove double-sided tape.
- ① 在车身上涂完底漆后,将双面胶带的薄膜稍微向外撕去(或涂上玻璃胶)。完美调整贴合后，完全撕掉双面胶带。

All Components 所有组件

Carbon Fiber Rear Bumper Canards x2
碳纤维后杠风刀

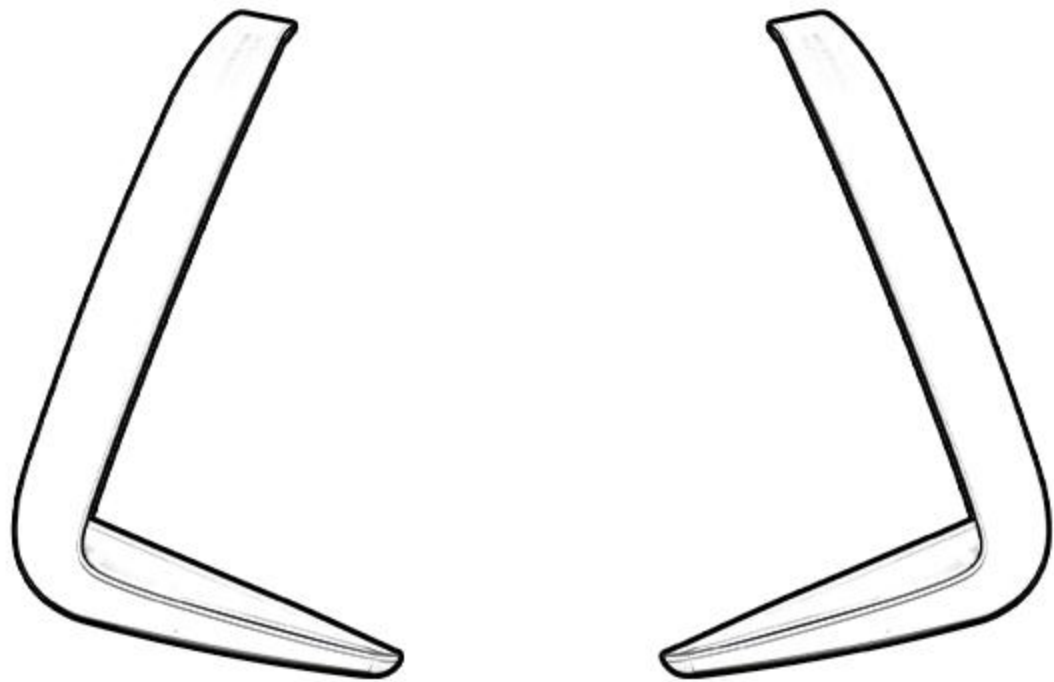

Install Points 安装点

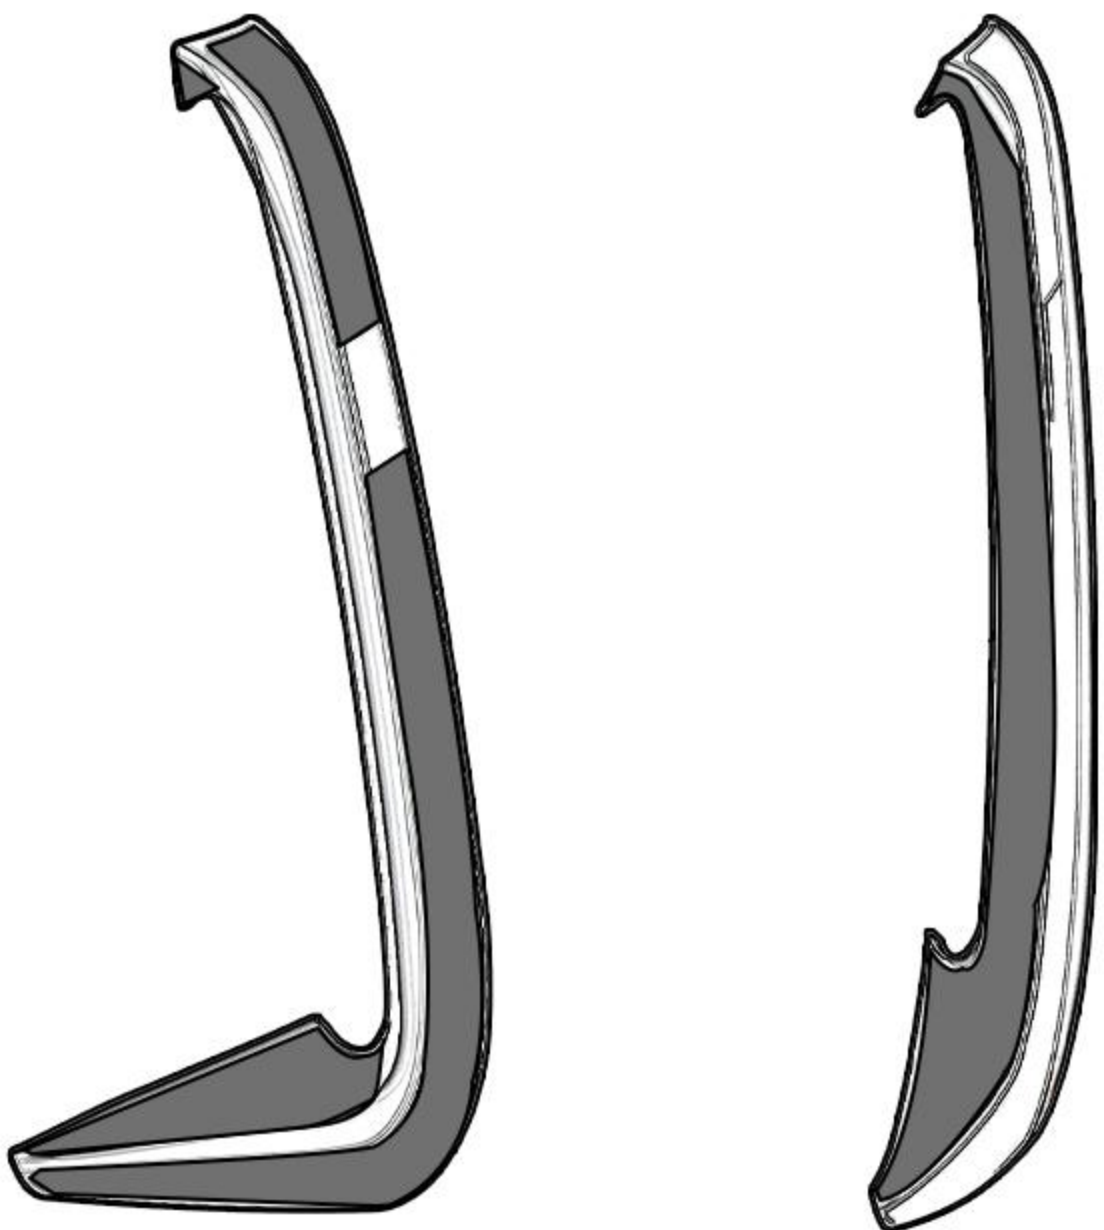

Double-Sided tape /Adhesive sealant
双面胶带/玻璃胶

Double-sided tape or glass adhesive is also required on the inner side of the product.
产品内侧也需贴双面胶带/玻璃胶