


Installation Manual

CARBON FIBER REAR DIFFUSER

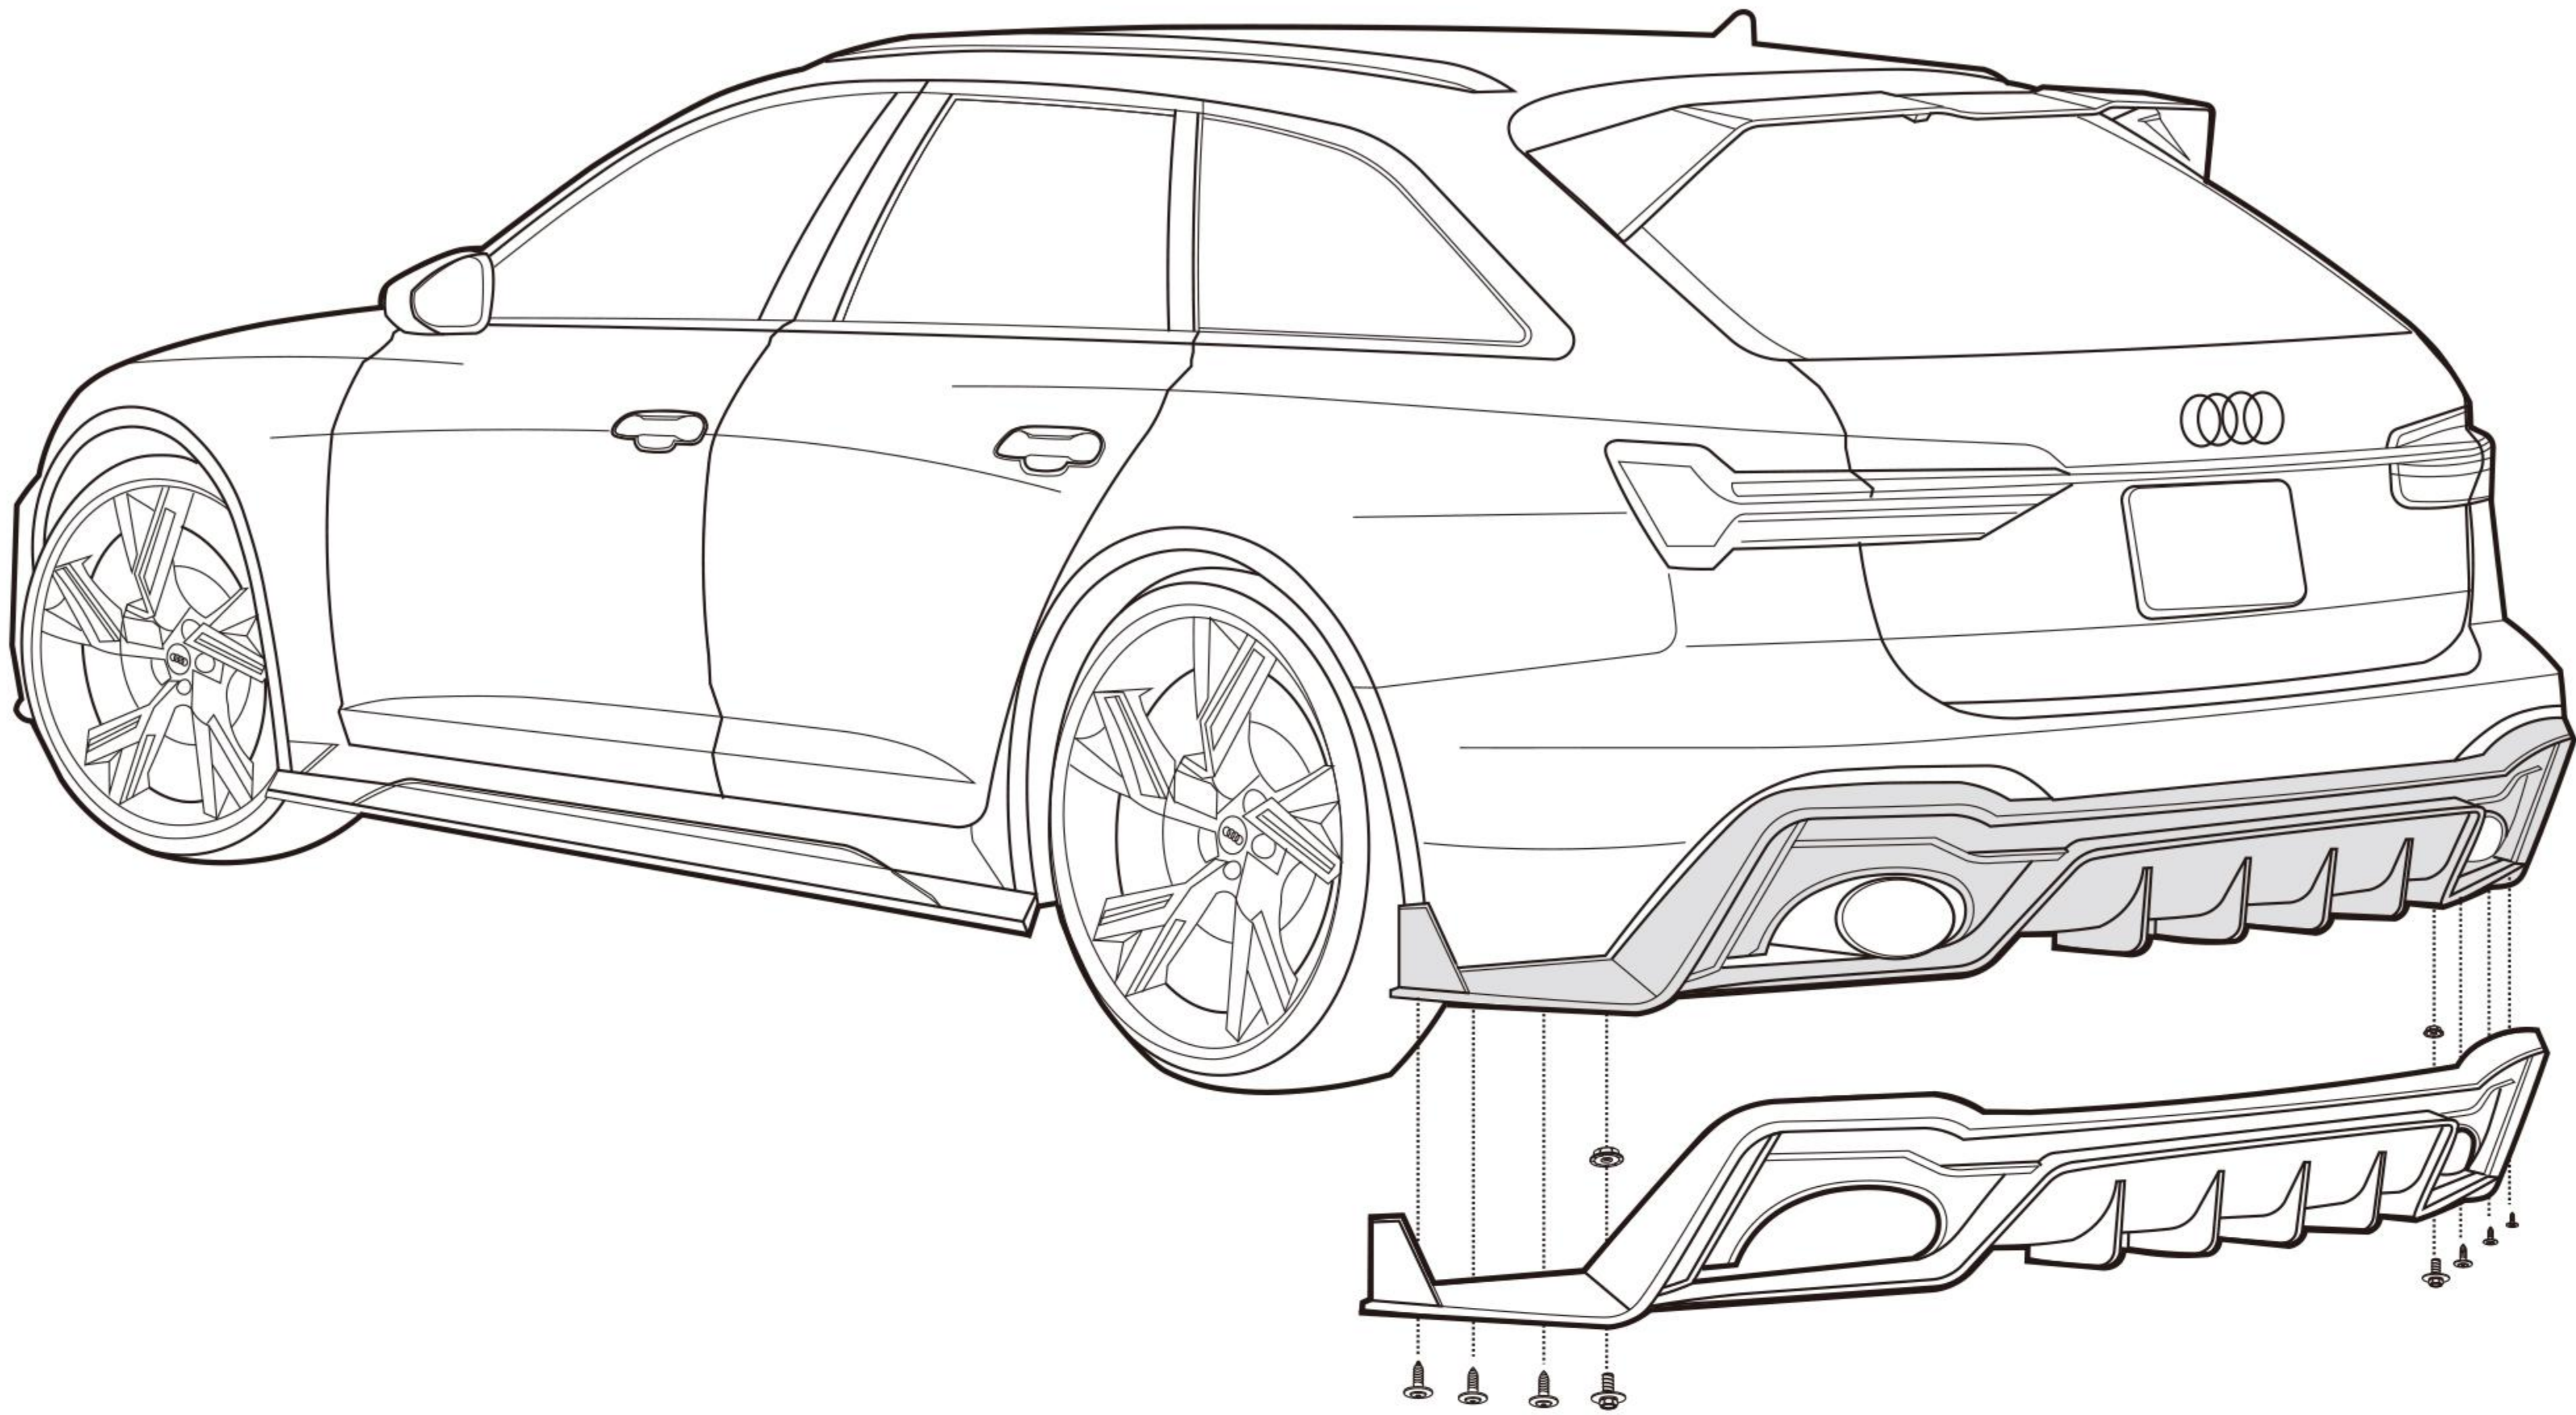


Rear

Carbon Fiber Rear Diffuser

- ① Remove the rear bumper and then remove the OEM Diffuser.
- ② Remove the genuine rear sensor and sensor bracket according to the designated install points.
- ③ Set all components with the power tool according to the designated install points.

All Components

x1 Carbon Fiber Rear Diffuser

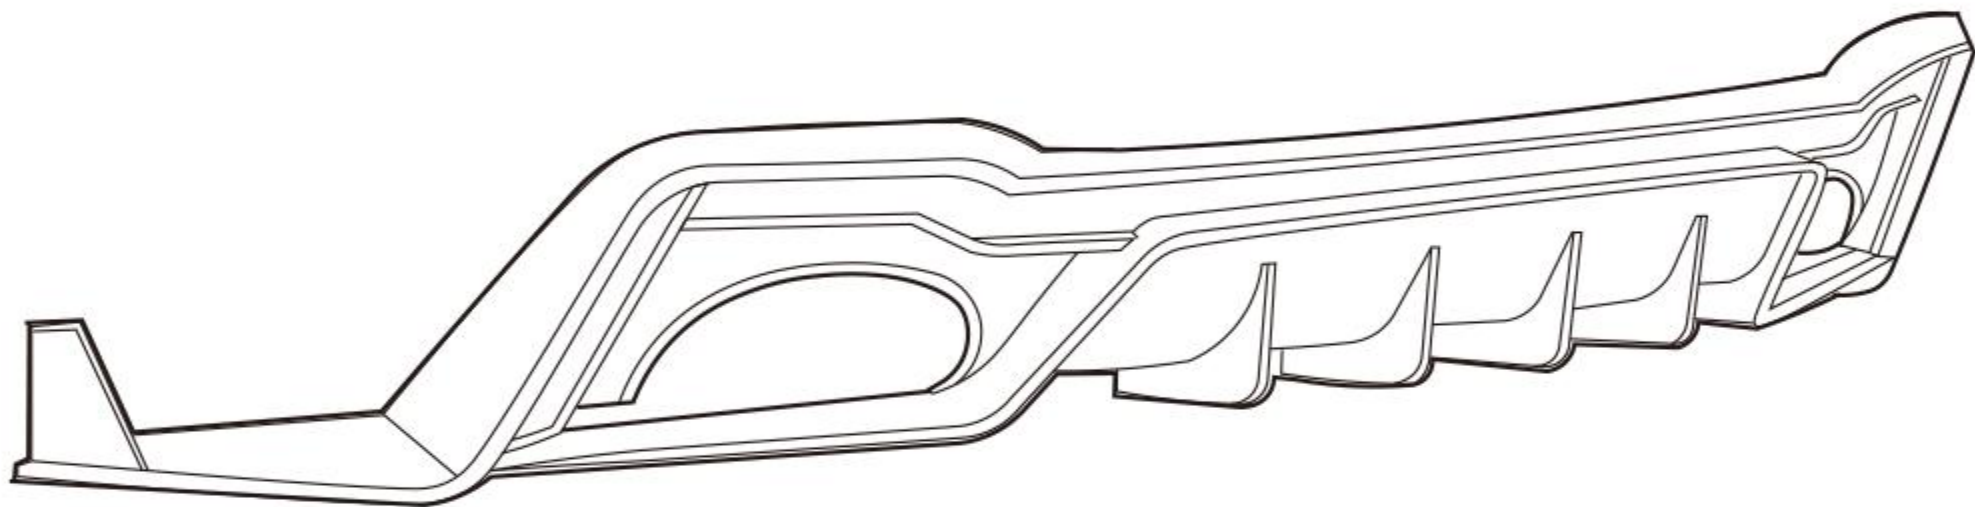

			
x6	x2	x2	
Self-Tapping screw	Bolt	Nut	D-S tape/A-sealant
M5X20	M5X16	M5X16	3M™VHB 4910 (20mm)

Install Points

