


Installation Manual

CARBON FIBER REAR DIFFUSER

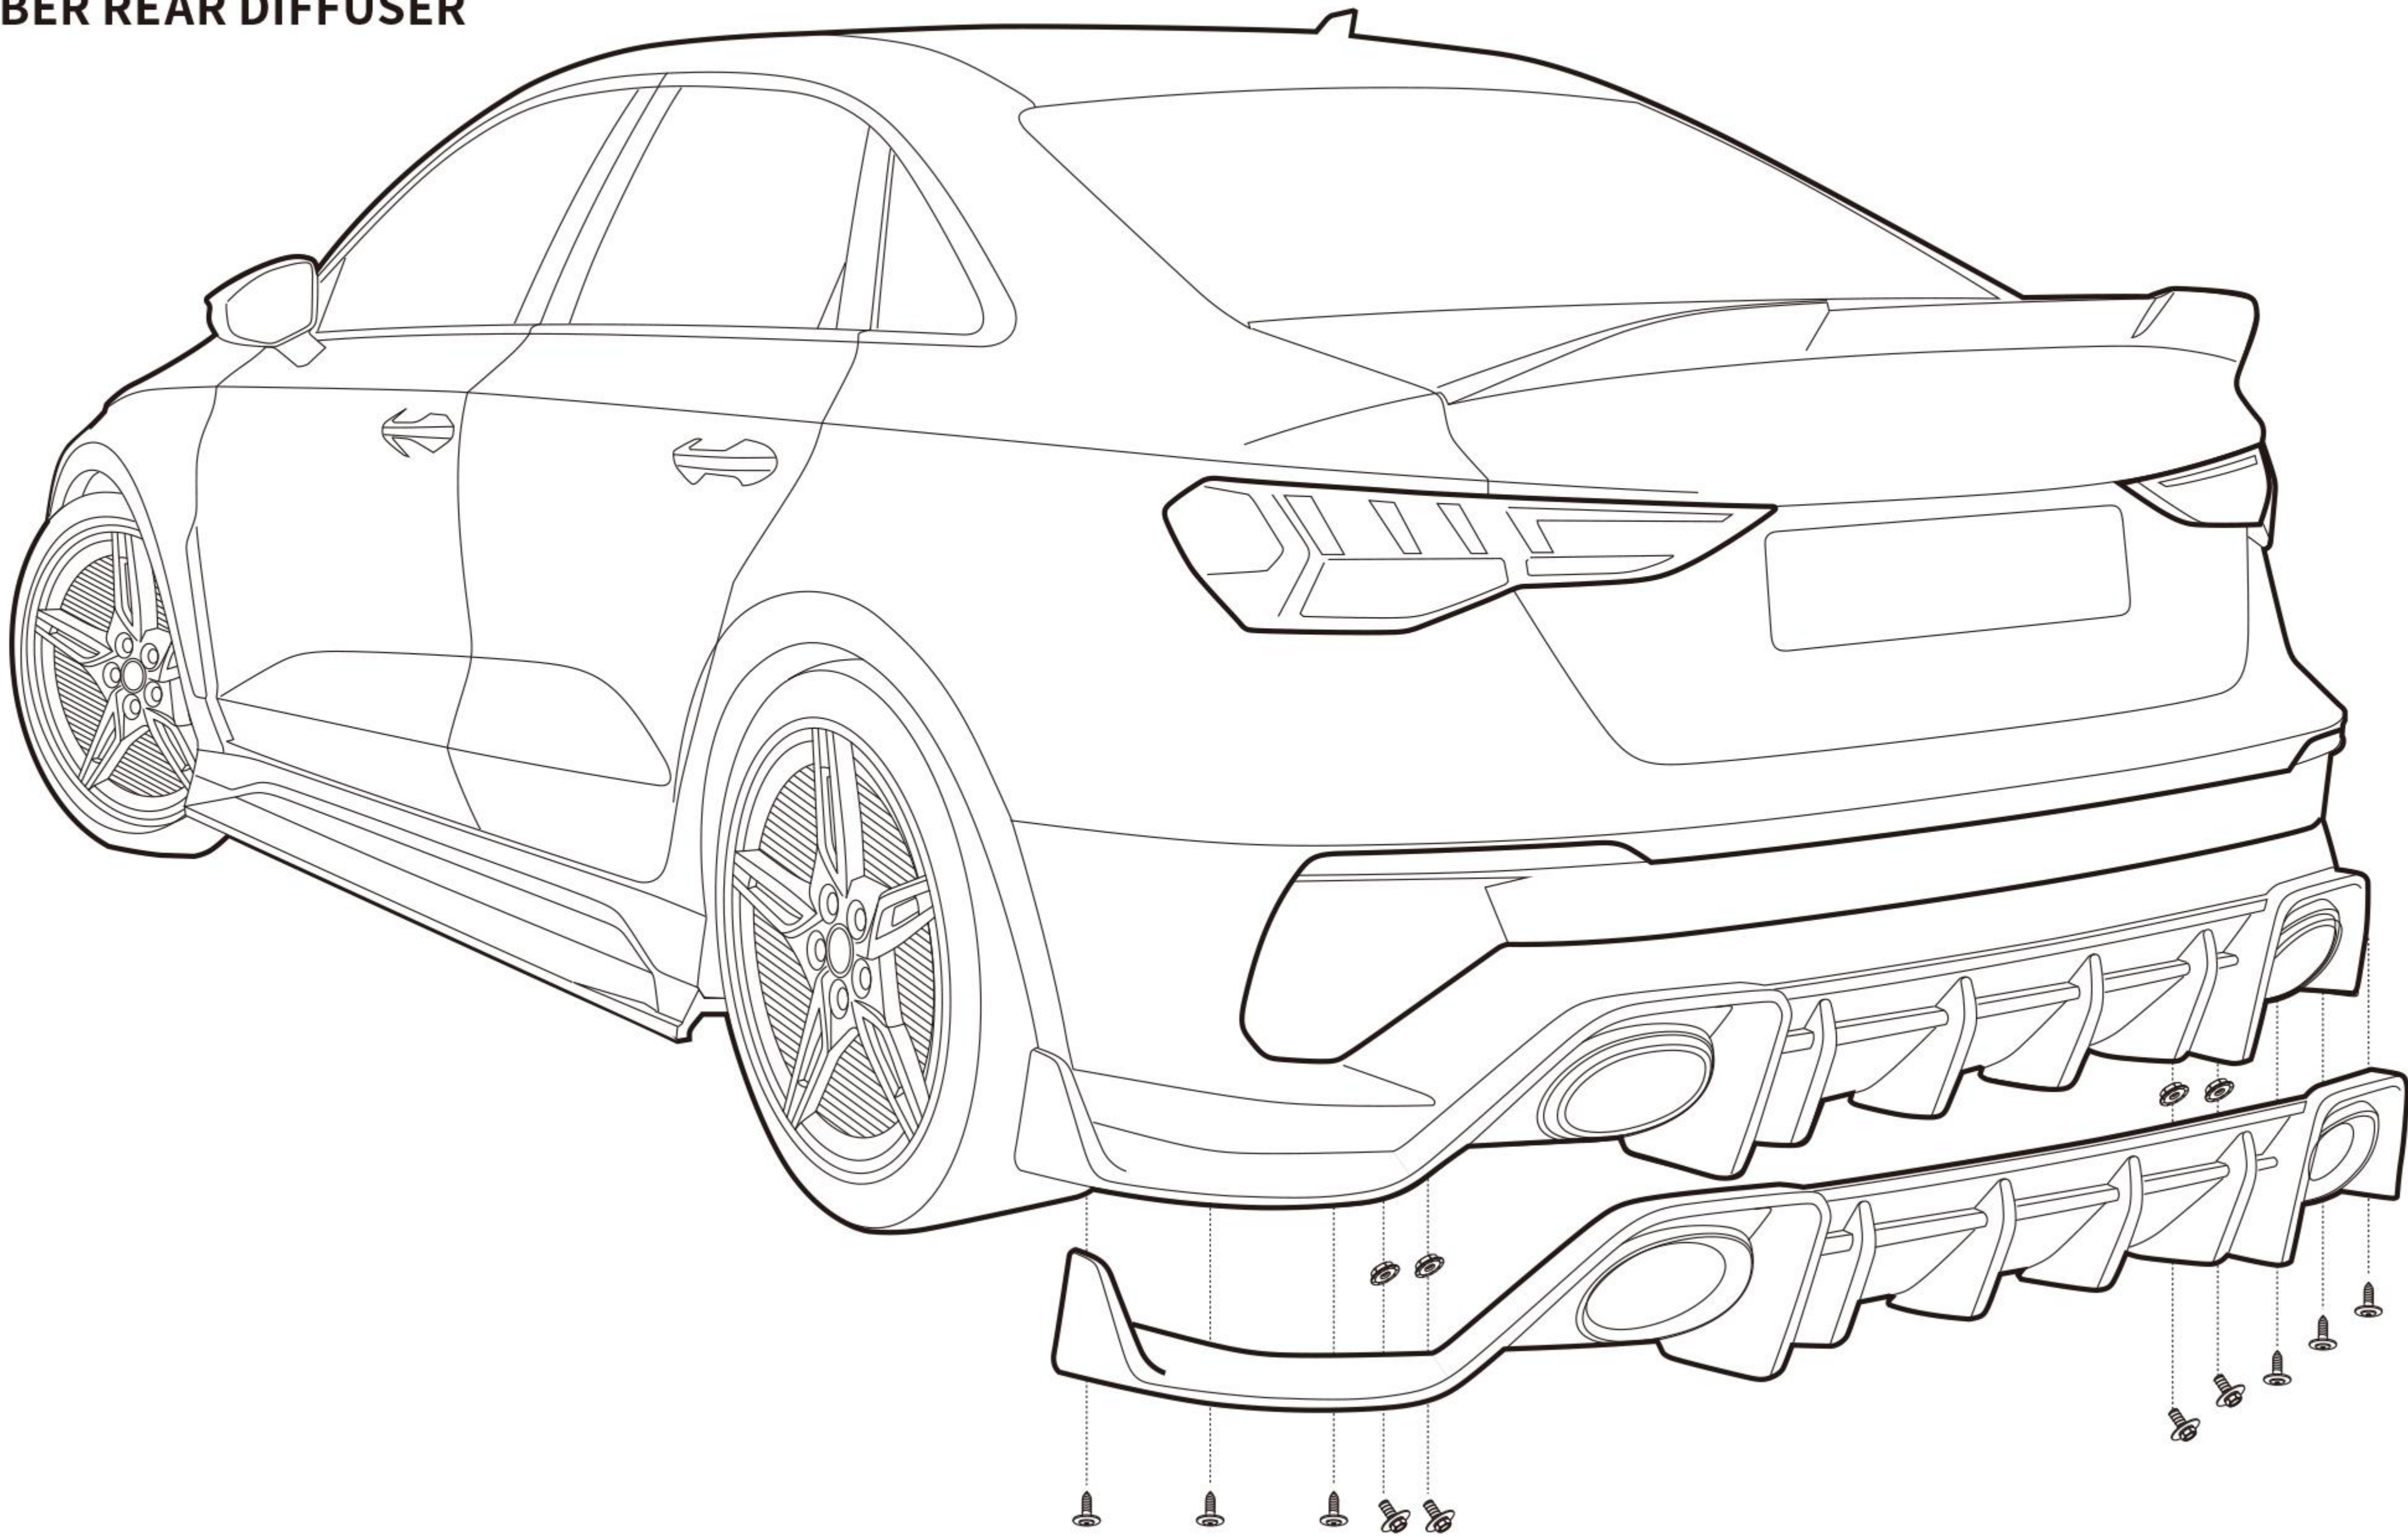

Rear

Carbon Fiber Rear Diffuser

- ① Remove the rear bumper and then remove the OEM Diffuser.
- ② Remove the genuine rear sensor and sensor bracket according to the designated install points.
- ③ Set all components with the power tool according to the designated install points.

All Components



Carbon Fiber Rear Diffuser

x1

 x6 Self-Tapping screw M5X16	 x4 Bolt M6	 x4 Nut M6	 x2 Double-Sided tape 3M™ VHB 4910 (10mm)
---	--	---	--

Install Points

***3M Double-Sided tape installation method** ①Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Tear off the 3M Double-Sided tape protective film and stick it on the car. ④Install the fixing screws at the bottom.

