


Installation Manual

CARBON FIBER REAR DIFFUSER

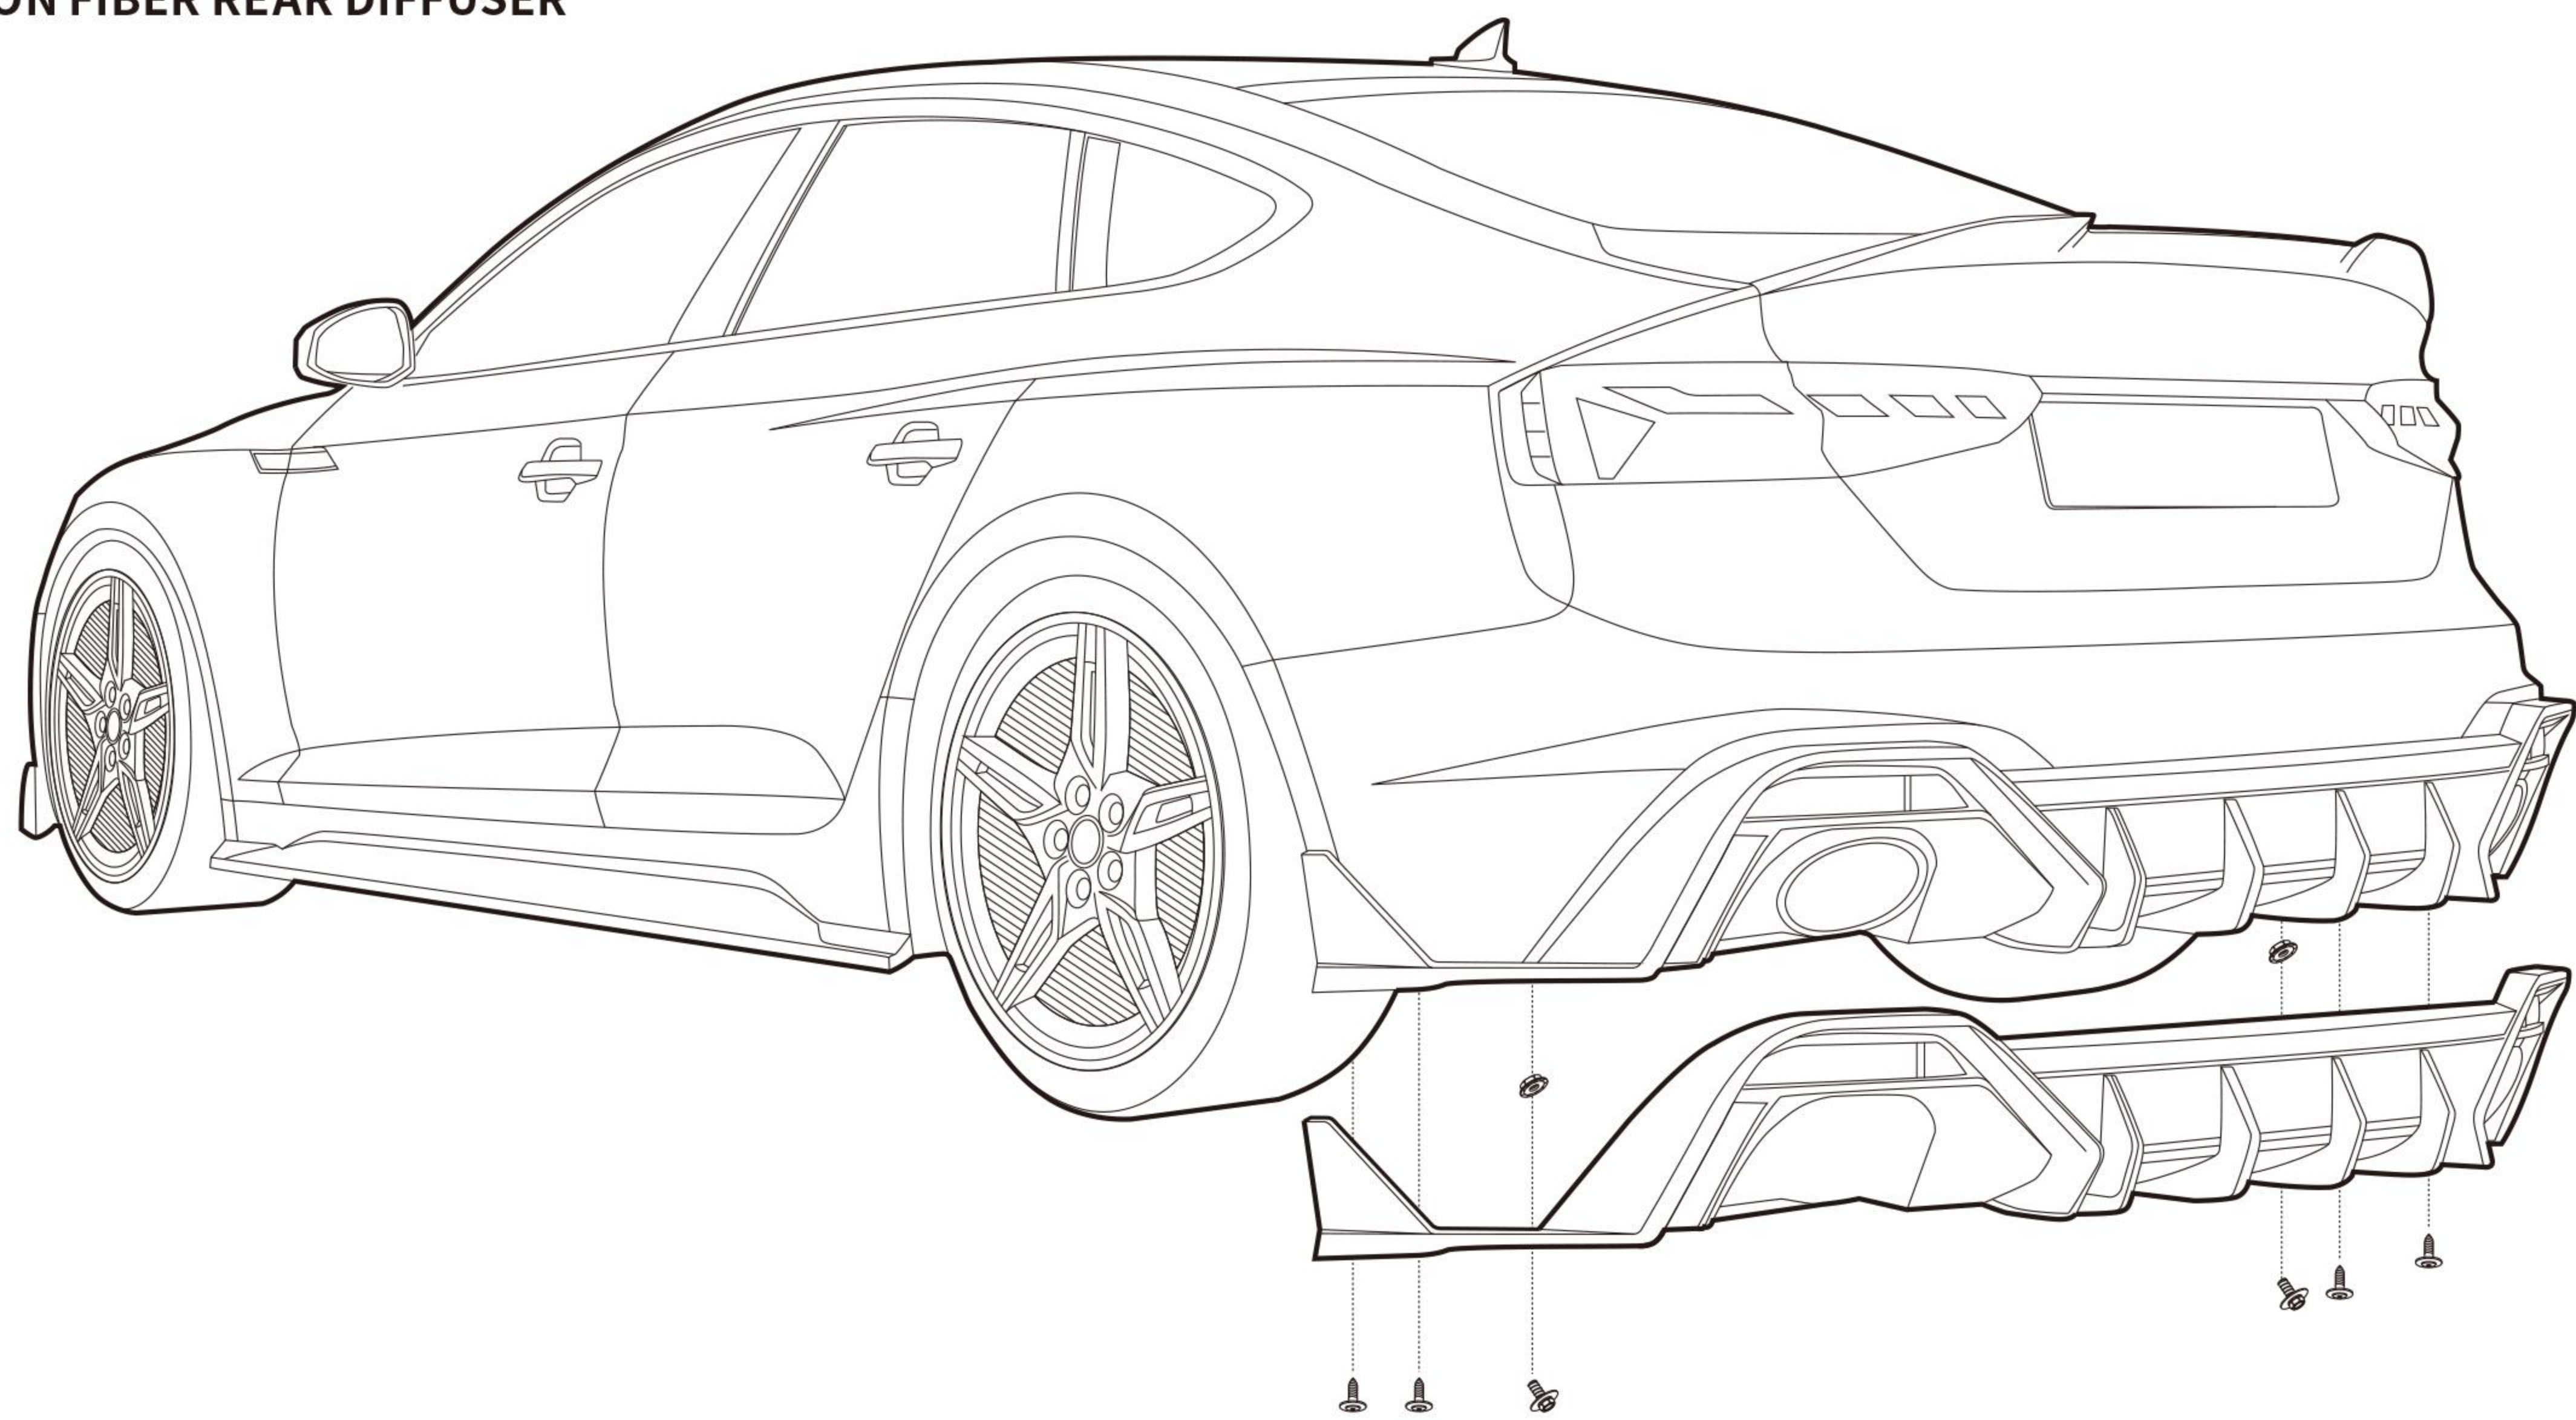


Rear

Carbon Fiber Rear Diffuser

- ① Remove the rear bumper and then remove the OEM Diffuser.
- ② Remove the genuine rear sensor and sensor bracket according to the designated install points.
- ③ Set all components with the power tool according to the designated install points.

All Components

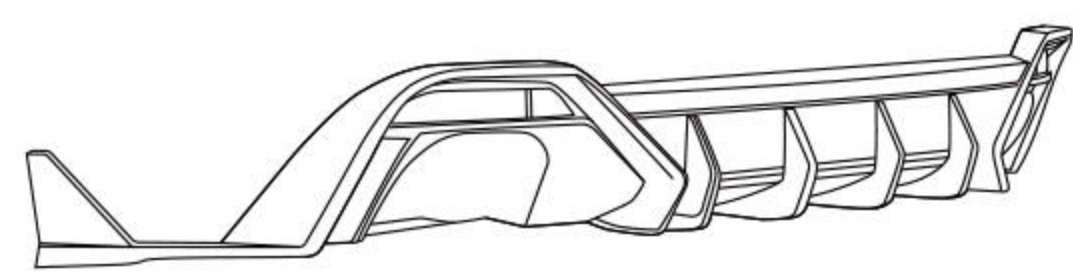

Carbon Fiber Rear Diffuser

x1



x4

Self-Tapping screw

M5X16



x2

Bolt

M6



x2

Nut

M6



x2

Adhesive sealant

Sikaflex®-221

Install Points

Adhesive sealant installation method ①Use alcohol/acetone to clean the car body surface where the glass glue product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Apply Adhesive sealant to the sticking position and stick it on the car. ④Install the fixing screws at the bottom.

