


Installation Manual

CARBON FIBER REAR DIFFUSER

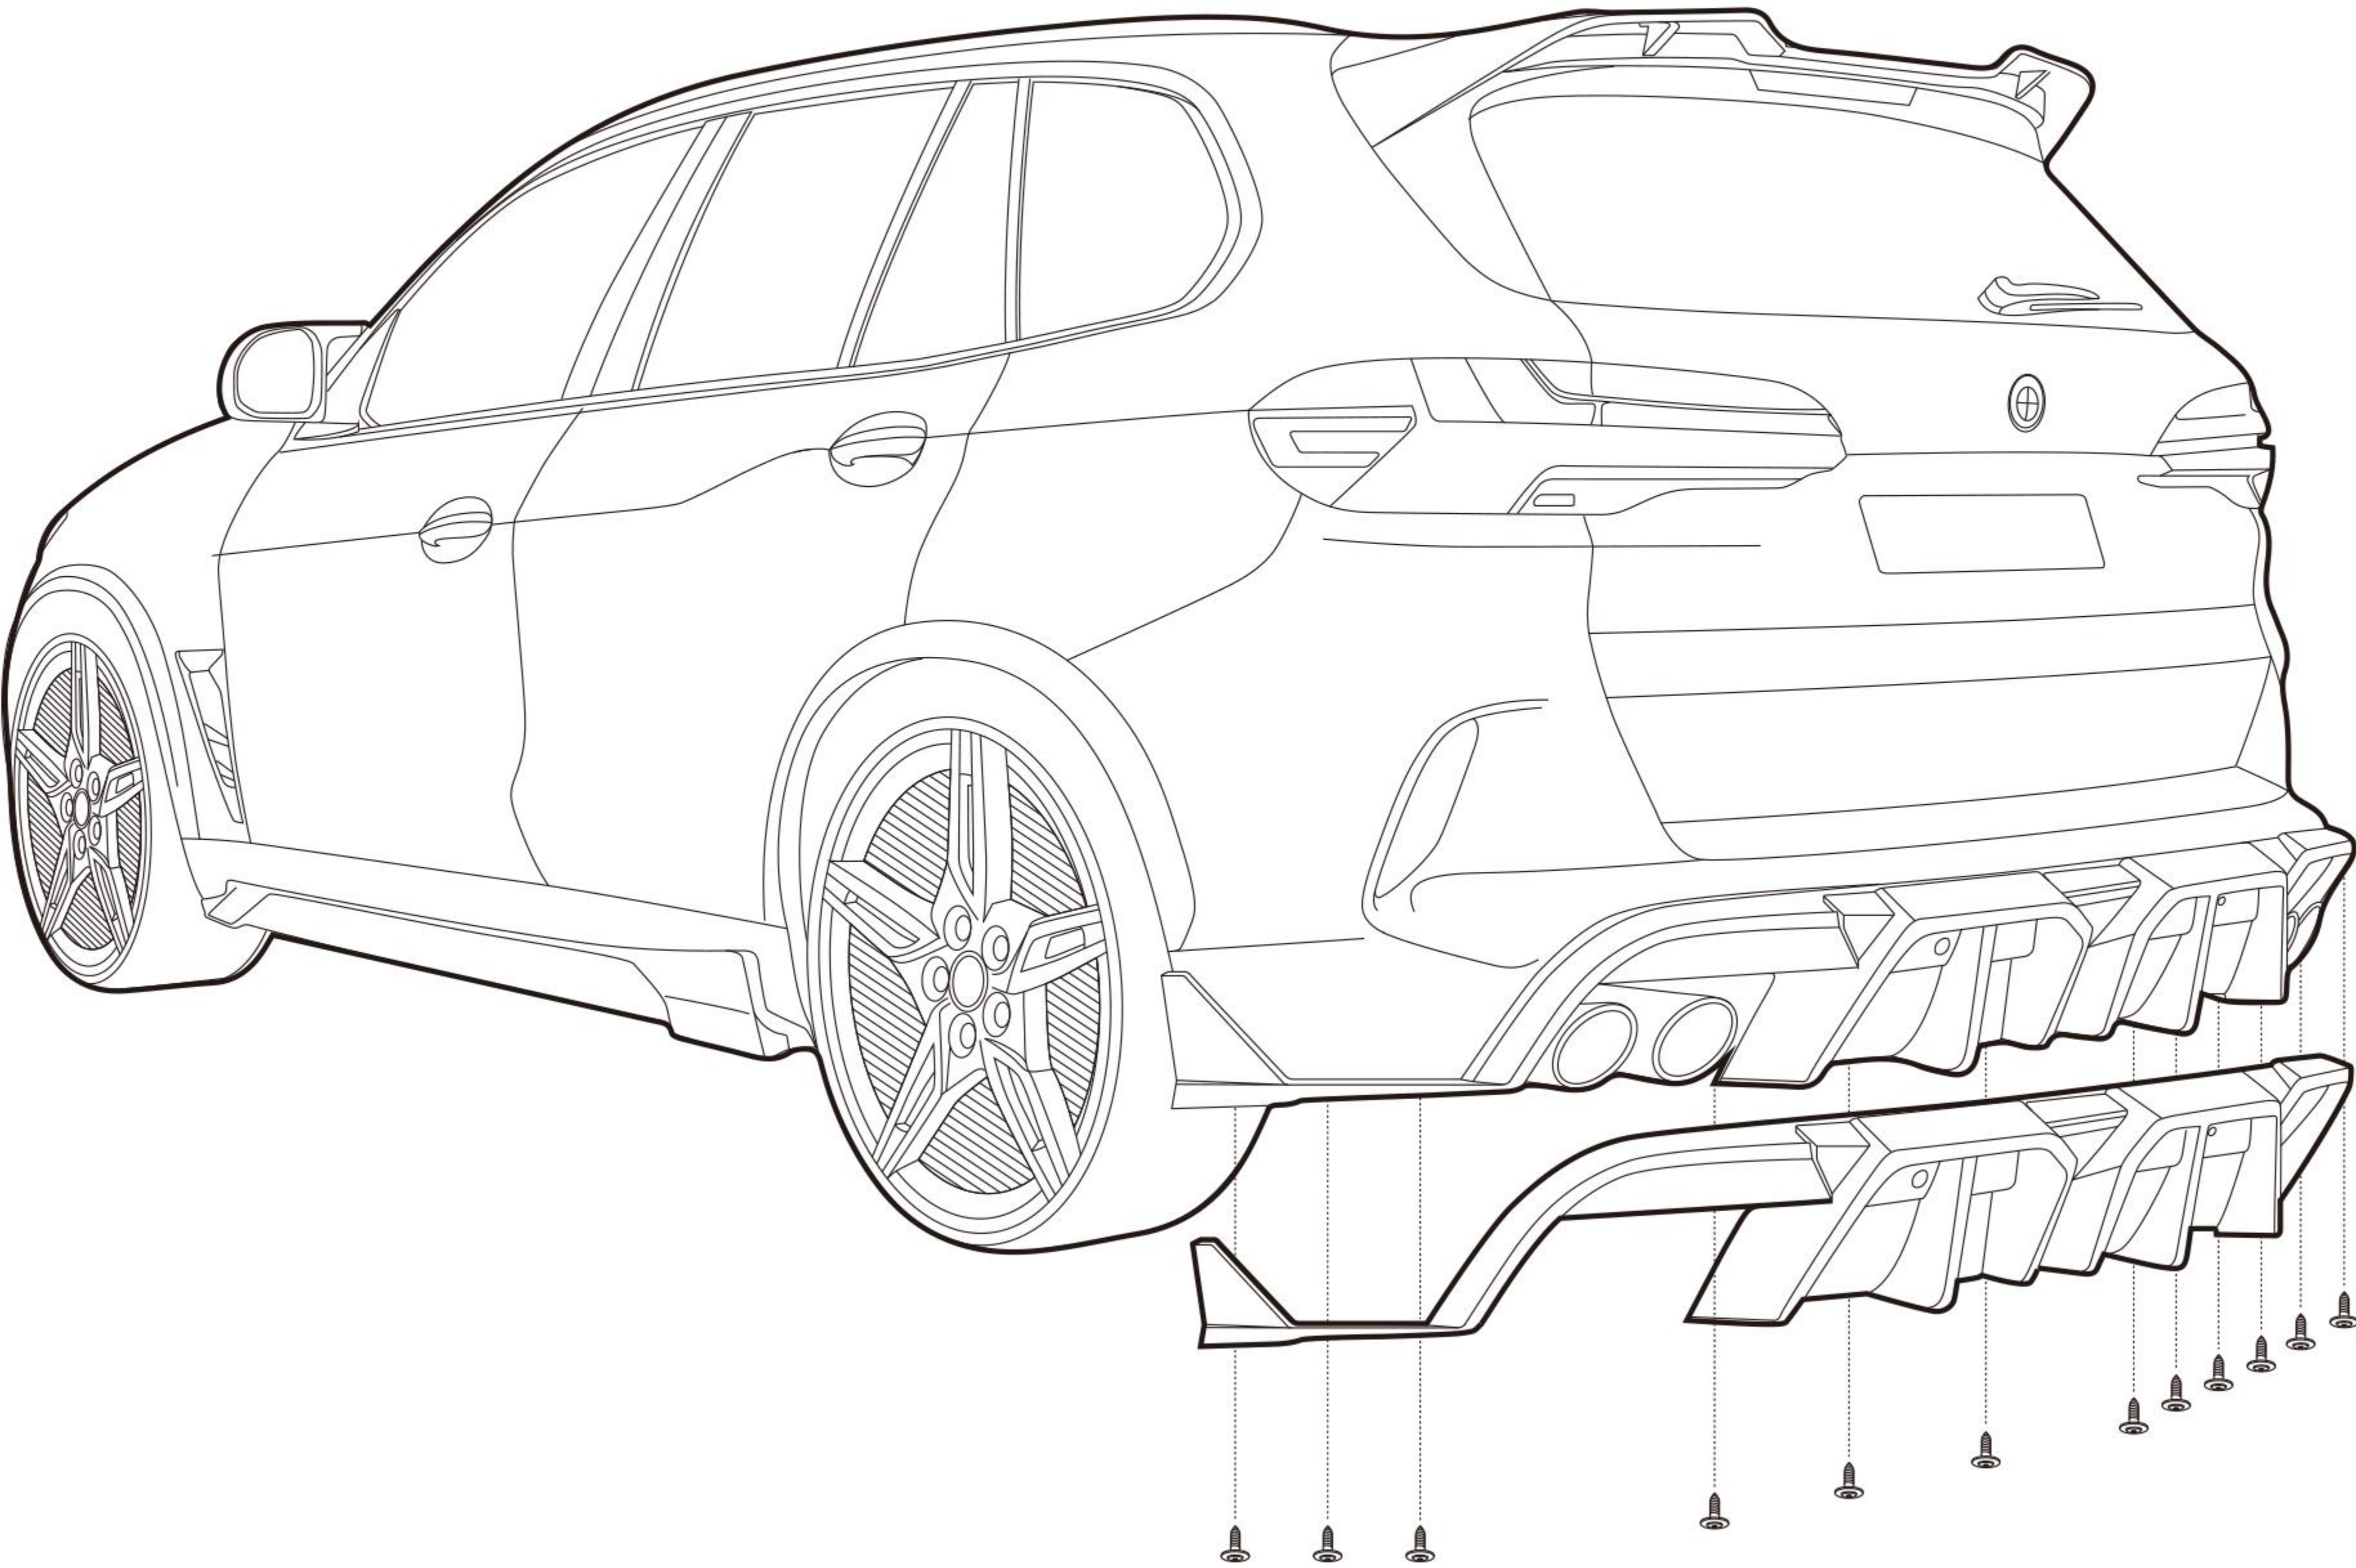


Rear

Carbon Fiber Rear Diffuser

- ① Remove the rear bumper and then remove the OEM Diffuser.
- ② Remove the genuine rear sensor and sensor bracket according to the designated install points.
- ③ Set all components with the power tool according to the designated install points.

All Components

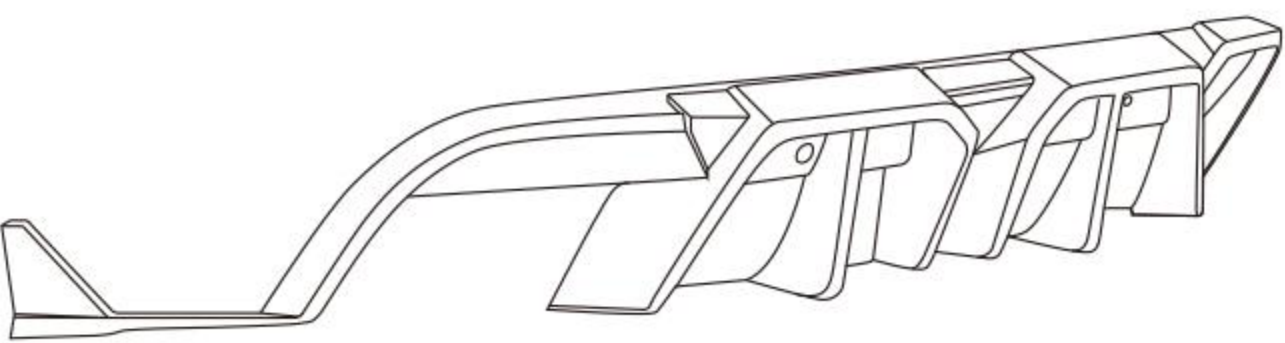

Carbon Fiber Rear Diffuser

x1



x12
Original car screws



x2
Double-Sided tape
3M™ VHB 4910 (10mm)

Install Points

***3M Double-Sided tape installation method** ①Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Tear off the 3M Double-Sided tape protective film and stick it on the car. ④Install the fixing screws at the bottom.

