


Installation Manual

CARBON FIBER REAR DIFFUSER

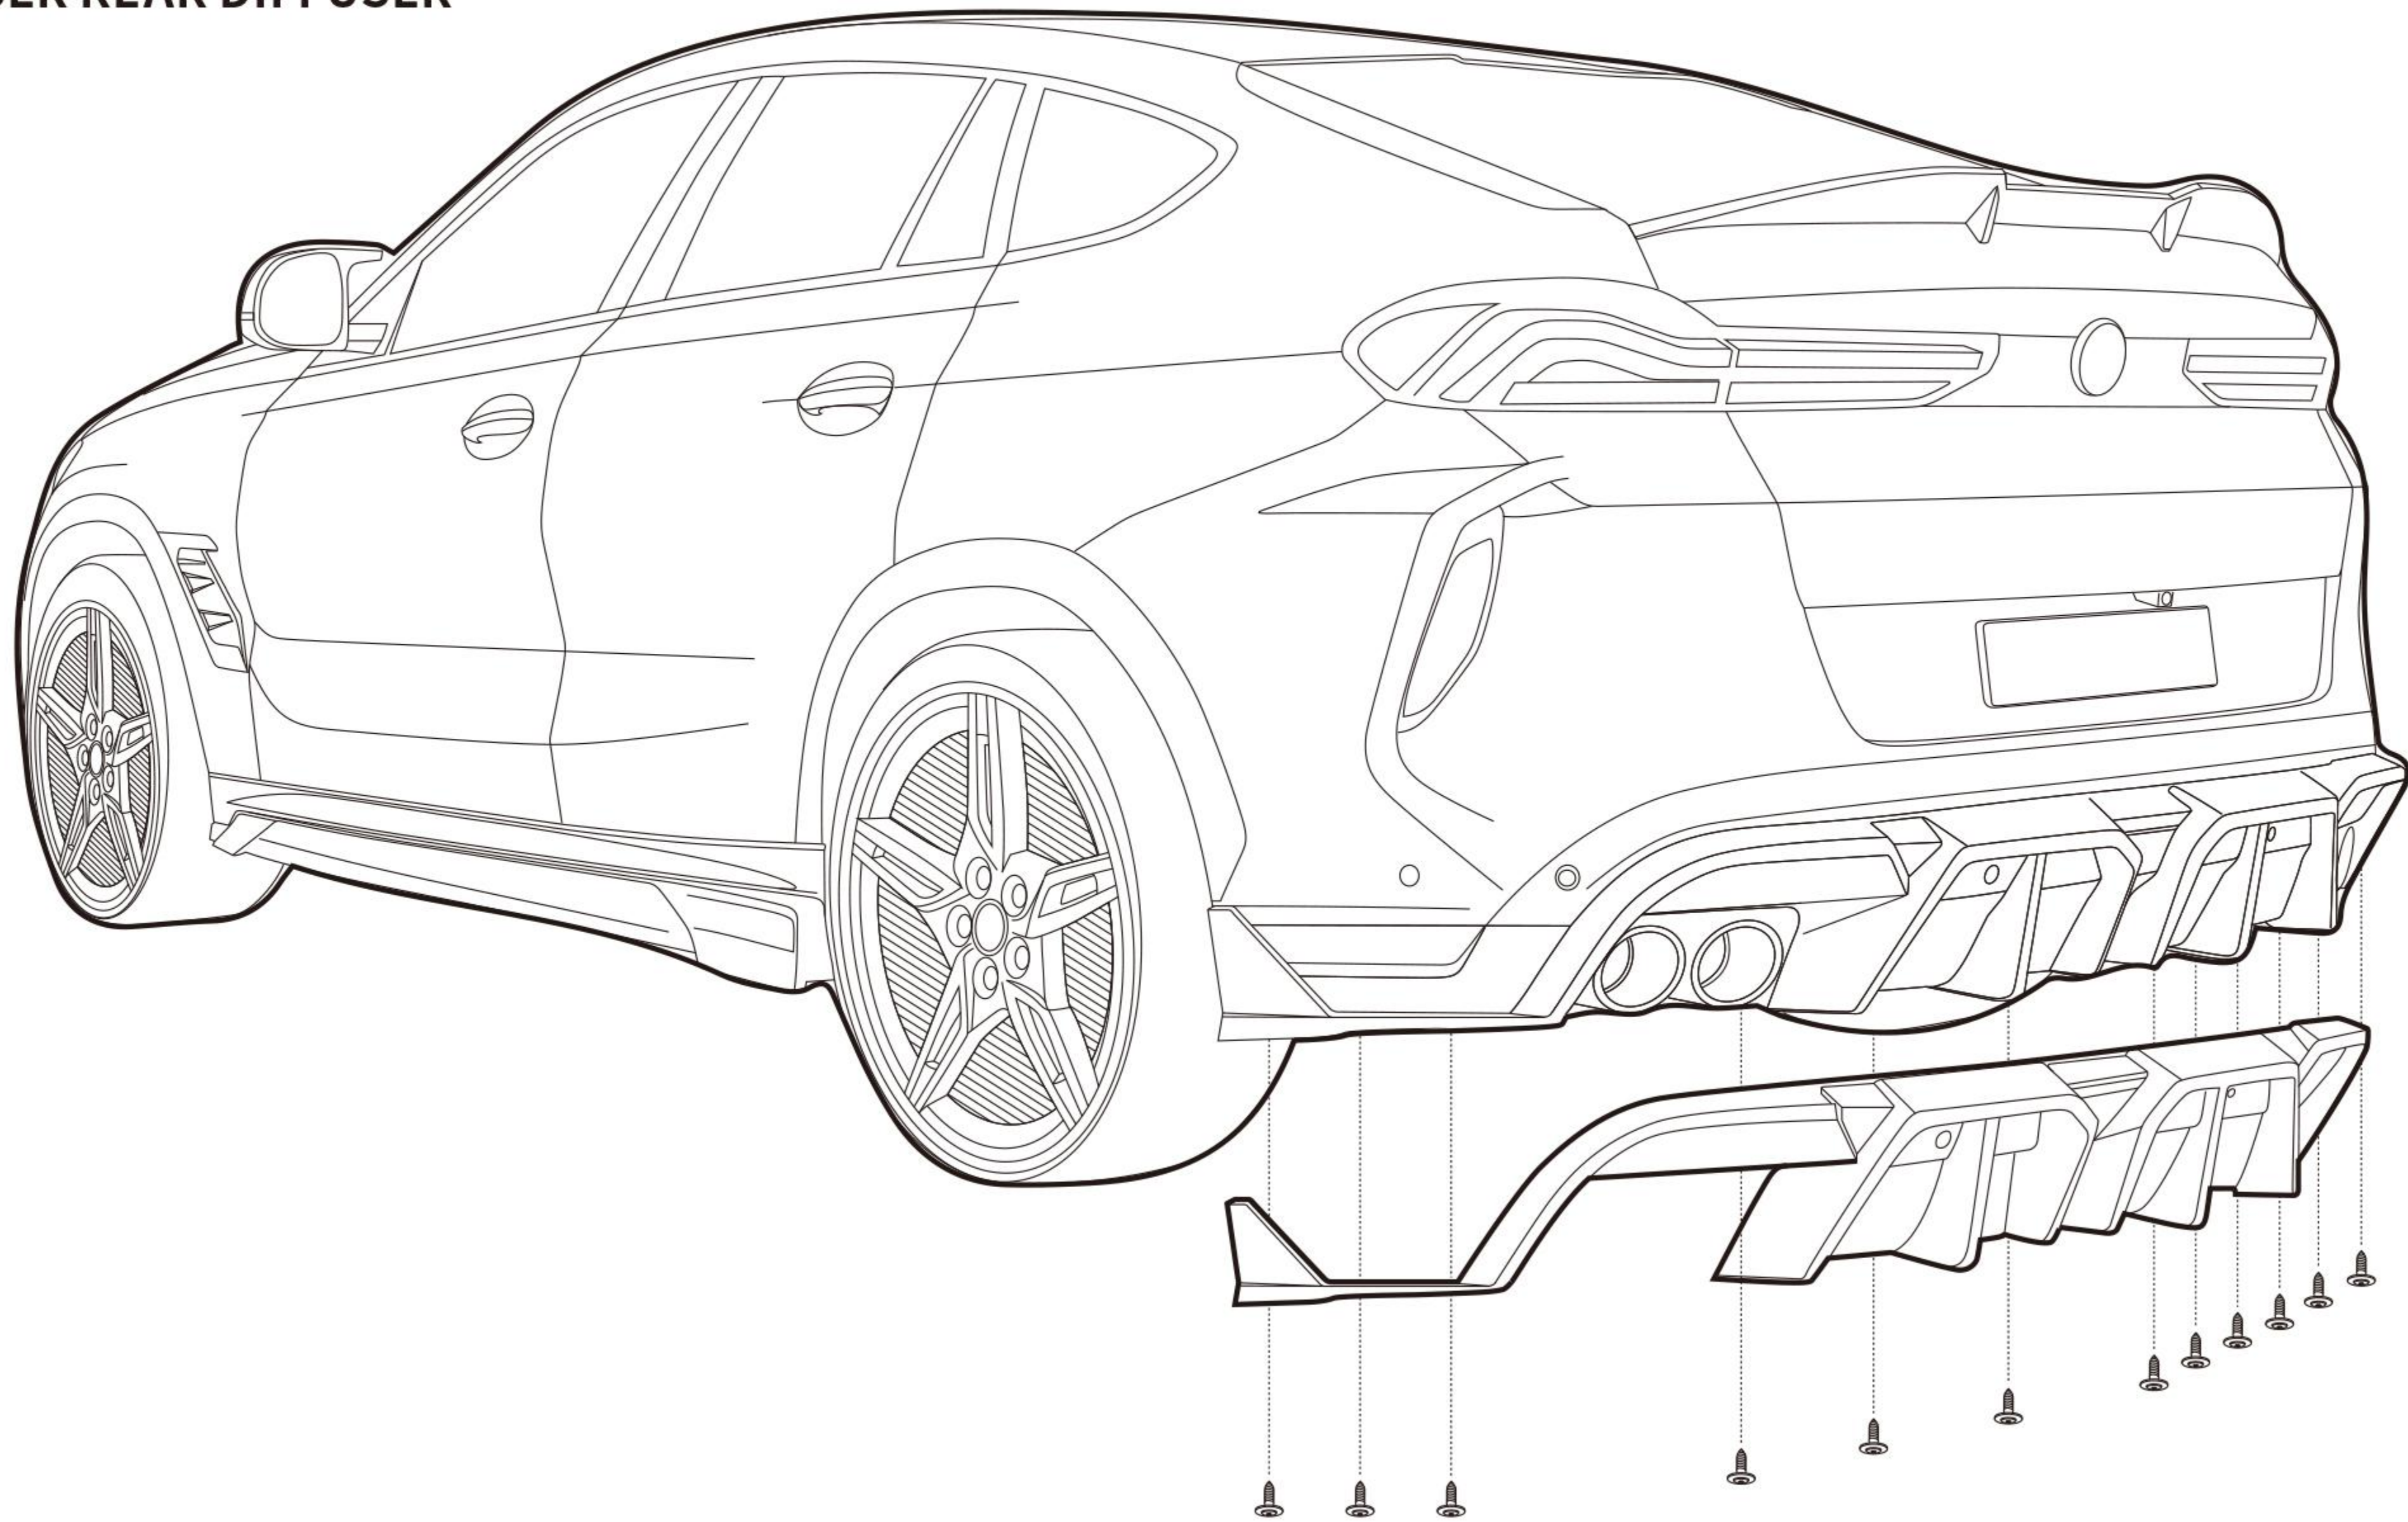


Rear

Carbon Fiber Rear Diffuser


- ① Remove the rear bumper and then remove the OEM Diffuser.
- ② Remove the genuine rear sensor and sensor bracket according to the designated install points.
- ③ Set all components with the power tool according to the designated install points.

All Components

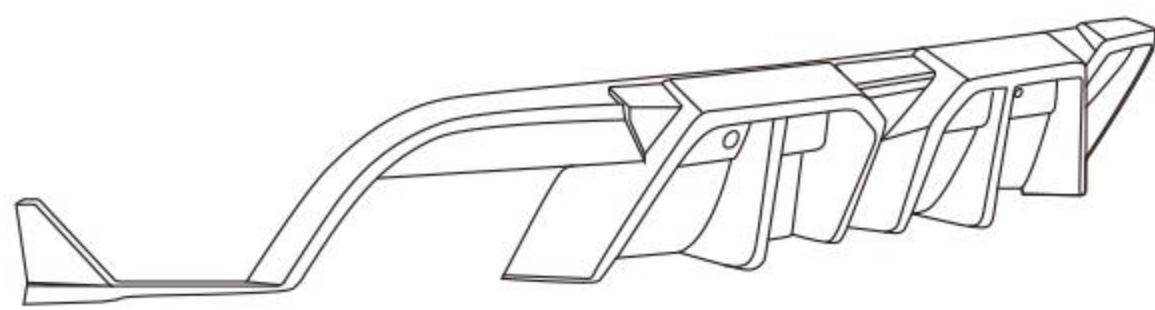

Carbon Fiber Rear Diffuser

x1

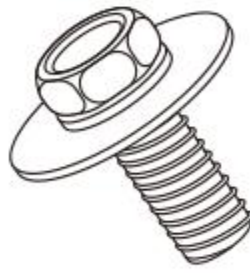				
x8	x4	x2	x2	x2
Original carscrews 原车螺丝	Self-Tappingscrew 自攻螺丝 M5X12	Bolt 螺栓 M6	Nut 螺帽 M6	D-S tape 双面胶带 3M™ VHB 4910 (10mm)

Install Points

- *3M Double-Sided tape installation method** ①Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Tear off the 3M Double-Sided tape protective film and stick it on the car. ④Install the fixing screws at the bottom.

