


Installation Manual 安装手册

CARBON FIBER REAR DIFFUSER

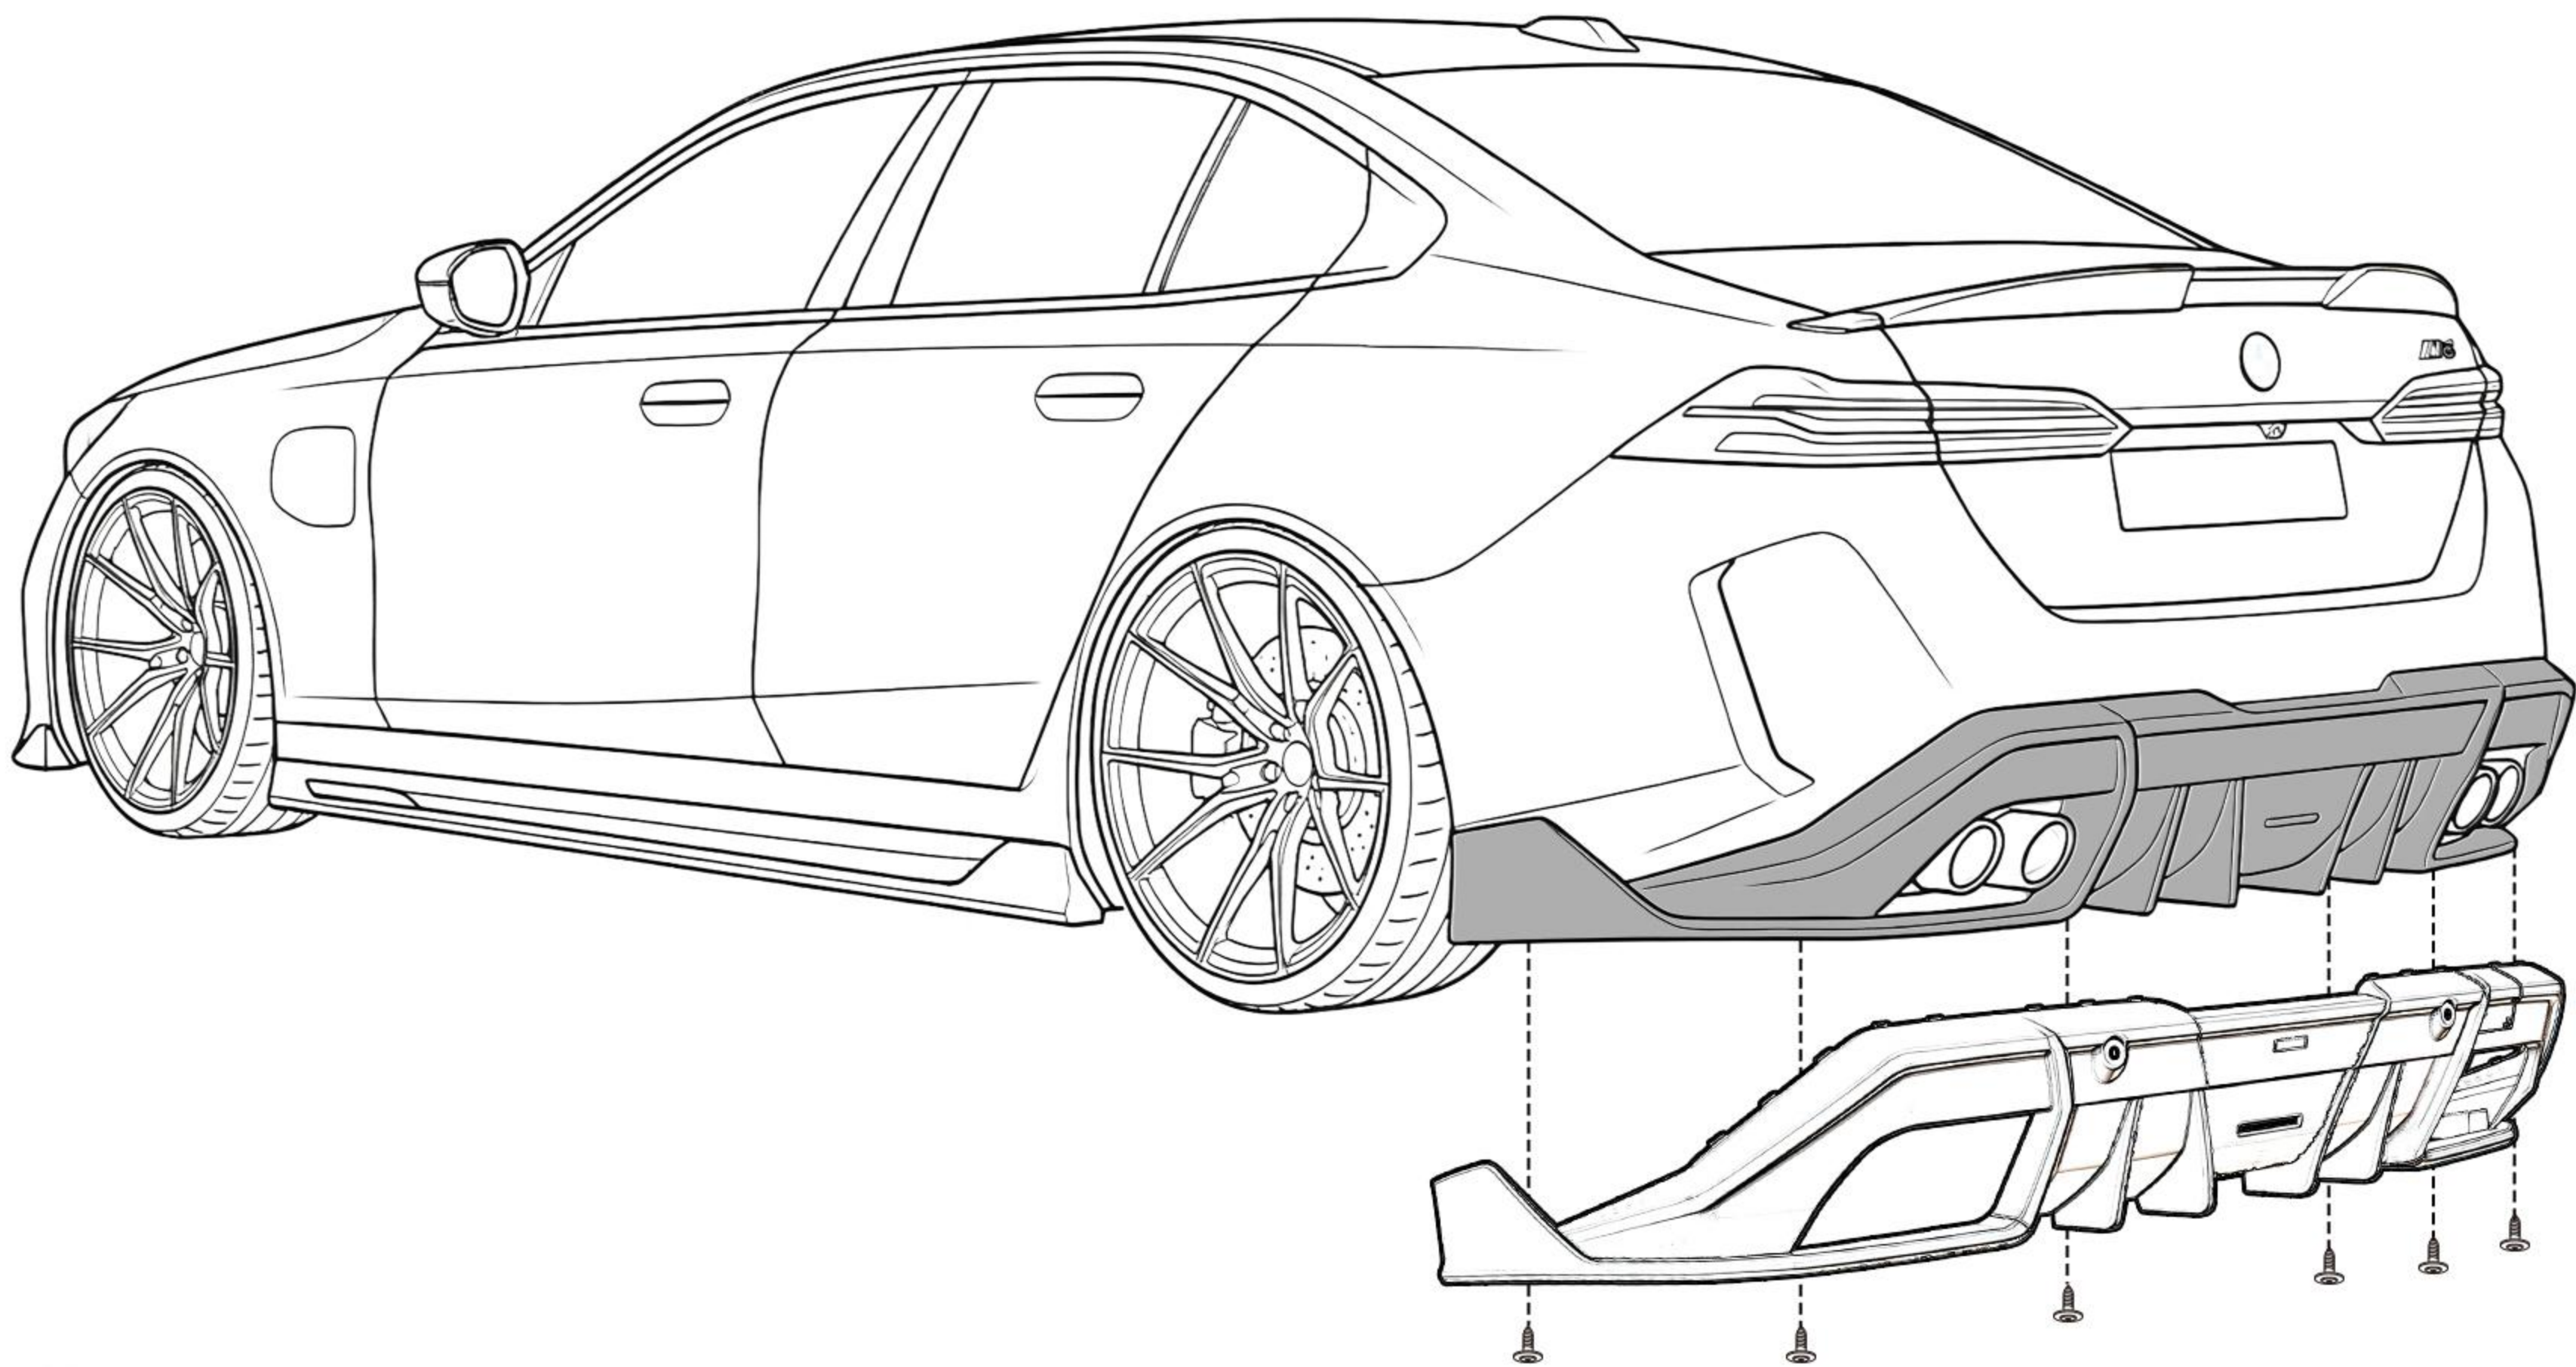


Rear 后部

Carbon Fiber Rear Diffuser 碳纤维后唇

- ① Remove the rear bumper and then remove the OEM Diffuser.
- ② Remove the genuine rear sensor and sensor bracket according to the designated install points.
- ③ Set all components with the power tool according to the designated install points.

- ① 拆下后保险杠,然后拆下 OEM 扩散器。
- ② 按照指定的安装点拆除原厂后传感器和传感器支架。
- ③ 使用电动工具按照指定的安装点安装好所有部件。

All Components 所有组件

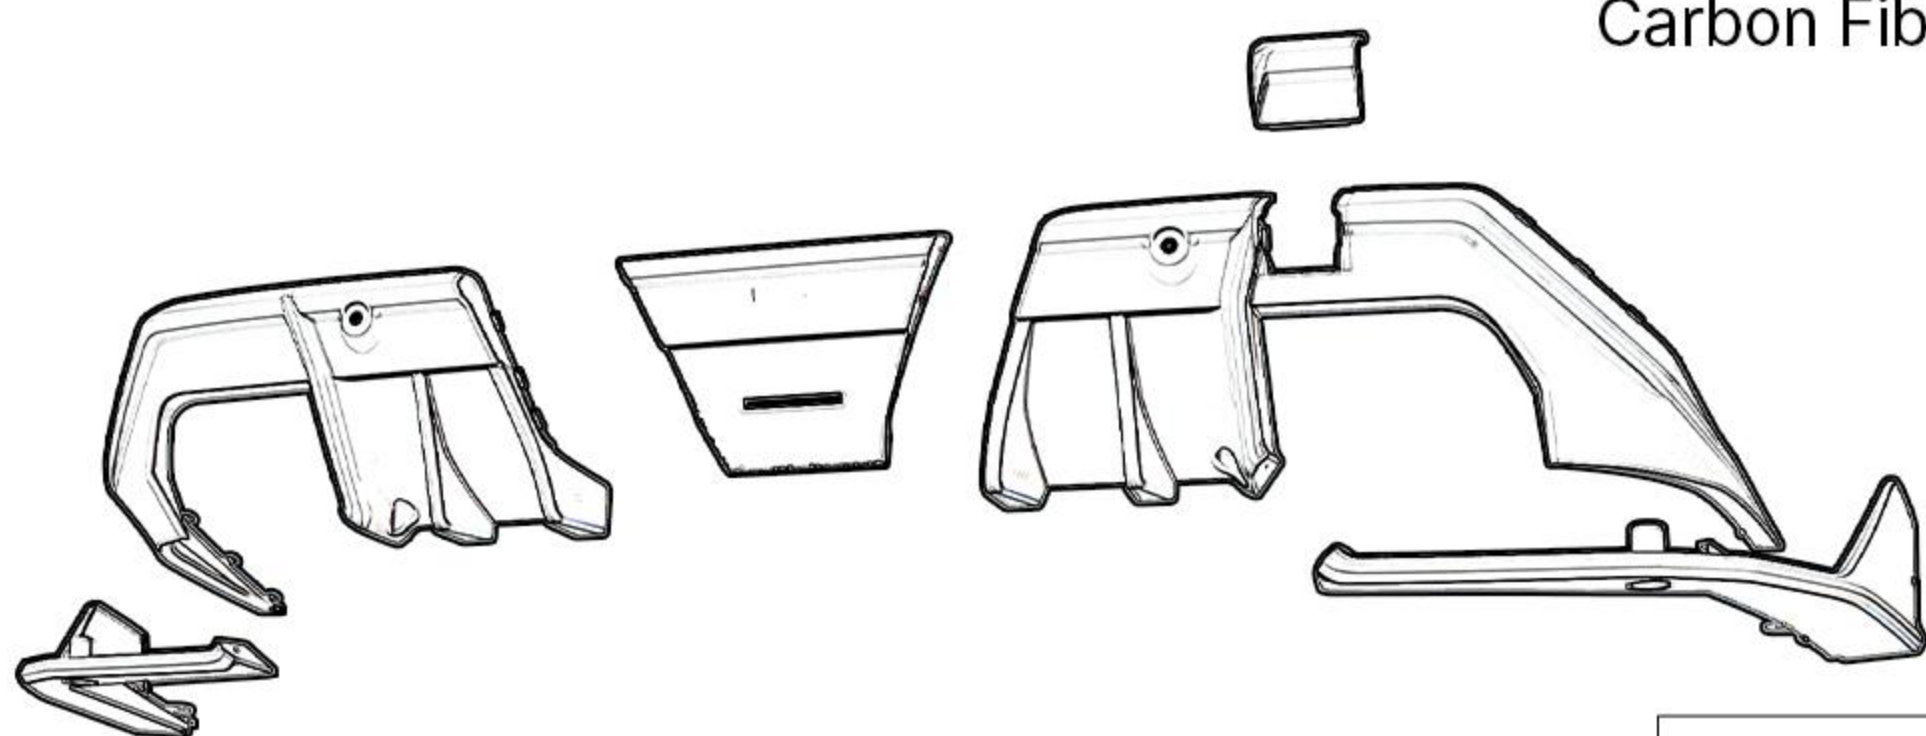

Carbon Fiber Rear Diffuser  
碳纤维后唇



x6

Original car screw  
原车螺丝  
M6X16



D-S tape/A-sealant  
双面胶带/玻璃胶  
3M™ VHB 4910 (10mm)

Install Points 安装点

The upper edge is secured using clips that lock into the mounting points.

边缘用卡扣与安装位卡紧

Double-Sided tape  
/Adhesive sealant

双面胶带/玻璃胶

Original Car Screws 原车螺丝

