


Installation Manual 安装手册

CARBON FIBER REAR DIFFUSER

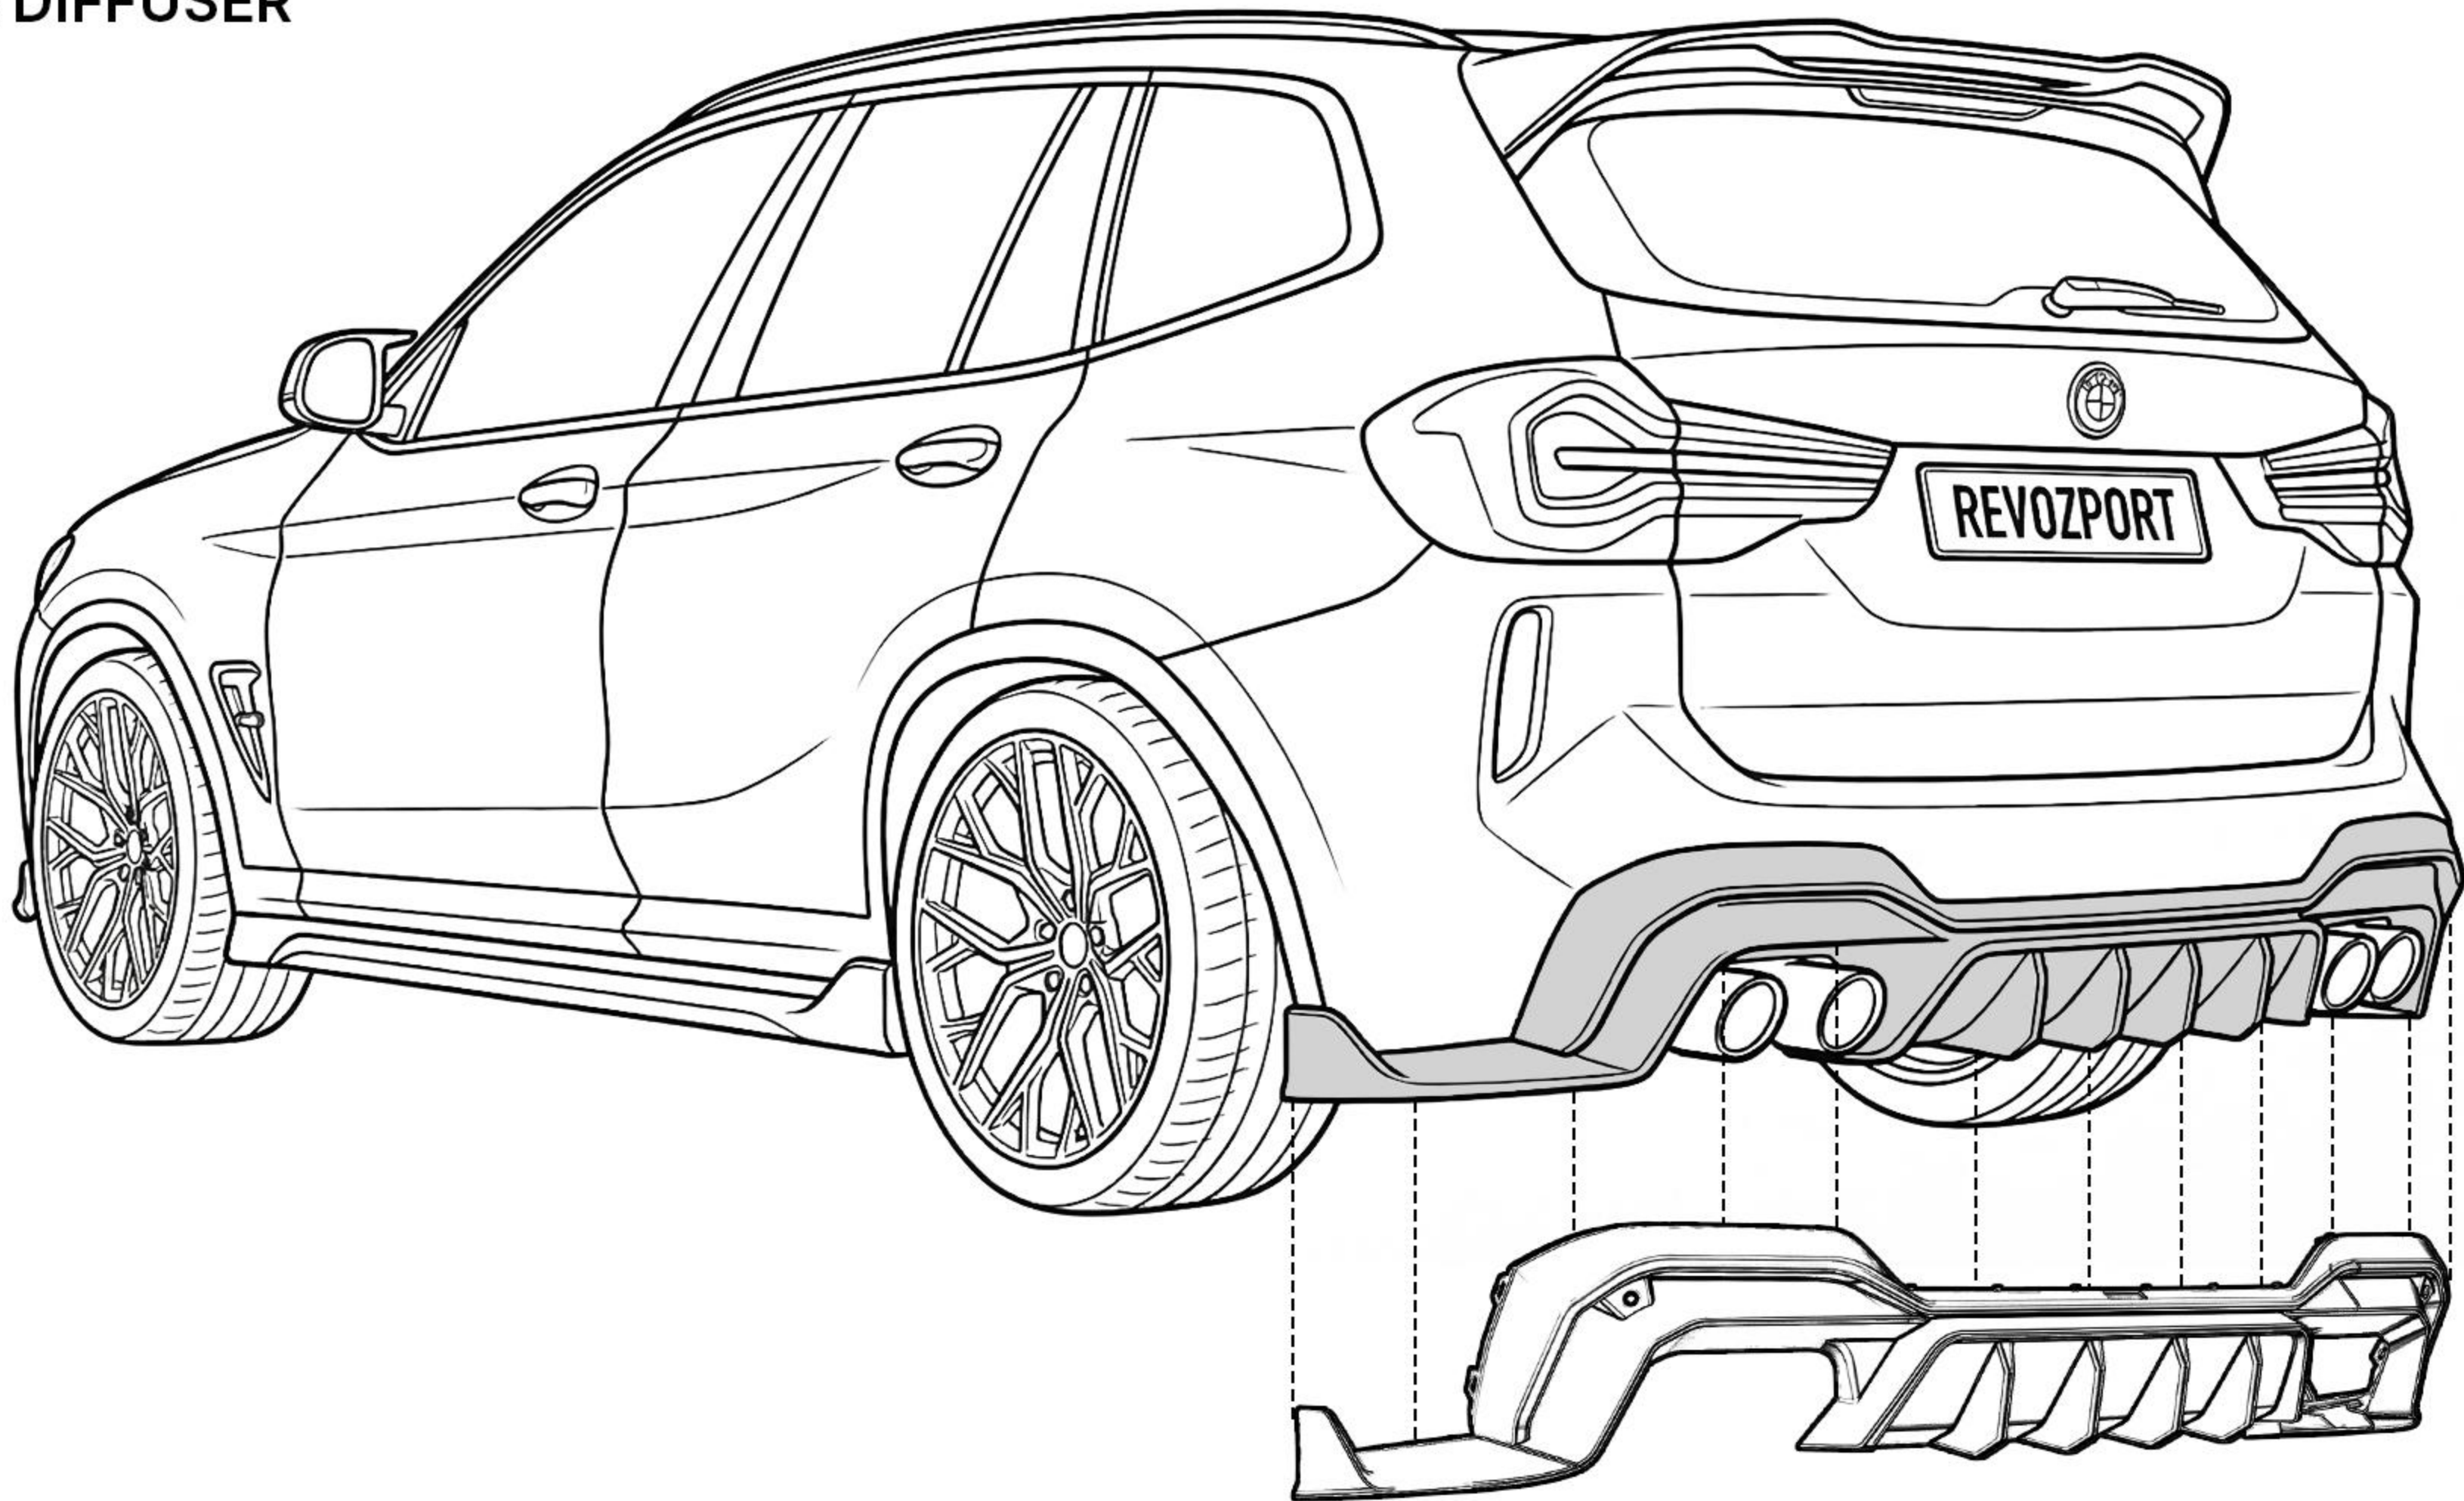

Rear 后部

Carbon Fiber Rear Diffuser 碳纤维后唇

- ① Remove the rear bumper and then remove the OEM Diffuser.

② Remove the genuine rear sensor and sensor bracket according to the designated install points.


③ Set all components with the power tool according to the designated install points.
- ① 拆下后保险杠,然后拆下 OEM 扩散器。

② 按照指定的安装点拆除原厂后传感器和传感器支架。

③ 使用电动工具按照指定的安装点安装好所有部件。

All Components 所有组件

Carbon Fiber Rear Diffuser
碳纤维后唇

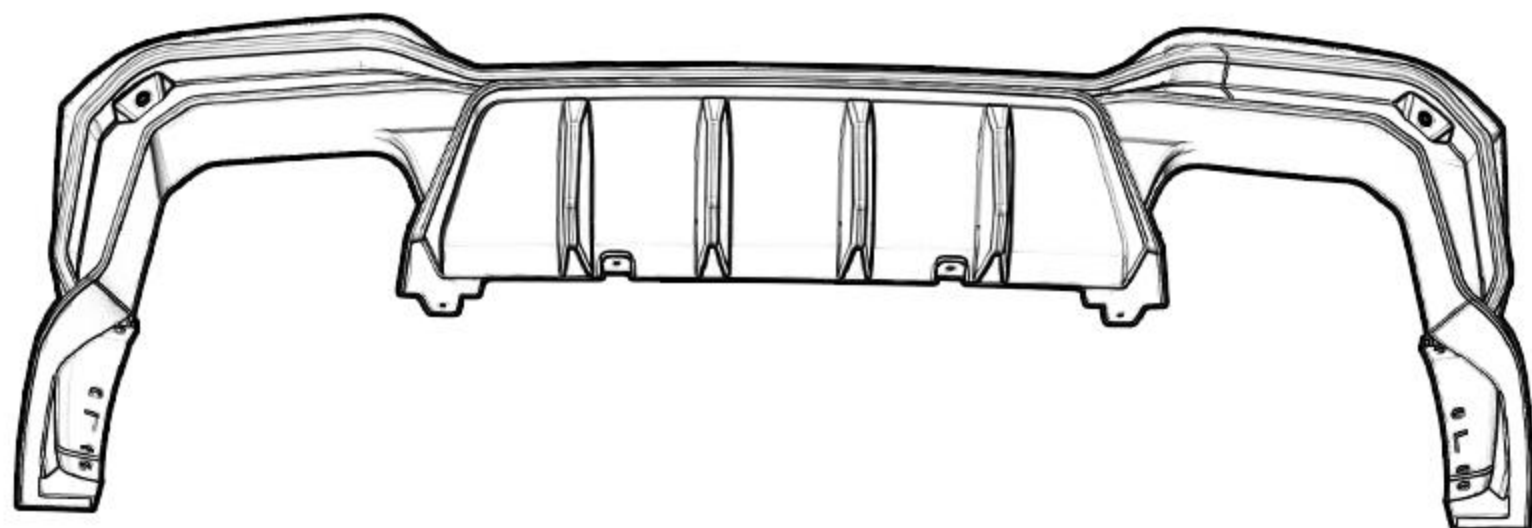



x12

Original car screw
原车螺丝
M6X16



D-S tape/A-sealant
双面胶带/玻璃胶
3M™ VHB 4910 (10mm)

Install Points 安装点

*3M Double-Sided tape installation method

- ① Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact. ② Use the included primer to paint the body (surface primer will scratch the paint). ③ Tear off the 3M Double-Sided tape protective film and stick it on the car. ④ Install the fixing screws at the bottom.

*3M双面胶安装方式

- ① 使用酒精/丙酮清洁3M双面胶接触的车身面。② 使用随附的底漆对车身进行涂漆（表面底漆会刮伤车漆）。③ 撕开3M双面胶保护膜粘贴在车上。④ 底部安装固定螺丝。

