

GT尾翼拆卸手册 GT Tail Wing Removal Manual

碳纤维产品清单 List of carbon fiber products

|   |    |  |                                    |
|---|----|--|------------------------------------|
| 1 | X1 |  | 尾翼板<br>tail panel                  |
| 2 | X2 |  | 左右侧板<br>Left and right side panels |

金属件产品清单 List of carbon fiber products

|   |    |  |                         |
|---|----|--|-------------------------|
| 3 | X2 |  | 鹅颈架<br>Gooseneck rack   |
| 4 | X2 |  | 鹅颈架底座<br>Gooseneck base |

产品清单 Product list

配件清单 Accessories


|                                          |                               |                                  |                            |                              |                    |                       |
|------------------------------------------|-------------------------------|----------------------------------|----------------------------|------------------------------|--------------------|-----------------------|
|                                          |                               |                                  |                            |                              |                    |                       |
| X1 赠送的钻头<br>Complimentary electric drill | x4<br>垫片<br>Gasket<br>M8X24X2 | x14<br>垫片<br>Gasket<br>M6X12X1.5 | x4<br>螺杆<br>screw<br>M8X50 | x14<br>螺杆<br>Gasket<br>M6X25 | x4<br>套筒<br>sleeve | x4<br>螺母<br>nut<br>M6 |

步骤1:机盖打孔。(用配好的定位器如下图开孔。)


Step 1: Perforate the cover. (Use the fitted locator to make the holes as shown below.)

GT尾翼拆卸手册 GT Tail Wing Removal Manual


步骤2: 先将鹅颈架底座如图安装到尾盖上。  
(注: M8螺杆, 需要破坏原车螺母。固定螺丝分赛道和街道 (m6) 两种, 根据需求与商家确认。)  
Step 2: First install the base of the gooseneck frame to the tail cap as shown in the figure.  
(Note: M8 screw, need to destroy the original car nut.) Set the screws  
There are two types: track and street (M6), and confirm with the merchant according to the demand.)

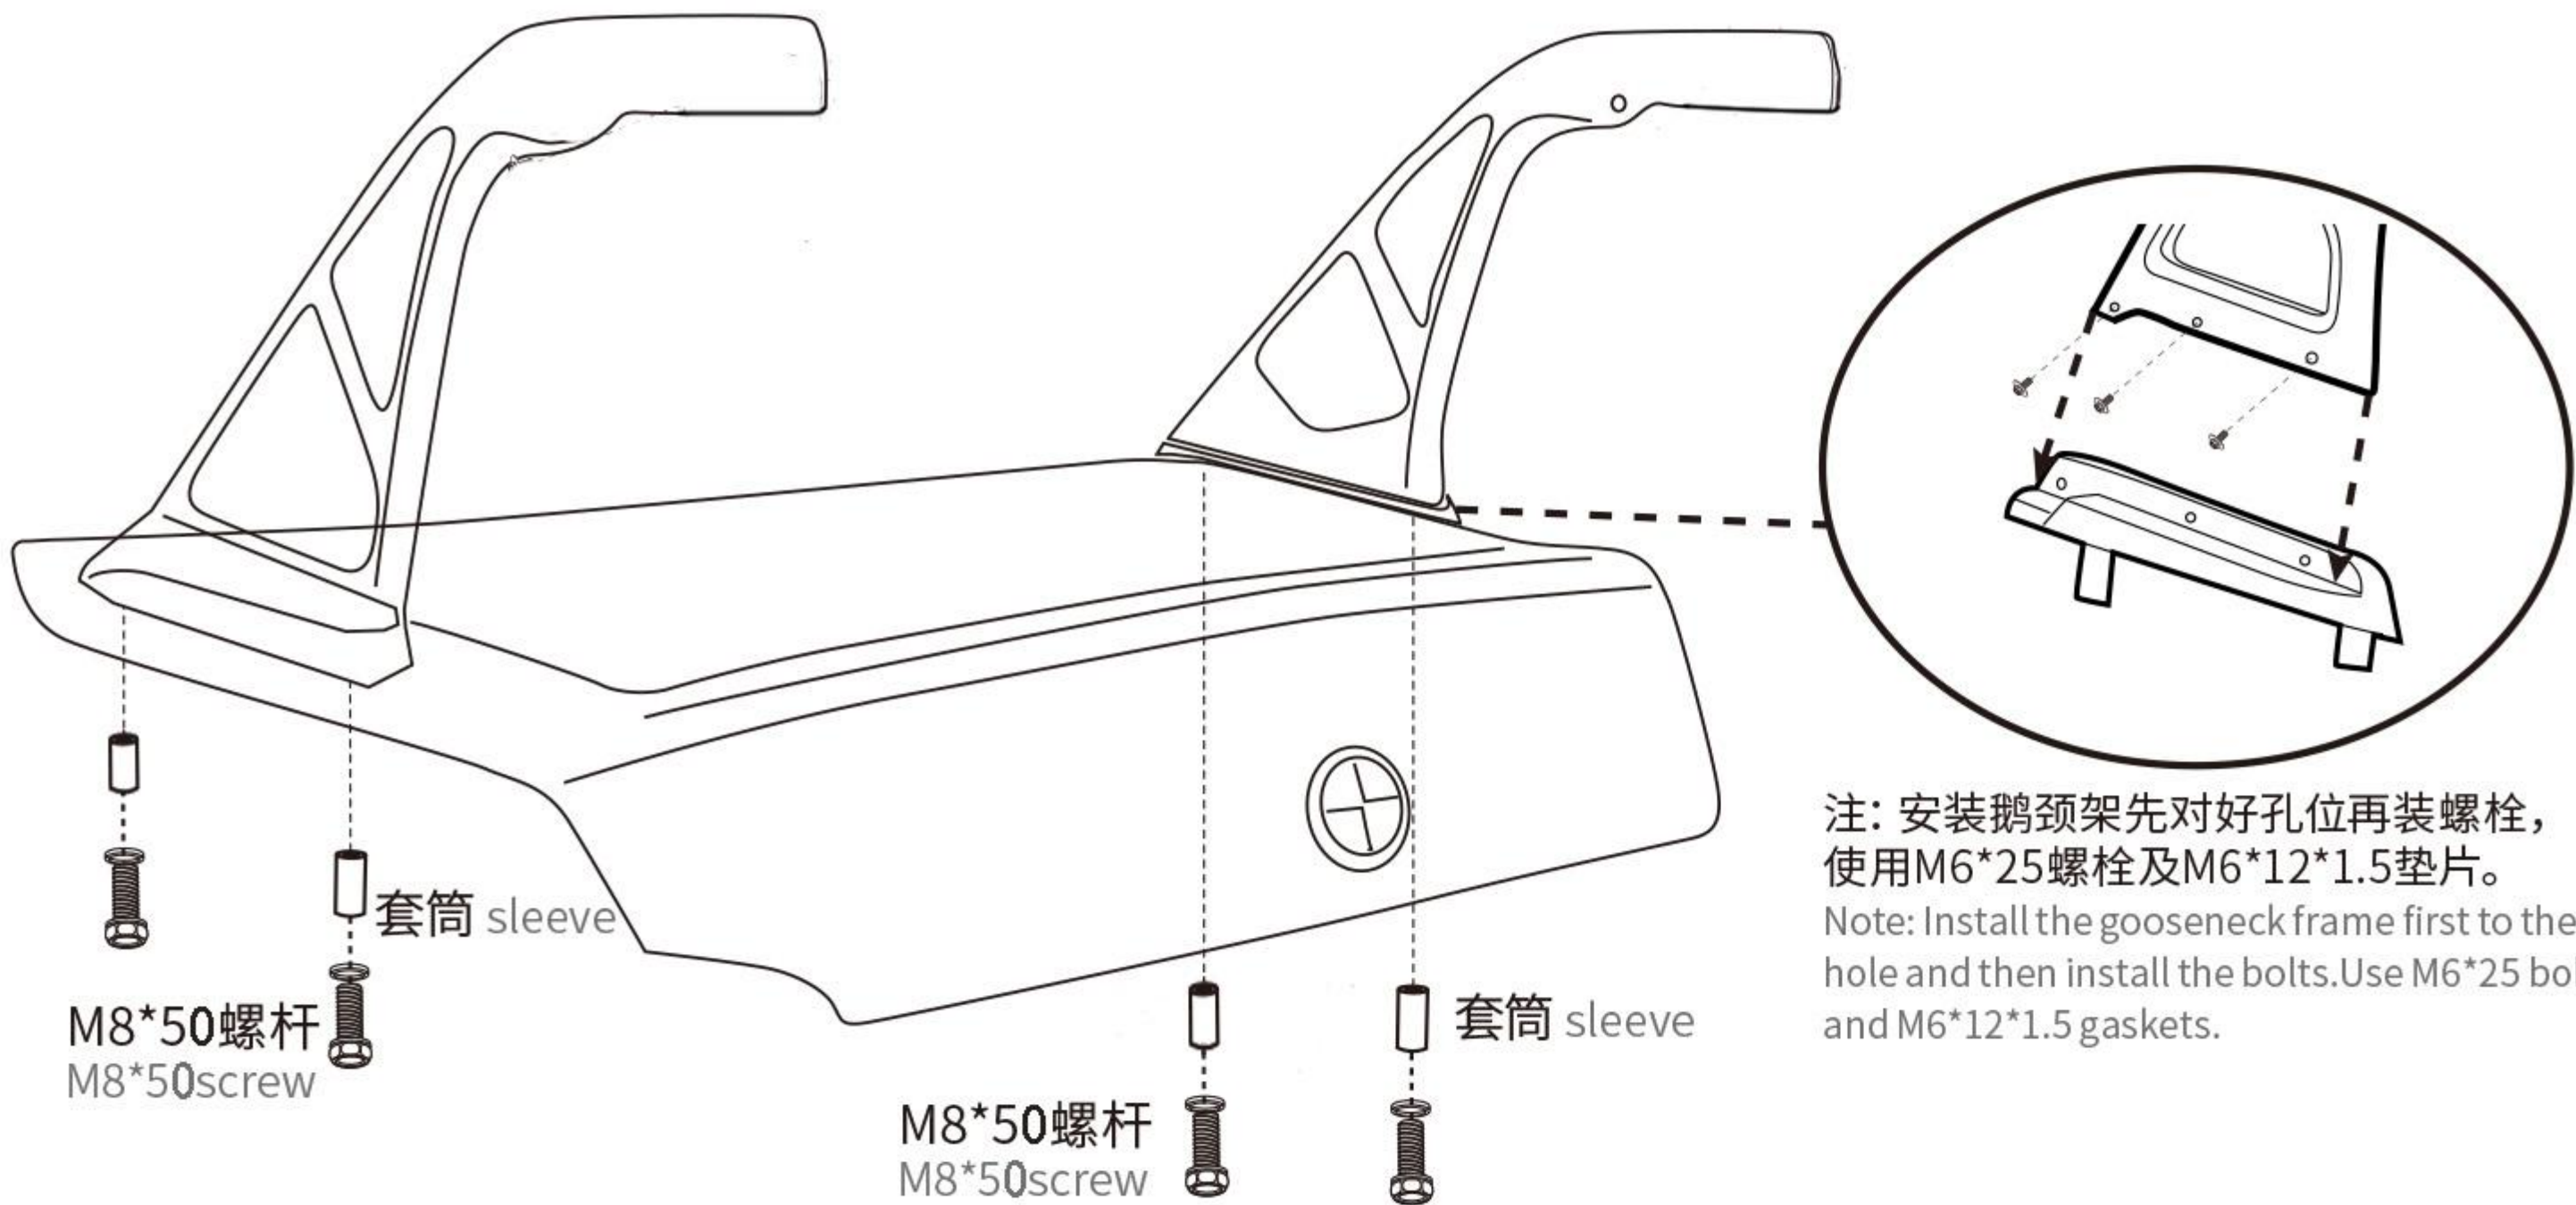

步骤3: 安装尾翼风刀组件。  
使用M6\*25螺杆, M6\*12\*1.5垫片  
Step 4: Install the tail wind blade assembly.  
Use M6\*25 screw, M6\*12\*1.5 spacer.

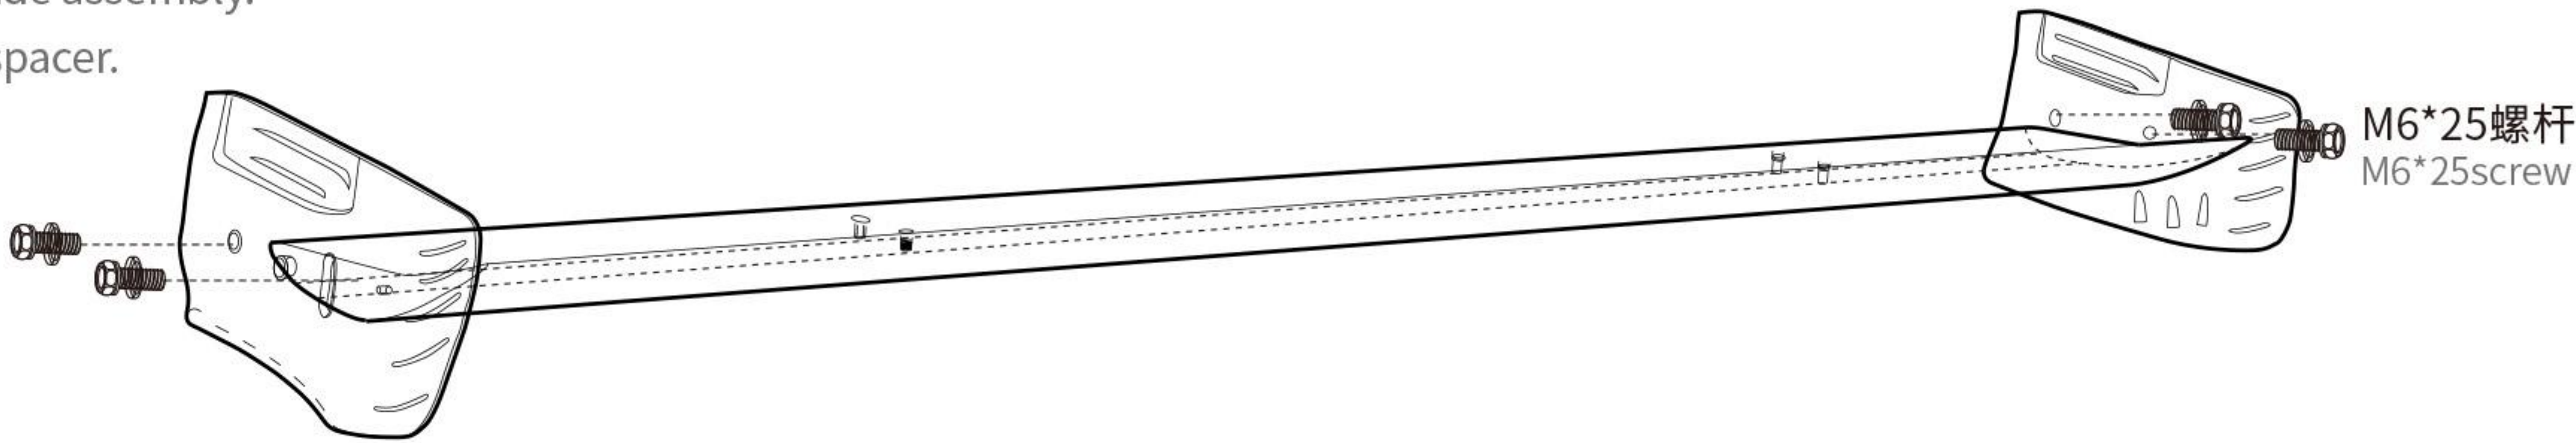

步骤4: 把尾翼安装到尾翼支撑架上。完成安装。  
使用M6\*25螺杆, M8\*12\*1.5垫片  
Step 5: Install the tailgate onto the tailgate support bracket. Finish the installation.  
Use M6\*25 screw, M8\*12\*1.5 spacer.

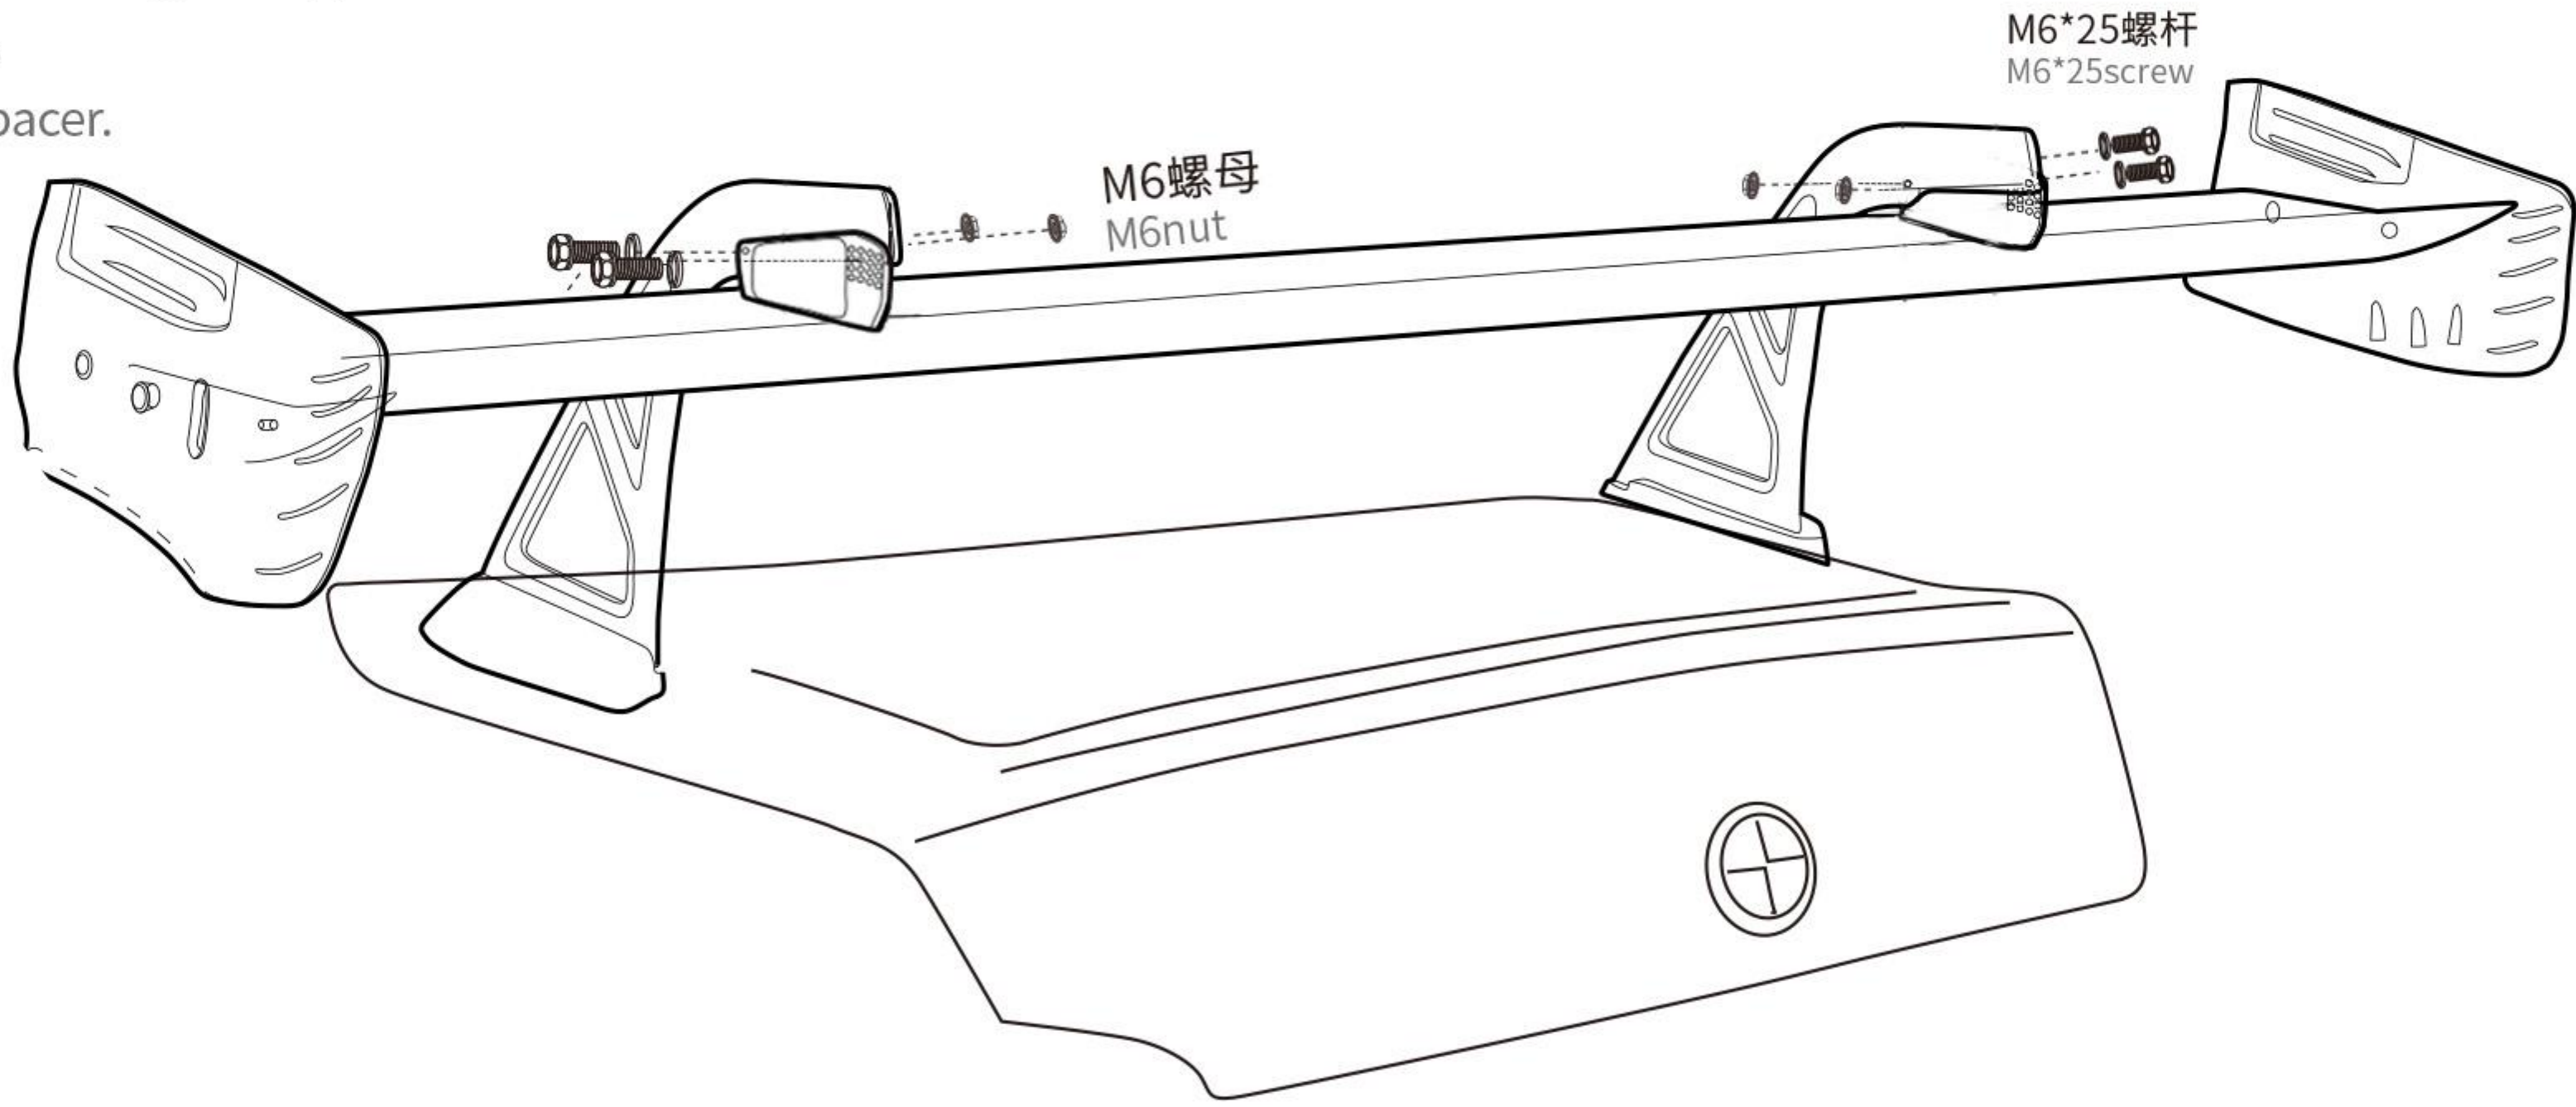

步骤5: 完成安装。  
Step 6: Complete the installation.

