


Installation Manual 安装手册

CARBON FIBER ROOF SPOILER

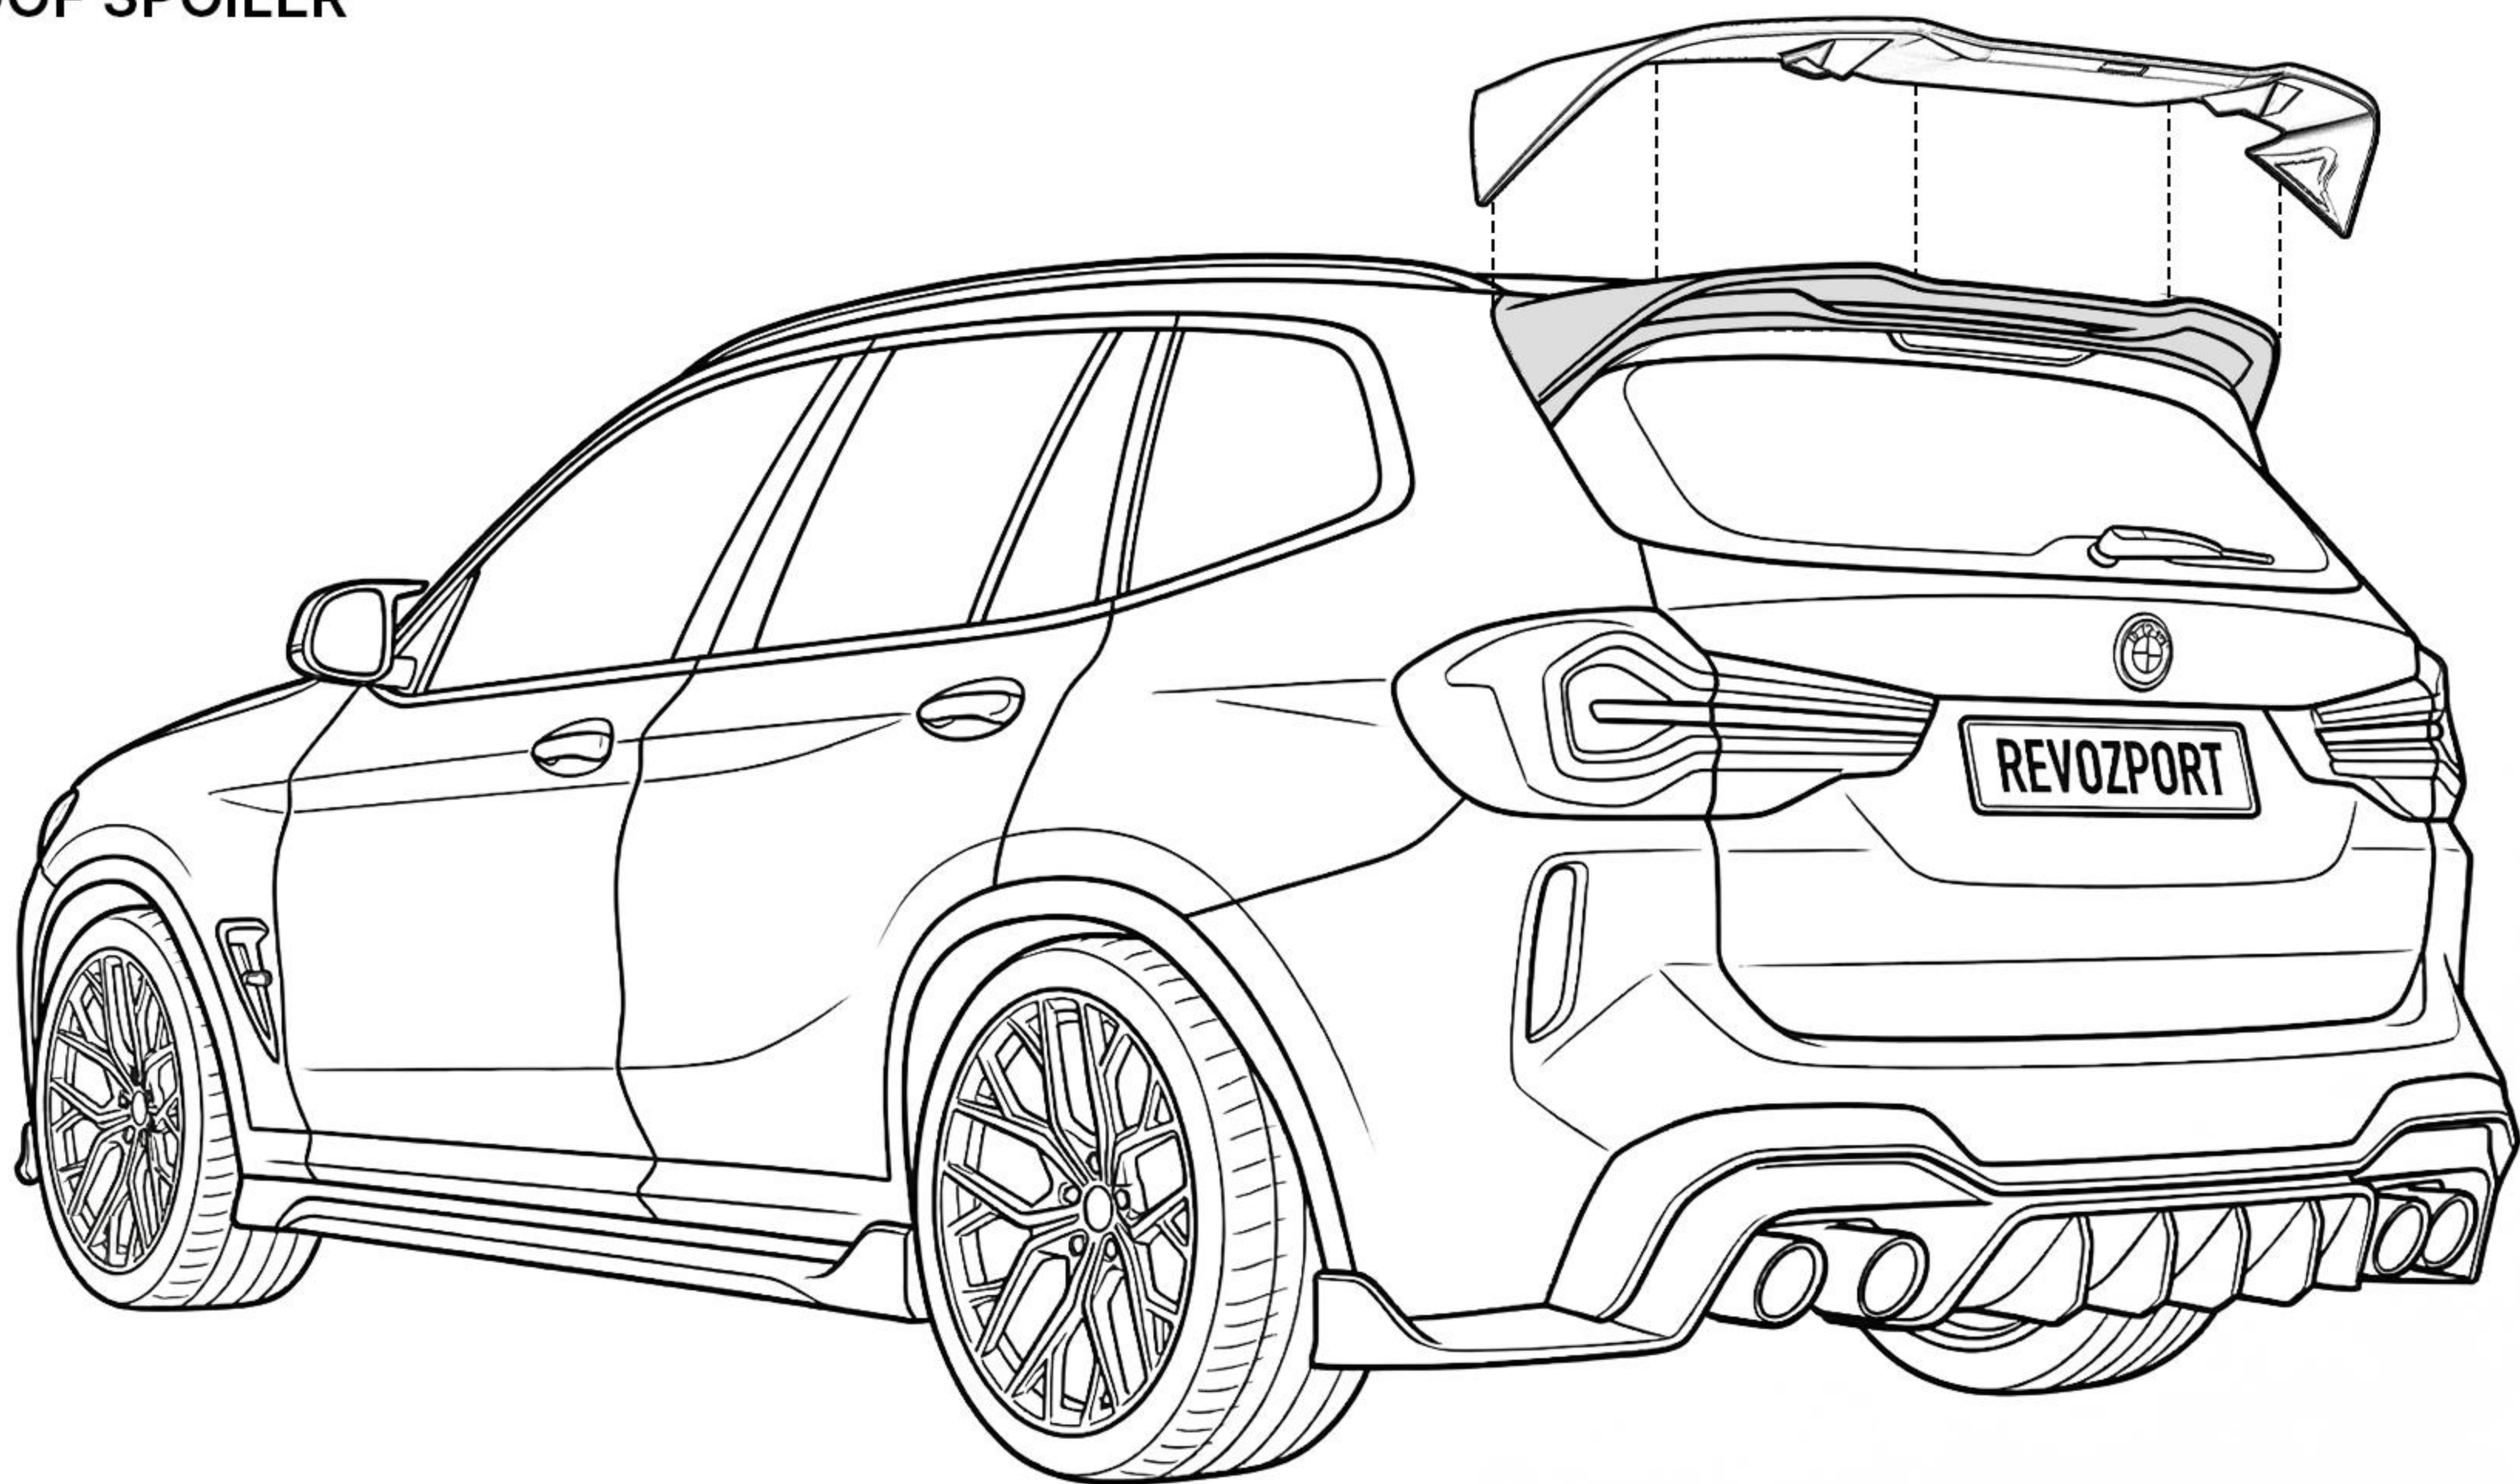


Rear 后部

Carbon Fiber Roof Spoiler 碳纤维顶翼

- ① After applying primer on the car body, remove the film of the double-sided tape slightly outwar(Or apply Adhesive sealant) .Once fitting is adjusted perfectly completely remove double-sided tape.
- ① 在车身上涂完底漆后,将双面胶带的薄膜稍微向外撕去(或涂上玻璃胶)。完美调整贴合后,完全撕掉双面胶带。

All Components 所有组件

Carbon Fiber Roof Spoiler  
碳纤维顶翼

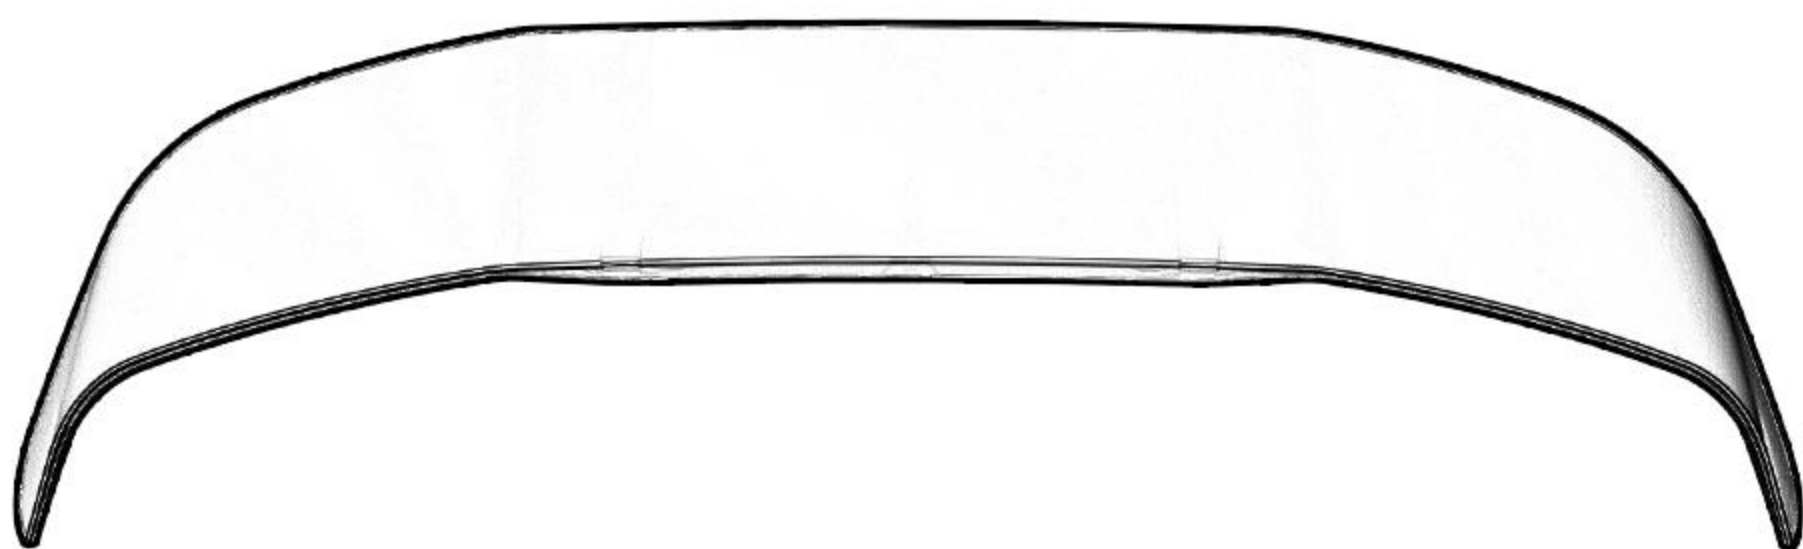


D-S tape/A-sealant  
双面胶带/玻璃胶  
3M™ VHB 4910 (10mm)

Install Points 安装点

\*3M Double-Sided tape installation method

- ① Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact.② Use the included primer to paint the body (surface primer will scratch the paint).③ Tear off the 3M Double-Sided tape protective film and stick it on the car. ④ Install the fixing screws at the bottom.
- \*3M双面胶安装方式  
① 使用酒精/丙酮清洁3M双面胶接触的车身面。② 使用随附的底漆对车身进行涂漆（表面底漆会刮伤车漆）。③ 撕开3M双面胶保护膜粘贴在车上。④ 底部安装固定螺丝。

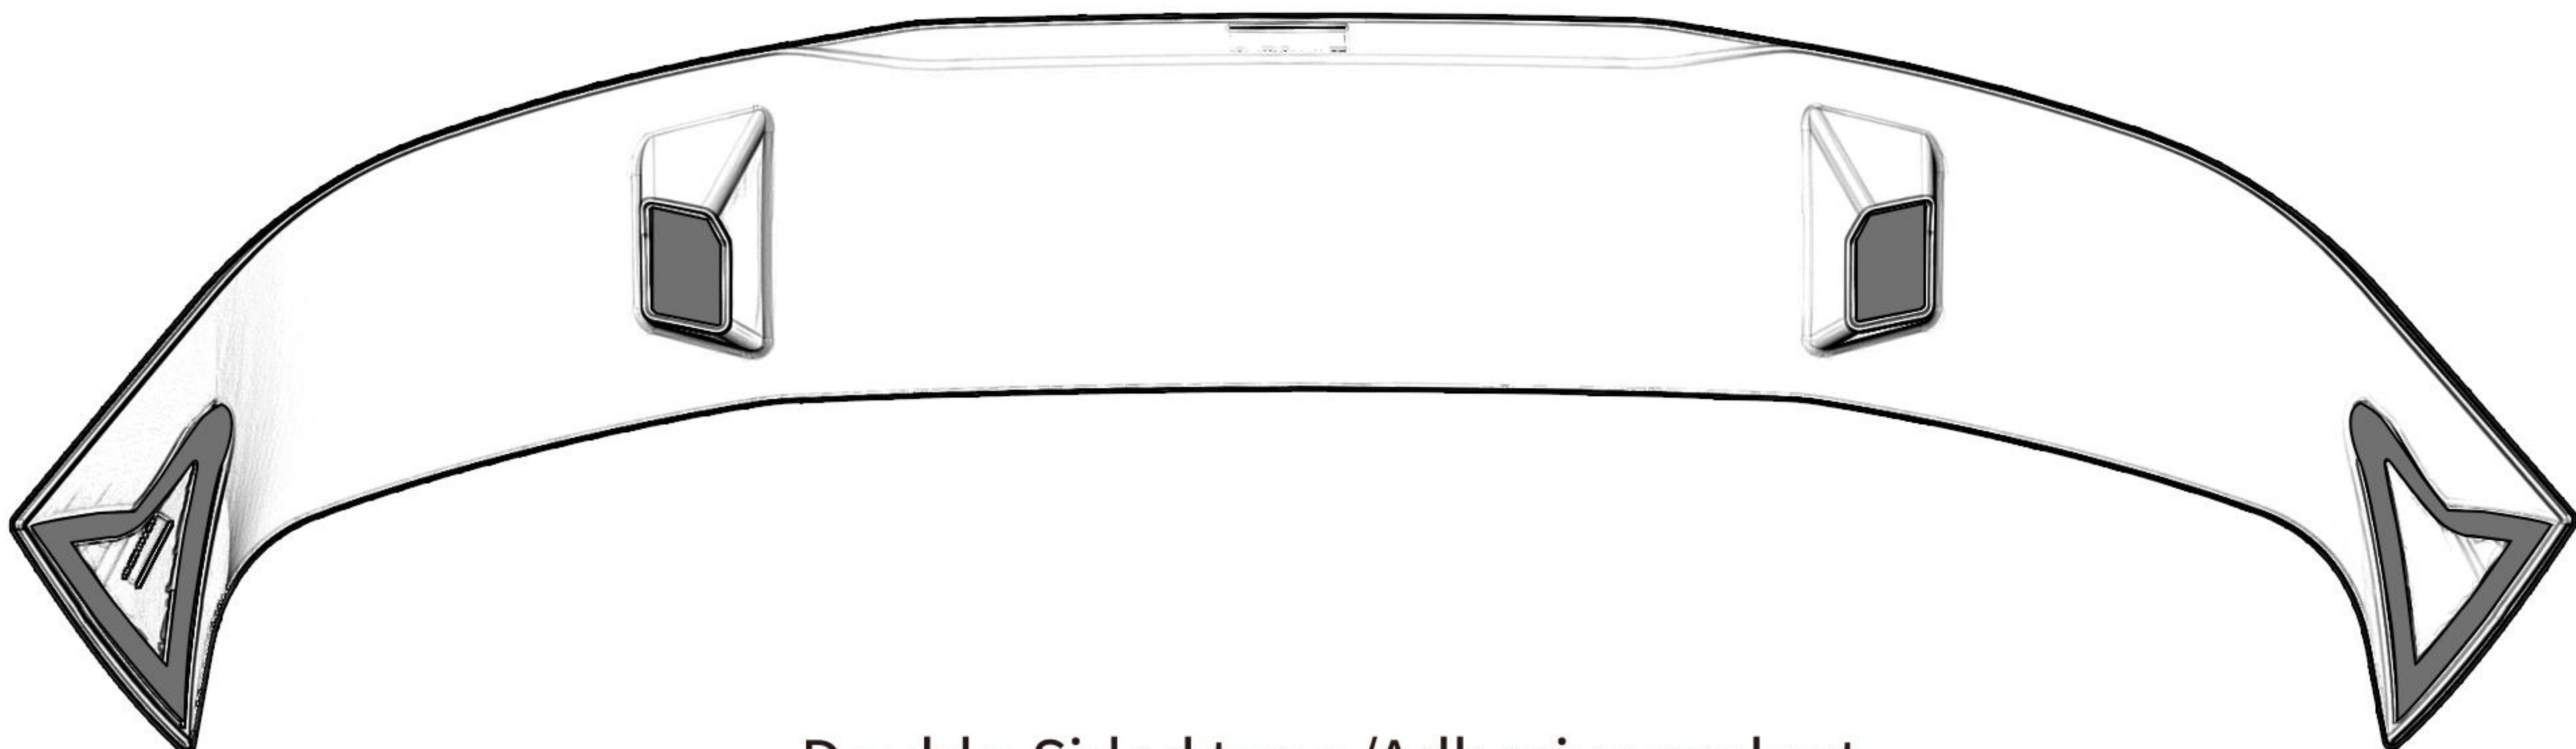

Double-Sided tape /Adhesive sealant  
双面胶带/玻璃胶