


Installation Manual

CARBON FIBER SIDE SKIRTS

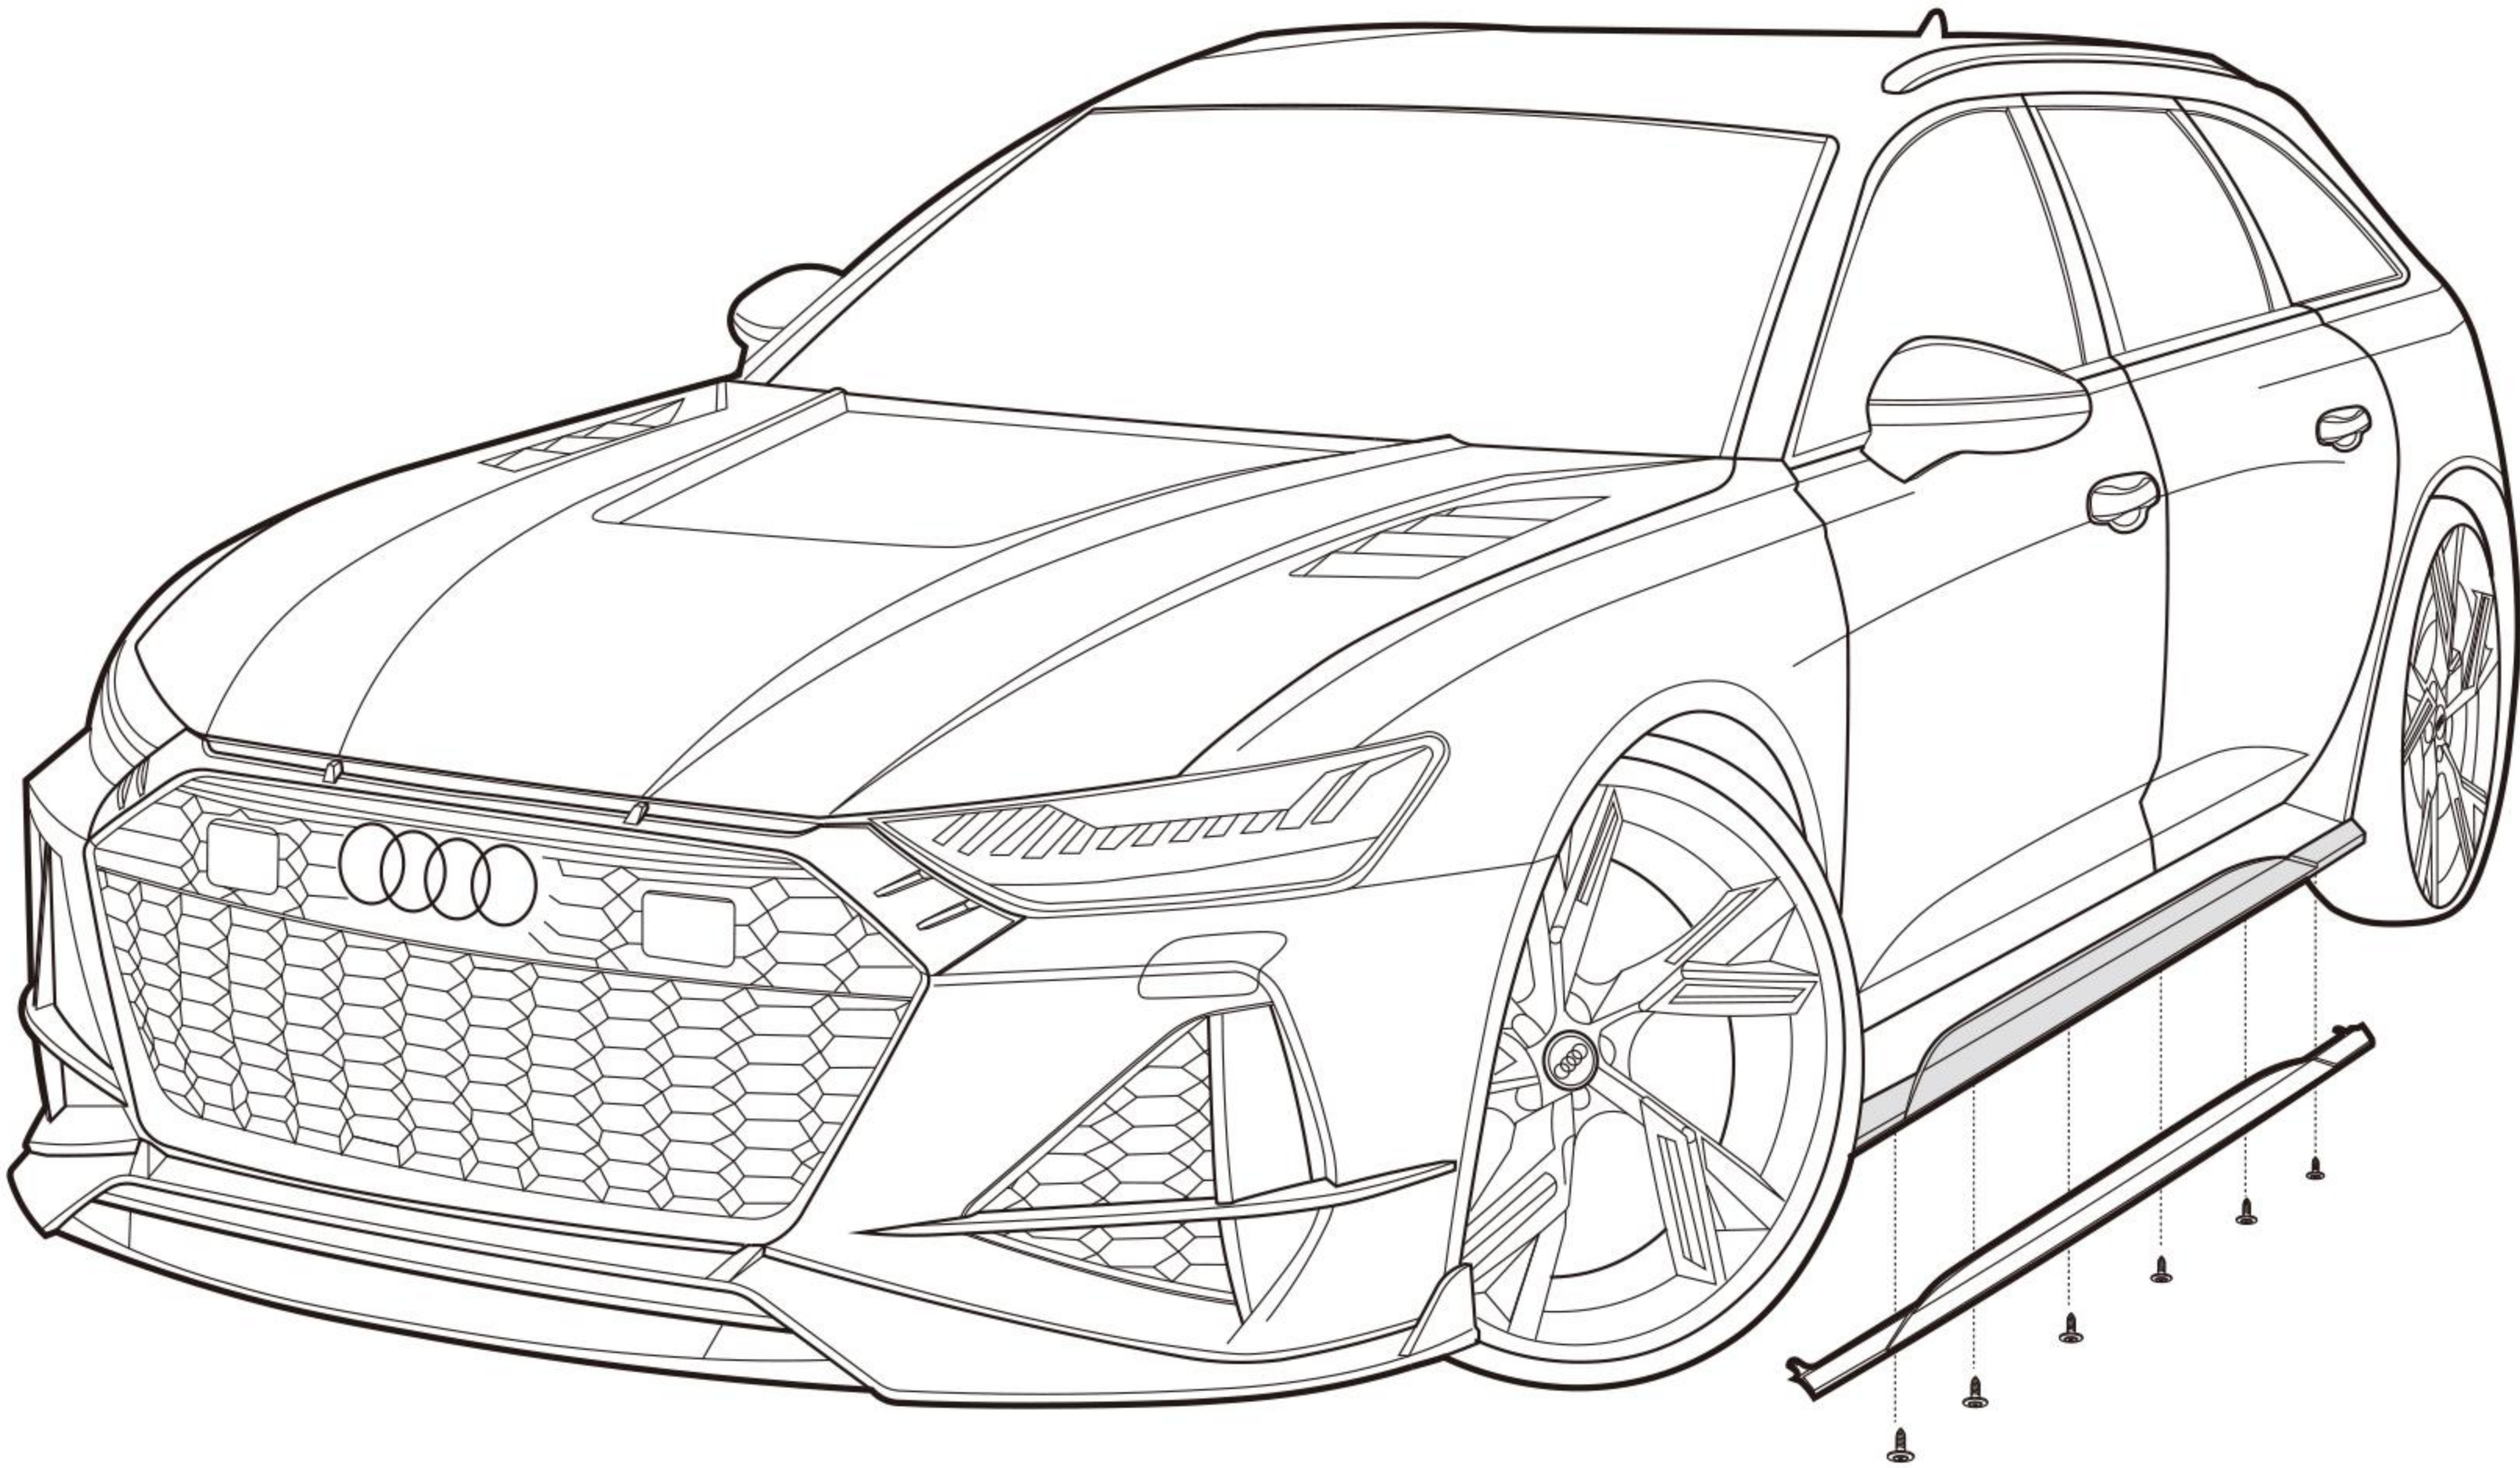


Side

Carbon Fiber Side Skirts

- ① Remove Genuine Bolts according to the designated Install point.
- ② After applying primer on the car body, remove the film of the double-sided tape slightly outward. Once fitting is adjusted perfectly completely remove double-sided tape.
- ③ Set the Genuine bolts and Screw with the power tool according to the designated Install points.

All Components

x2 Carbon Fiber Side Skirts (LH, RH)

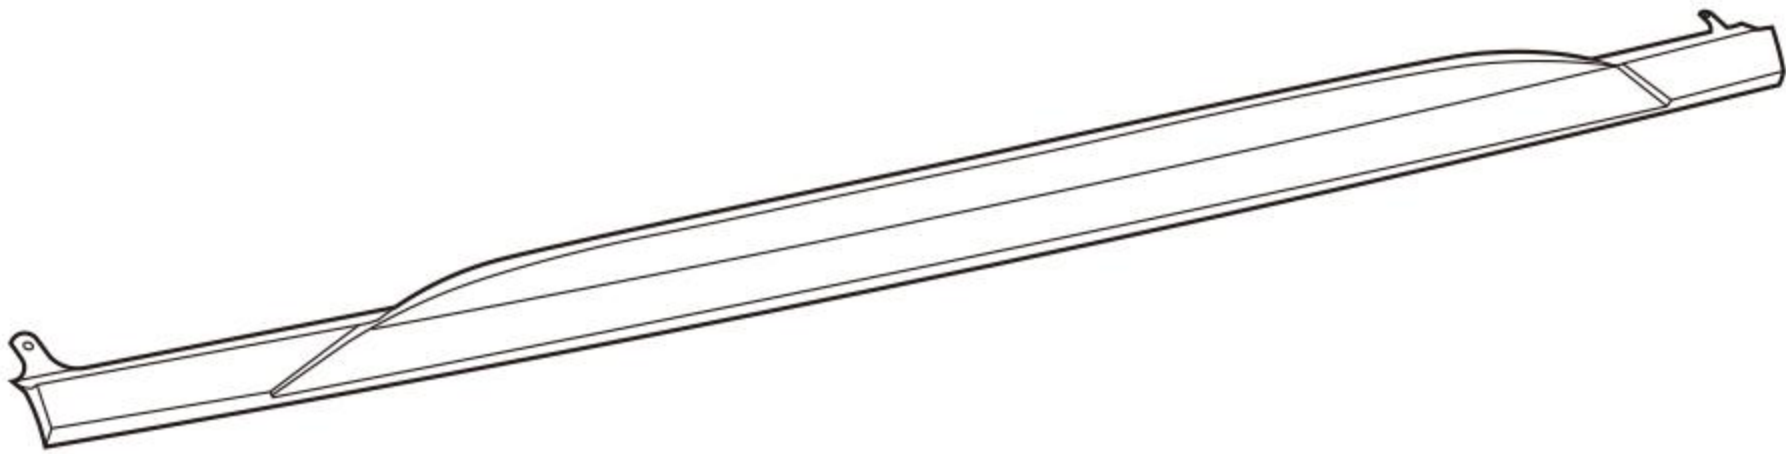

Install Points

