


Audi Rs 3Sedan(22-24)



Installation Manual

CARBON FIBER SIDE SKIRTS

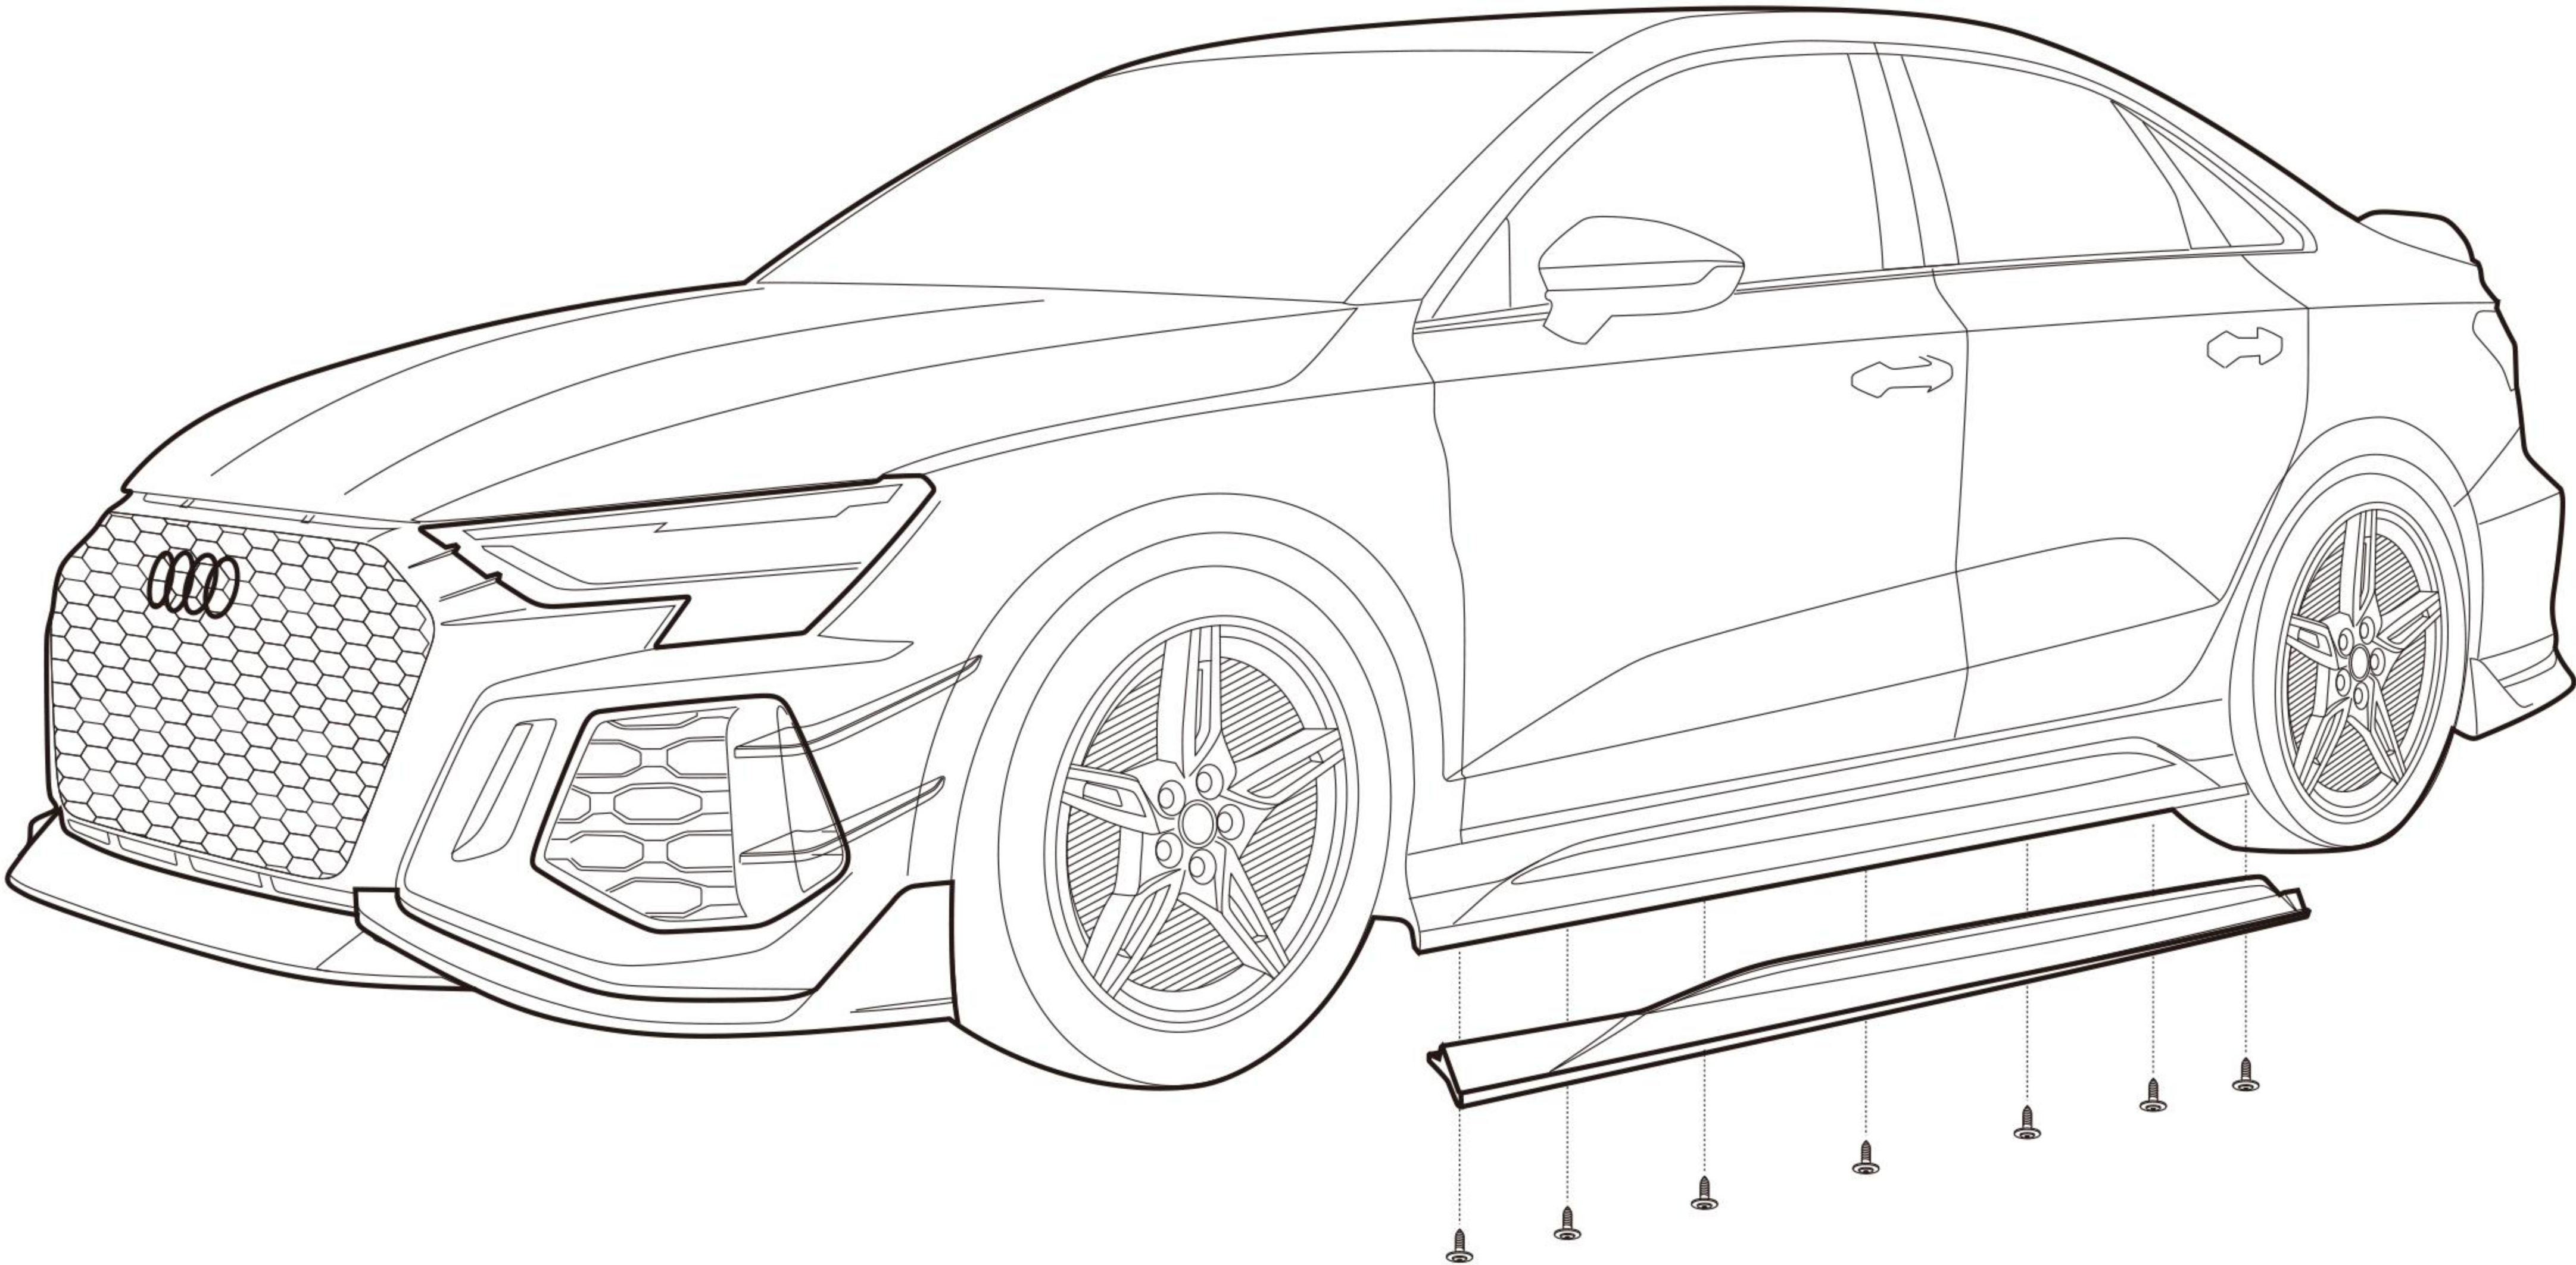


Side

Carbon Fiber Side Skirts

- ① Remove Genuine Bolts according to the designated Install point.
- ② After applying primer on the car body, remove the film of the double-sided tape slightly outward. Once fitting is adjusted perfectly completely remove double-sided tape.
- ③ Set the Genuine bolts and Screw with the power tool according to the designated Install points.

All Components

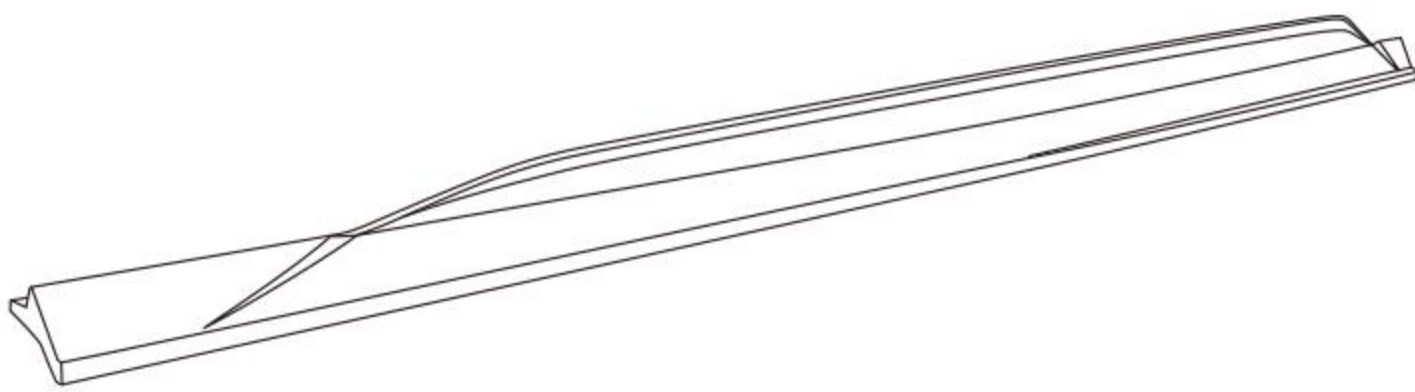

Carbon Fiber Side Skirts (LH, RH)

x2



x14

Self-Tapping screw

M5X16



x2

Double-Sided tape

3M™ VHB 4910 (10mm)

Install Points

- *3M Double-Sided tape installation method**
- ① Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact.
 - ② Use the included primer to paint the body (surface primer will scratch the paint).
 - ③ Tear off the 3M Double-Sided tape protective film and stick it on the car.
 - ④ Install the fixing screws at the bottom.

