


Installation Manual 安装手册

CARBON FIBER SIDE SKIRTS

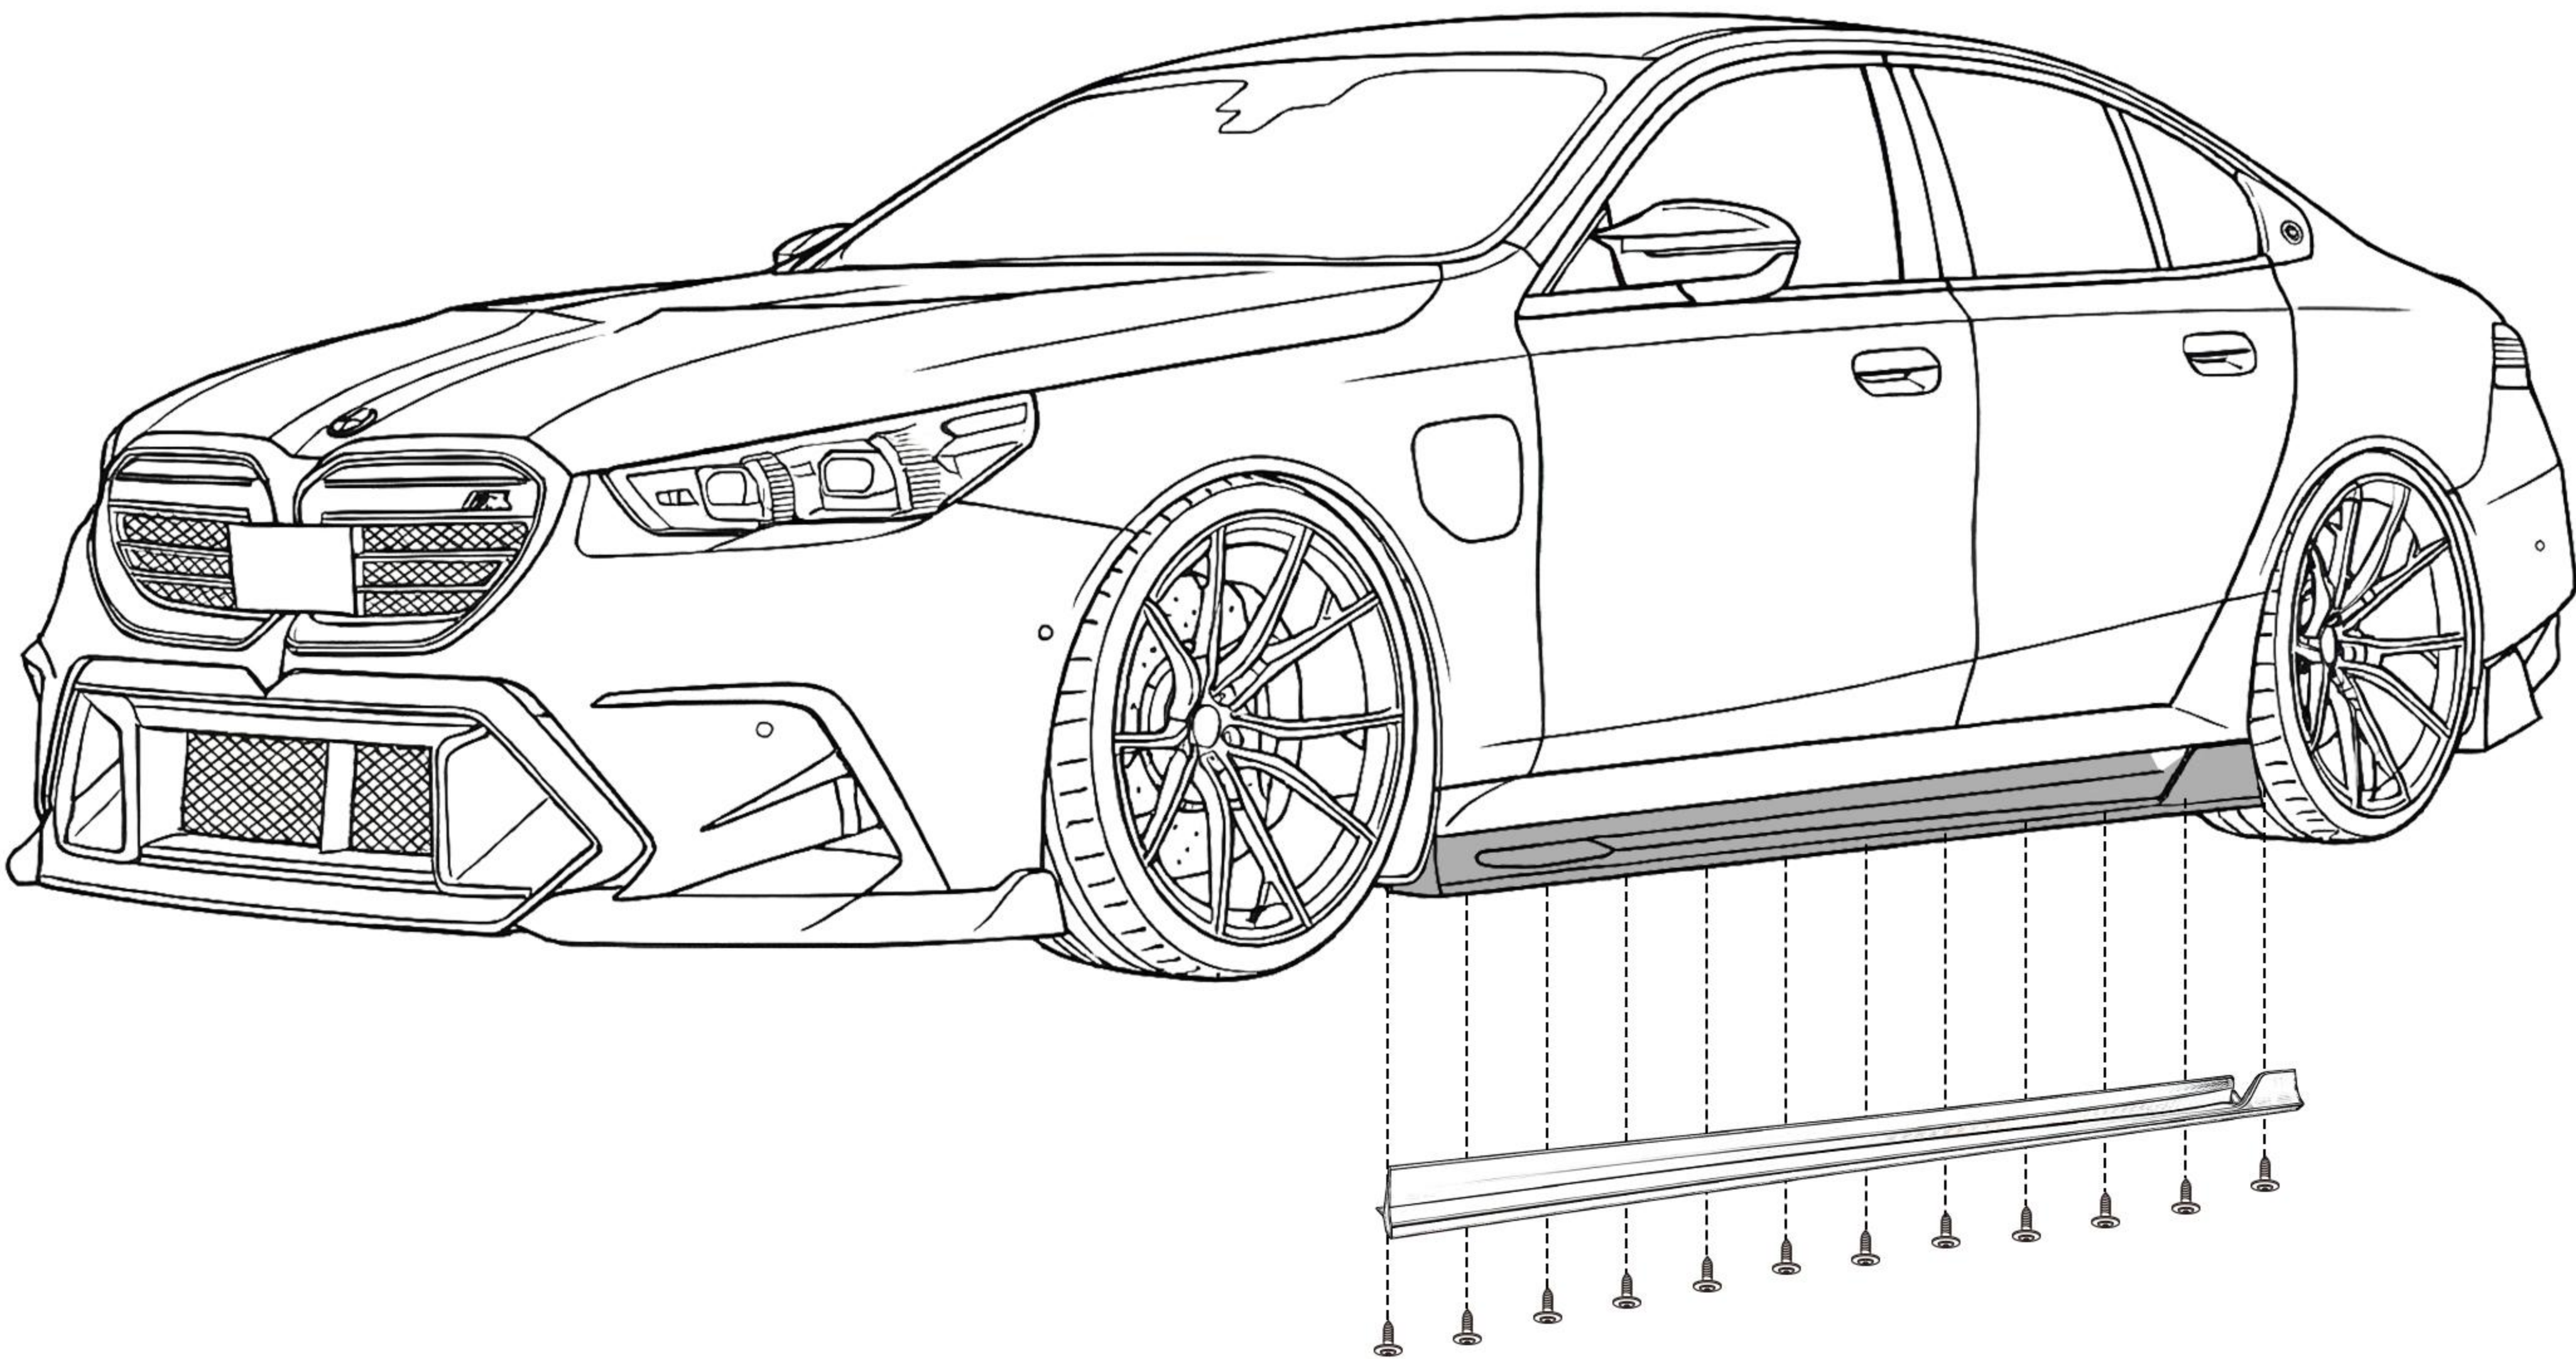

Front 前部

Carbon Fiber Side Skirts 碳纤维侧裙

- ① Remove Genuine Bolts left and right symmetry.

② After determining the most suitable fitting position for left and right symmetry, use a Genuine bolts to temporarily fasten it in place.

③ Set all components with the power tool according to the designated Install points.
- ① 拆下位于左右安装点的原始螺栓。

② 设置左右对称的最合适的安装位置后,使用螺栓进行点焊。

③ 根据指定的安装点,使用电动工具紧固螺栓、螺母和专用件。

All Components 所有组件

x2 Carbon Fiber Side Skirts
碳纤维侧裙






x24
Original car screw
原车螺丝
M6X16



D-S tape/A-sealant
双面胶带/玻璃胶
3M™ VHB 4910 (10mm)

Install Points 安装点

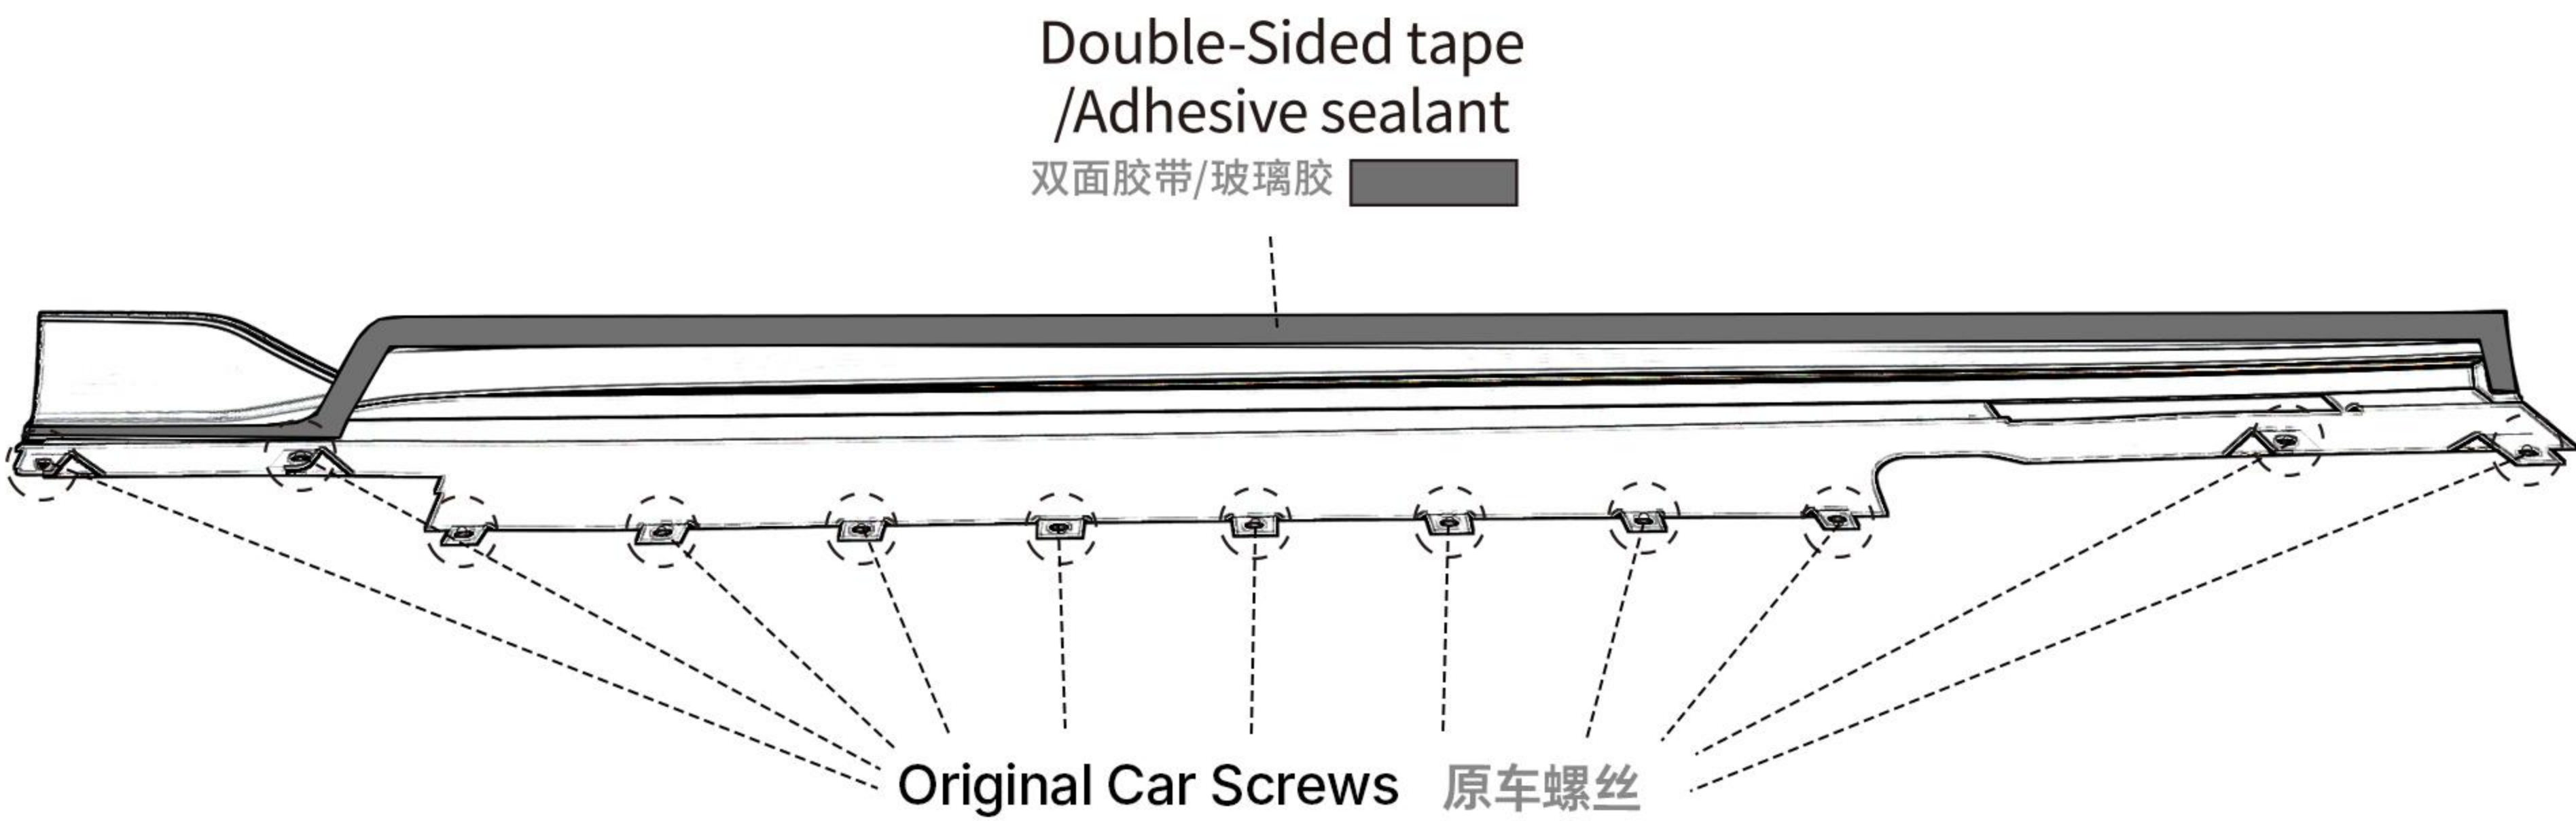

The upper edge is secured using clips that lock into the mounting points. 边缘用卡扣与安装位卡紧