


Installation Manual 安装手册

CARBON FIBER SIDE SKIRTS

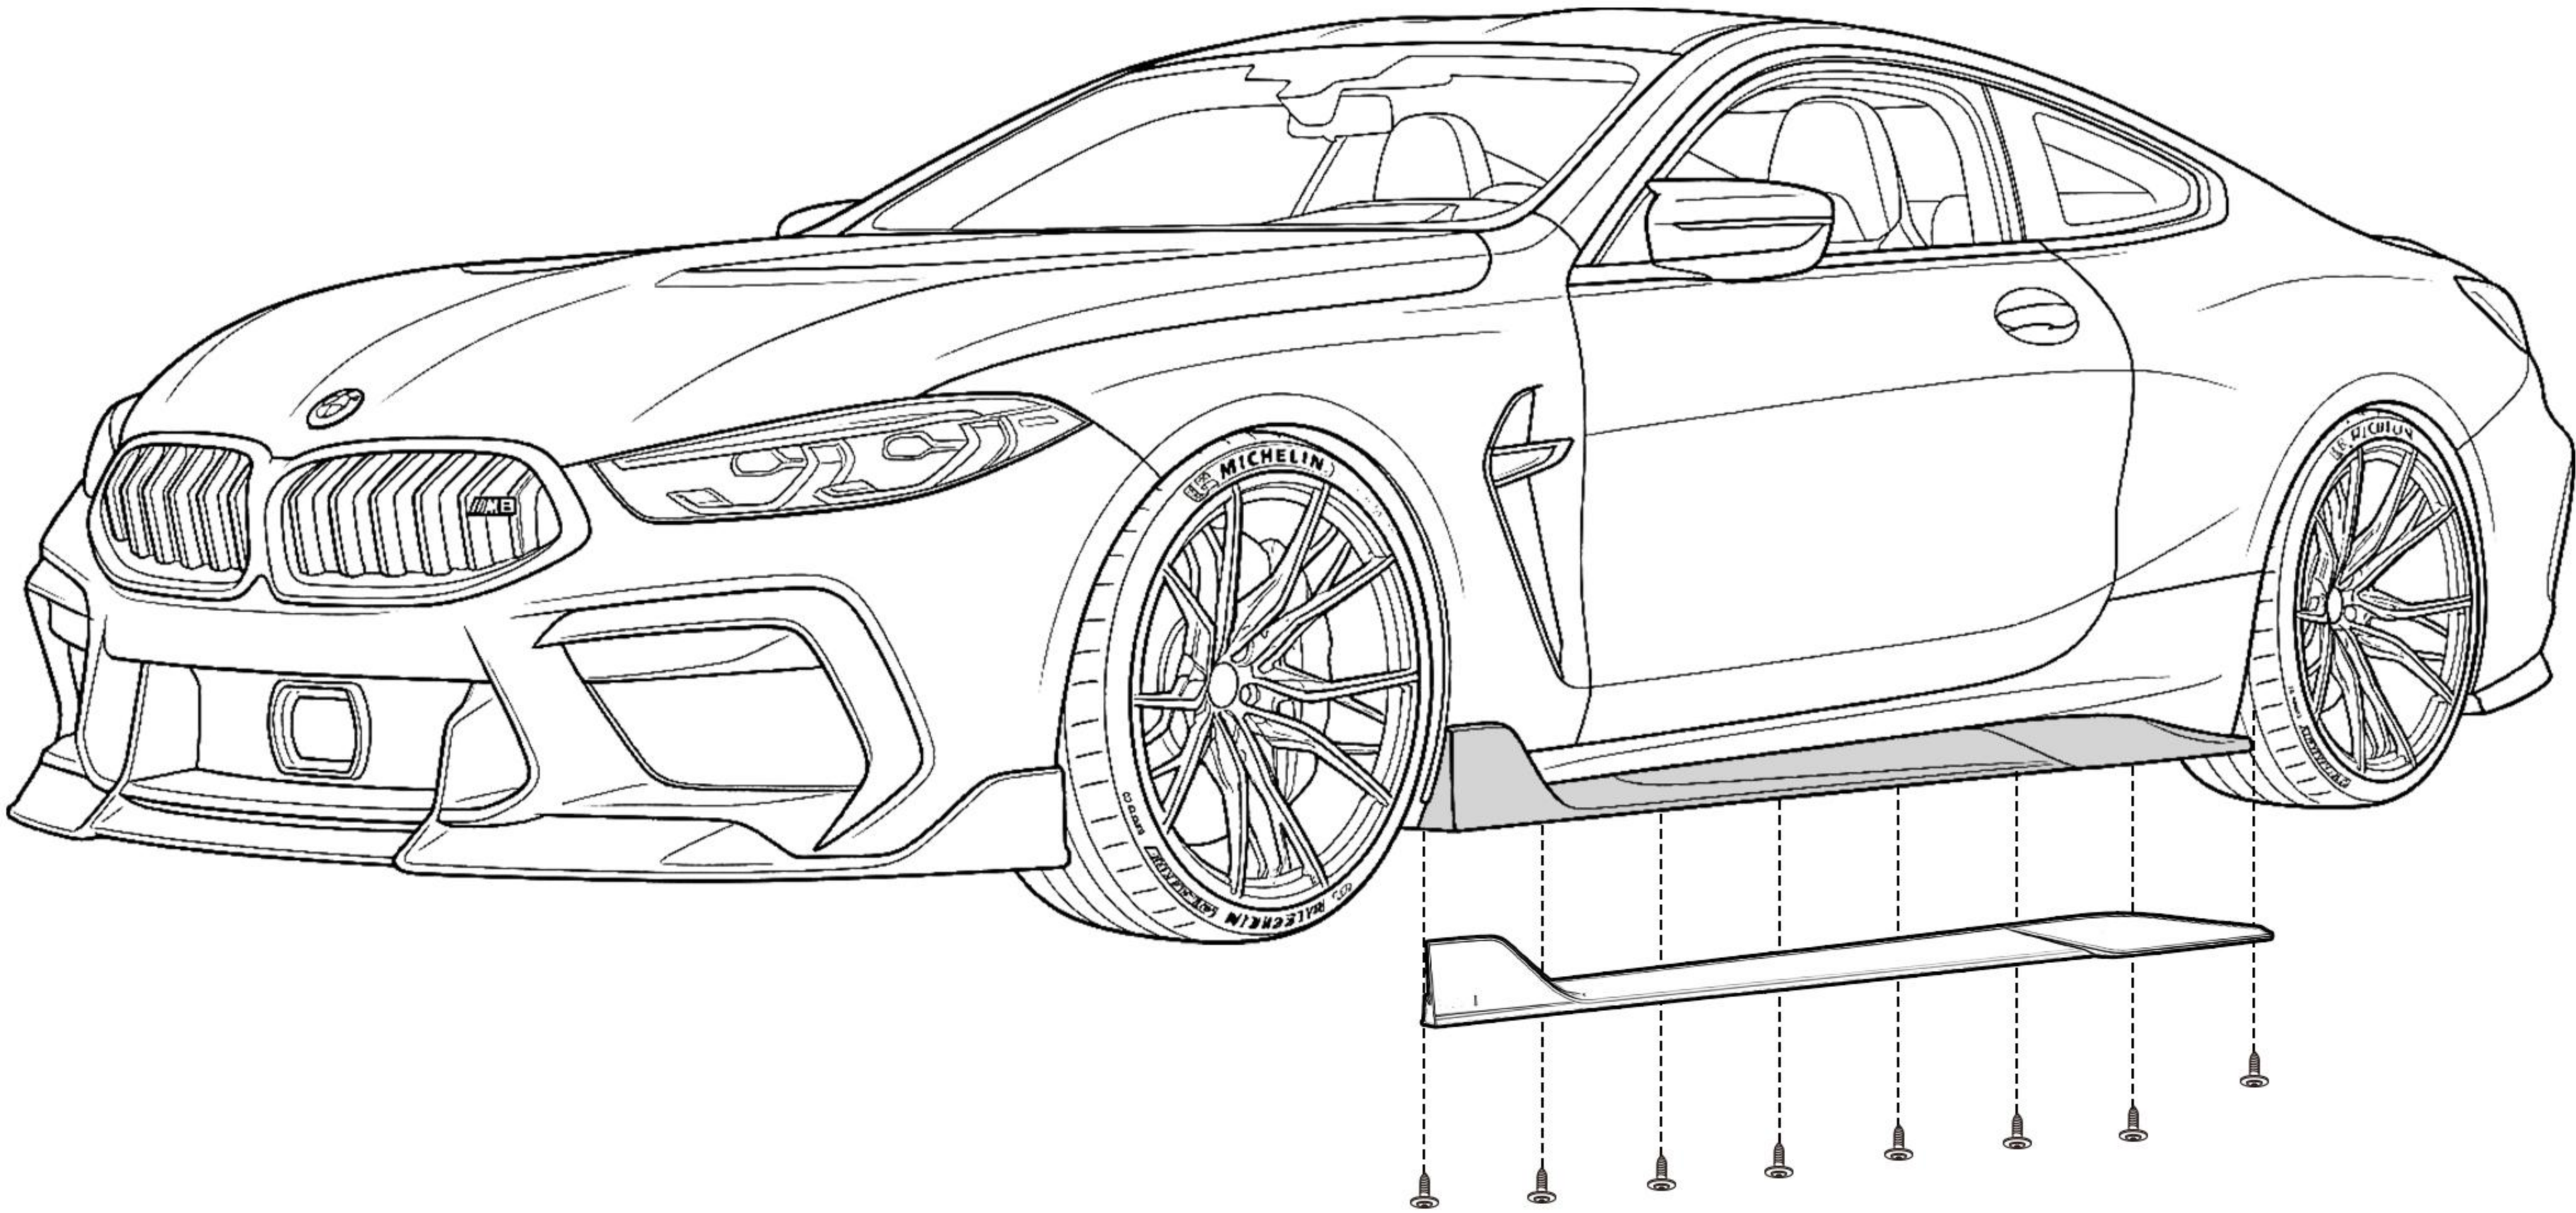

Side 侧部


Carbon Fiber Side Skirts 碳纤维侧裙

- ① Remove the original side skirts.
- ② Install the carbon fiber side skirts directly to the car.
(the same as the original side skirts)
- ③ The bottom is fixed with original screws and plastic buckles.

- ① 拆下原车侧裙。
- ② 将碳纤侧裙直接安装到车上（和原厂侧裙安装方式一样）。
- ③ 底部用回原车螺丝和塑料扣固定。

All Components 所有组件

x2 Carbon Fiber Side Skirts
碳纤维侧裙

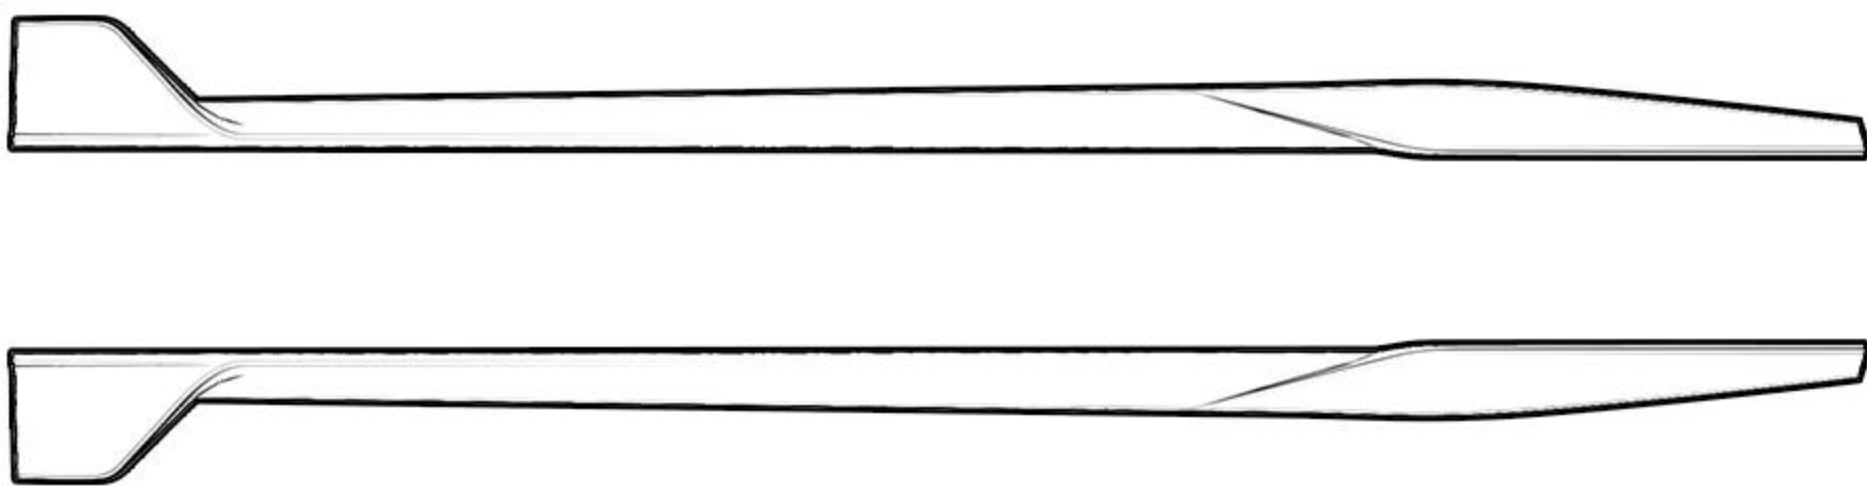



x16
Original car screw
原车螺丝
M6X16



D-S tape/A-sealant
双面胶带/玻璃胶
3M™ VHB 4910 (10mm)

Install Points 安装点

*3M Double-Sided tape installation method

- ① Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact.
- ② Use the included primer to paint the body (surface primer will scratch the paint).
- ③ Tear off the 3M Double-Sided tape protective film and stick it on the car.
- ④ Install the fixing screws at the bottom.

*3M双面胶安装方式

- ① 使用酒精/丙酮清洁3M双面胶接触的车身面。
- ② 使用随附的底漆对车身进行涂漆（表面底漆会刮伤车漆）。
- ③ 撕开3M双面胶保护膜粘贴在车上。
- ④ 底部安装固定螺丝。

