BMW X5M(23-24)

REVOZPORT
REVOLUTIONIZING CARBON AERO

Installation Manual

Carbon Fiber Air Intake

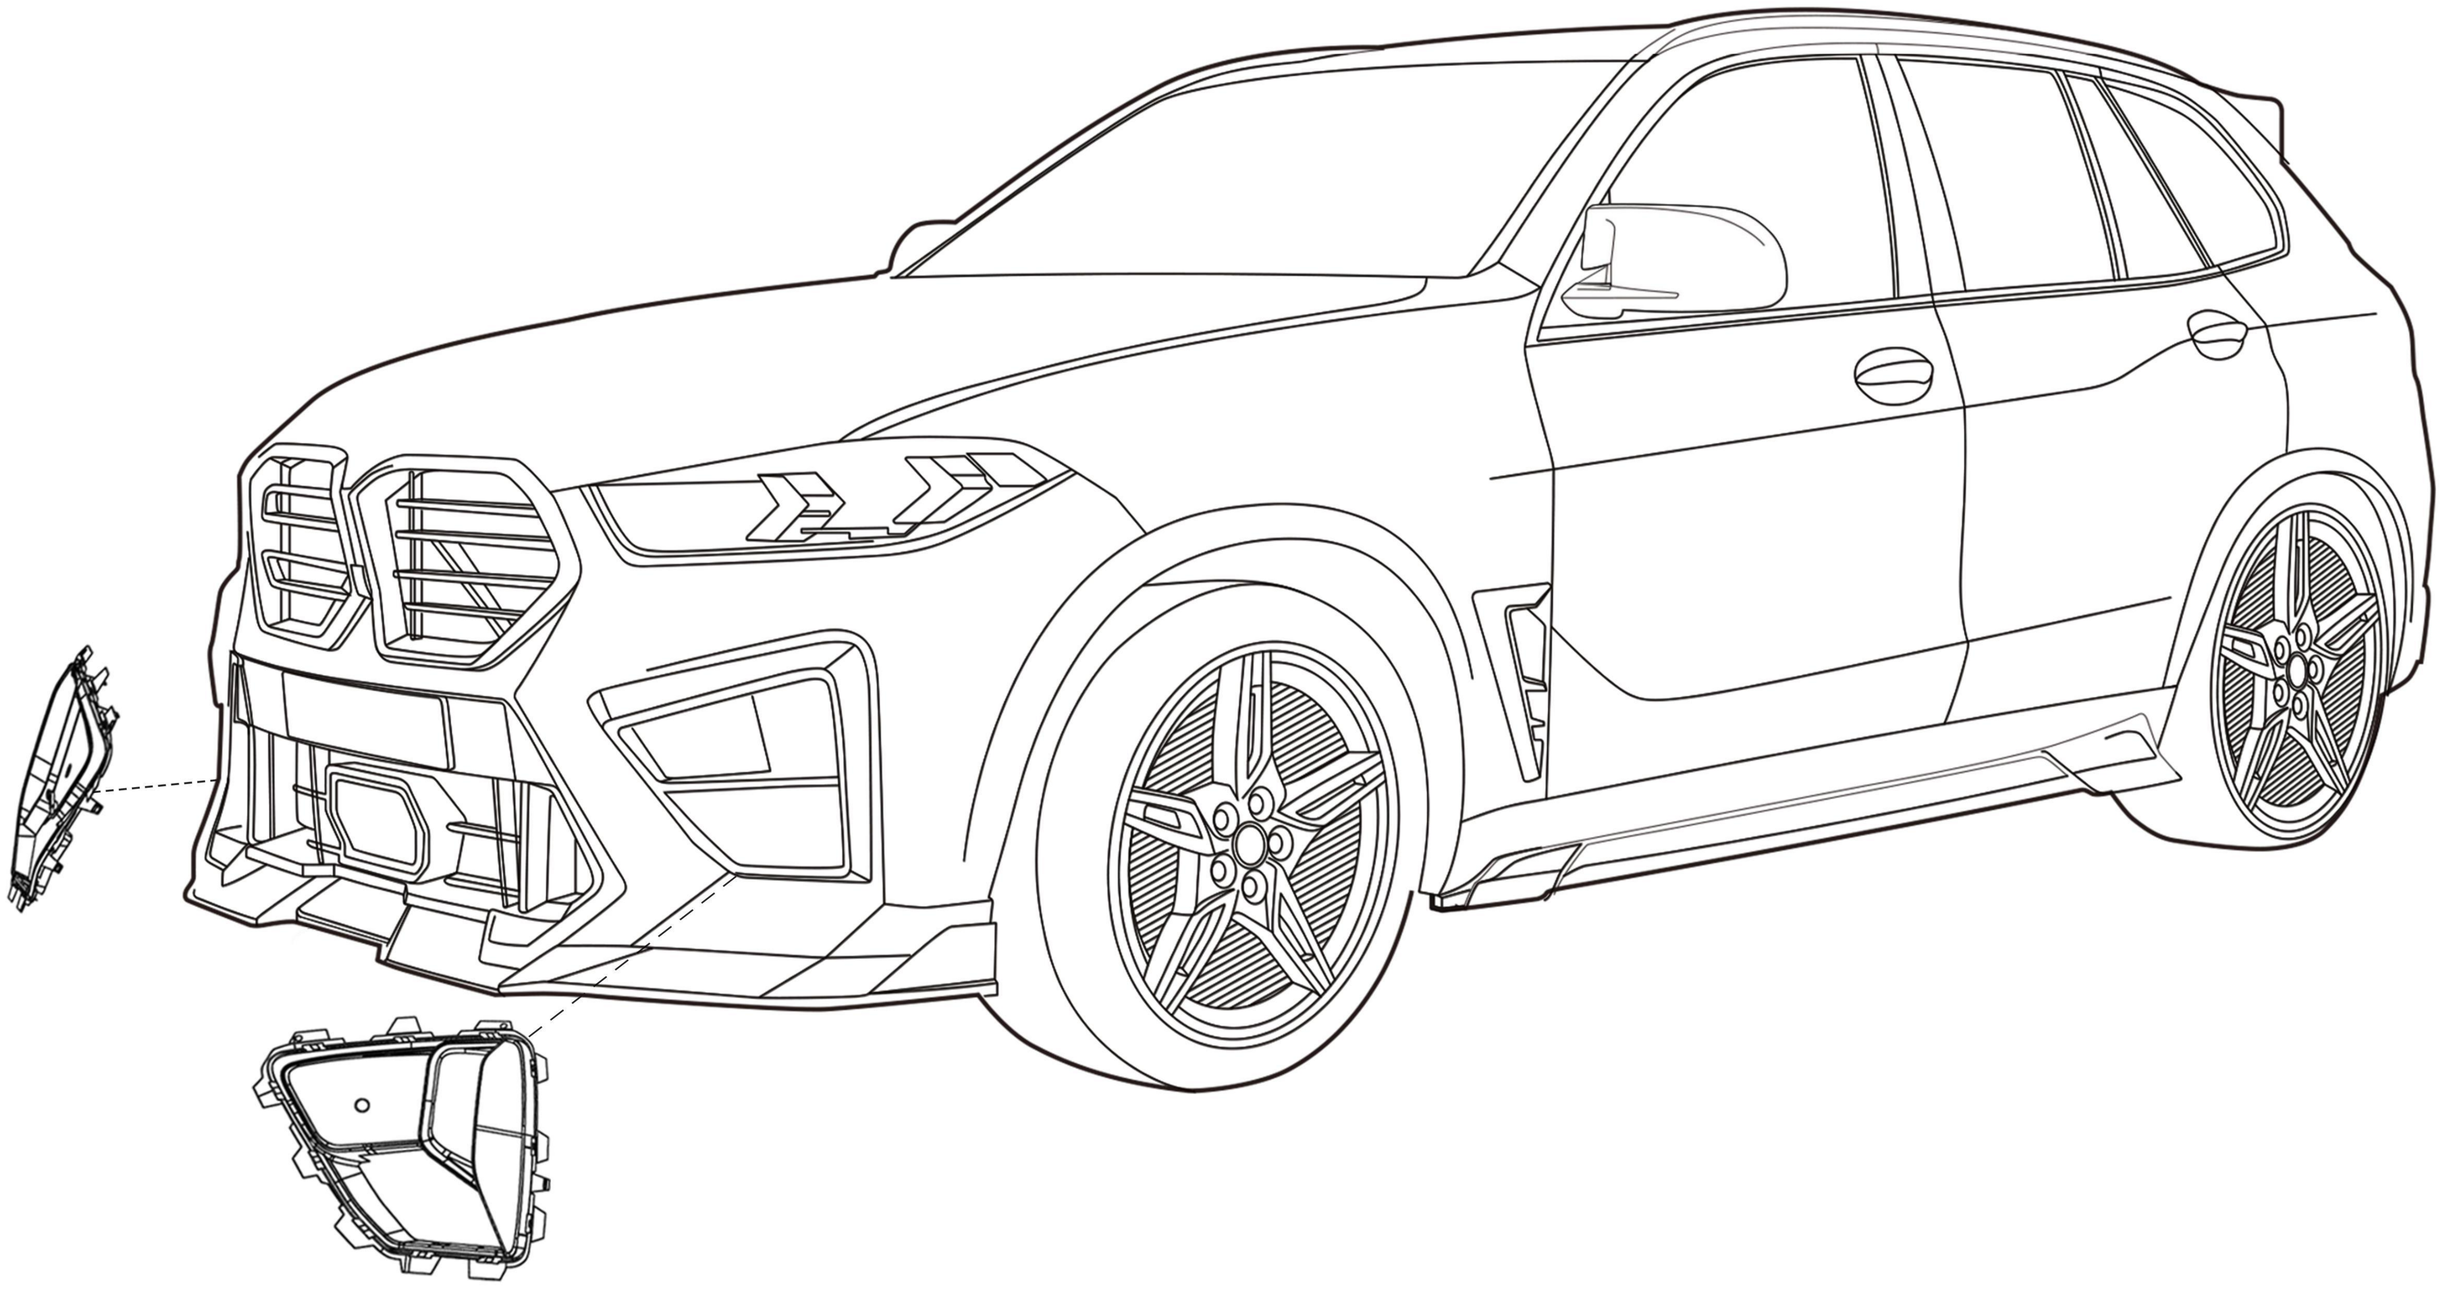

Front

Carbon Fiber Air Intake

① After applying primer on the car body, remove the film of the double-sided tape slightly outwar (Or apply Adhesive sealant) . Once fitting is adjusted perfectly completely remove double-sided tape.

All Components

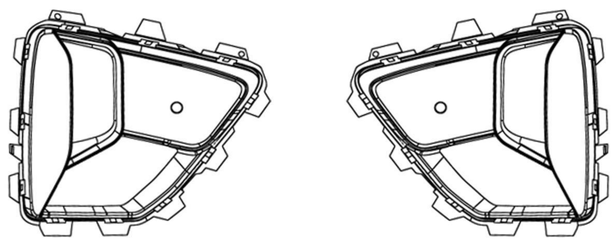

Carbon Fiber Air Intake

x2